


#### INSTALLATION INSTRUCTIONS

SEP. 2012

CROSSBARS	CR-V

#### **GENERAL VIEW**

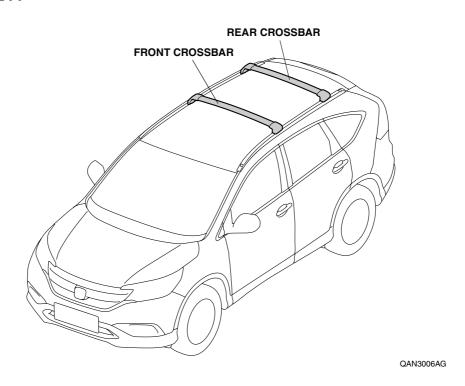

# FOR YOUR SAFETY (Read carefully)

# Introduction of Symbol Messages

• These symbols warn you about the possible hazards and explain how to avoid them. And give you some advices.

**▲** DANGER You will be killed or seriously hurt if you do not follow the instructions. **A WARNING** You can be killed or seriously hurt if you do not follow the instructions. **A** CAUTION You can be hurt if you do not follow the instructions. Gives advice to prevent damage to the product. **NOTICE** Gives helpful information or instructions to be followed in using the product.



Indicates prohibited actions.

#### Introduction of Icons

• These icons indicate the working place and the worker's vision.



The place for the vehicle.



The place for the instrument panel.

These icons indicate the necessary things for your safety and the work.



Wear eye protection.



Wear heavy gloves.



Work with an assistant.



Place the part on a blanket.



Remove any burrs.



Use the touch-up paint and dry.



Keep the parts and give it to the customer. (Not use)



Press firmly.



Tighten by specified torque.



Work perpendicularly.



Clean with the contact cleaner.

## Safety: General


- Observe all safety notes and precautions described in the Shop Manual in addition to those described in this Installation Instruction. Be extremely careful for your safety and safety of others particularly.
- · Be careful not to damage the vehicle and the parts.

## Safety: For the Accessory

- Always use the parts and tools specified in the installation instructions.
- Do not perform installation work and attaching work at the place where gets the direct rays of the sun or the dust appears.
- Always install these accessories at the ambient air temperature 15°C (60°F) or above.
- Heat the accessories and bonding surfaces if the ambient air temperature is below 15°C (60°F).
- Attach the accessories by pressing it firmly with the palm of your hand. Be careful not to damage the accessories and the vehicle parts.
- Carefully place the double-sided adhesive tape on the proper position. Once the double-sided adhesive tape touches the surface, do not try to detach and relocate it. If you attempt to move after it touches the surface, you will damage the part before the adhesive will give way.
- Not to wash the vehicle for 24 hours to allow the adhesive to cure.

# PARTS LIST

#### Crossbars Kit

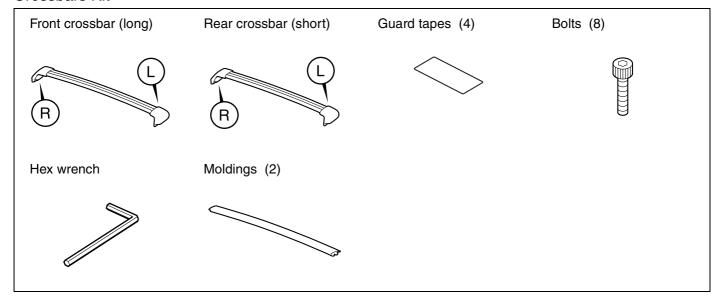

# **TOOLS AND SUPPLIES REQUIRED**

- Handy remover
- Hex bit
- Ruler

- · Contact cleaner
- Torque wrench
- Soap

- · Shop towel
- Utility knife

### **INSTALLATION**

#### How to Use the Contact Cleaner

 Using contact cleaner on a shop towel, thoroughly clean the areas where the accessories will be attached.

#### **NOTICE**

- Always use the contact cleaner.
- Do not apply the cleaner to the object of the work directly.
- Completely dry the cleaned areas before attachment work.




Q931901BW


## Installing the Crossbars

1. Remove the caps.




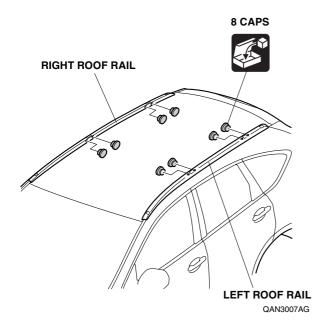


2. Attach the guard tapes.

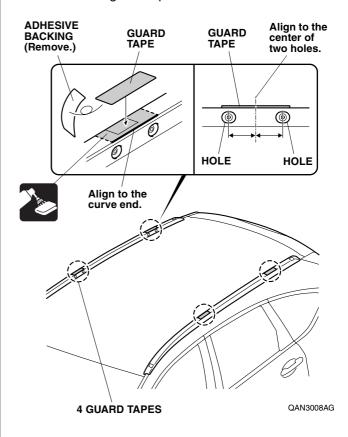


3. Position the front crossbar.

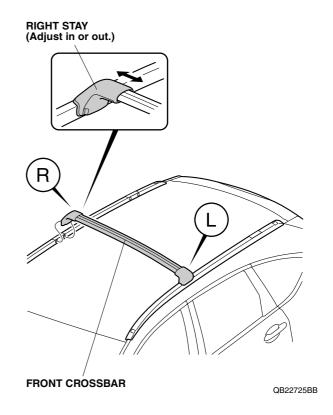


#### 4. Secure the front crossbar.

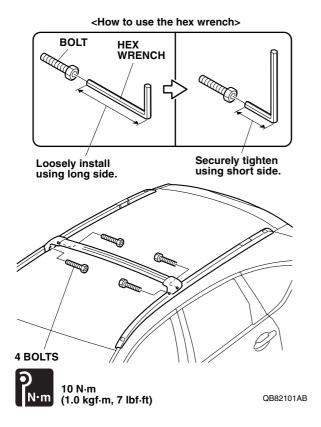

#### 5. Position the rear crossbar.

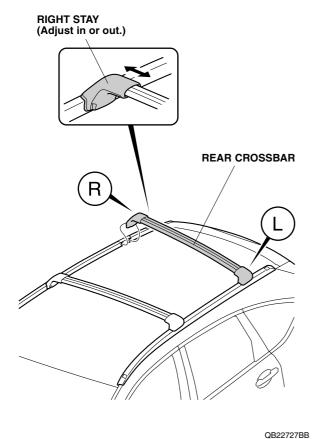

6. Secure the rear crossbar.

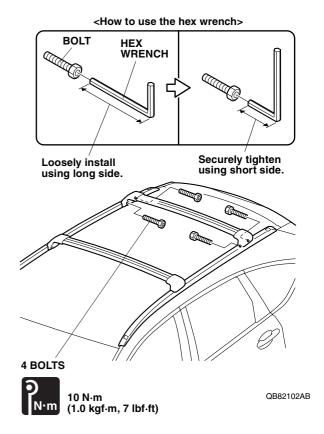


Without other attachment	
	To step 7
With other attachment	
	To step 9
With ski/snowboard attachment	
	To step 10

#### <Without other attachment>


7. Apply the soapy water.

#### **NOTICE**

• Do not use organic solvent (e.g. thinner, benzine, gasoline, etc.), acid or alkaline solution.

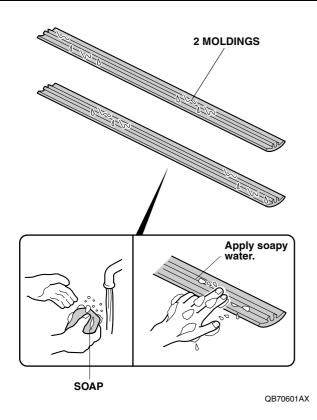

8. Install the moldings.

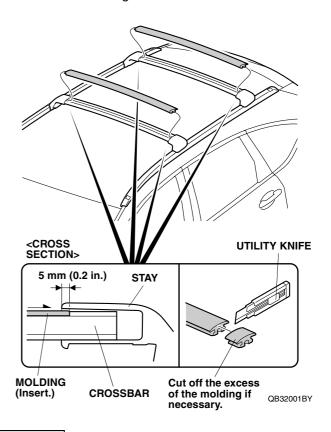


#### To step 15

<With other attachment>

9. Install the bolts.

#### **NOTICE**

• To install, refer to the installation instructions of the other attachment.

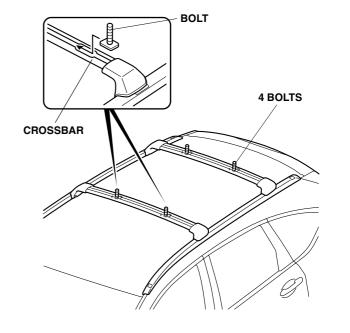

QB32002AY


To step 12

<With ski/snowboard attachment>

- 10. Adjust the screws.
- 11. Install the ski/snowboard attachment.

#### **NOTICE**


• To install, refer to the installation instructions of the ski/snowboard attachment.

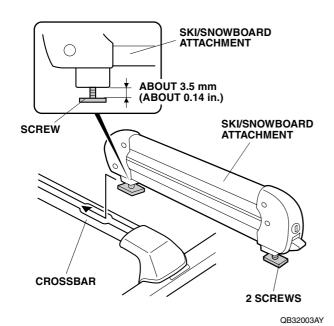

12. Apply the soapy water.


#### **NOTICE**

• Do not use organic solvent (e.g. thinner, benzine, gasoline, etc.), acid or alkaline solution.

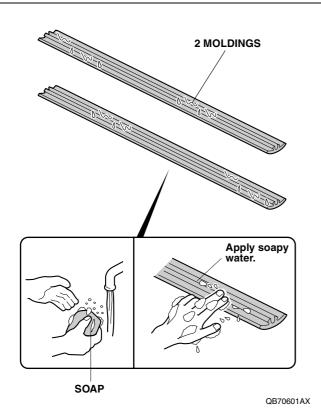


- 13. Cut the moldings.
- 14. Install the moldings.

#### Cut into three parts.

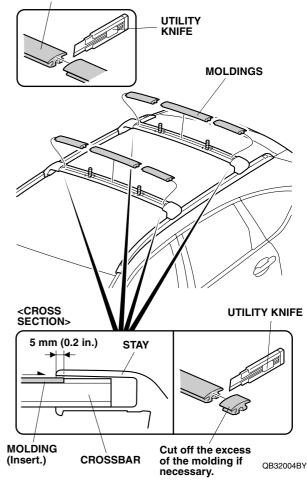

 Check that all parts are installed properly. (End of installation)

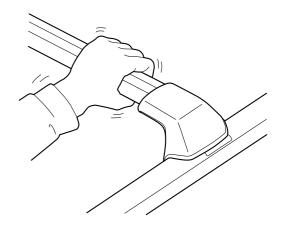

QB22729AB

# Please pass your customer the following things.

· Hex wrench

# Please give your customer a copy of this page.

## Use and Care

- Check the crossbar mounting bolts frequently, and re-tighten if necessary.
- Distribute the weight of the cargo evenly, and do not exceed the maximum weight capacity of 75 kg (165 lbs).