


SIDE PROTECTORS

CR-V

GENERAL VIEW

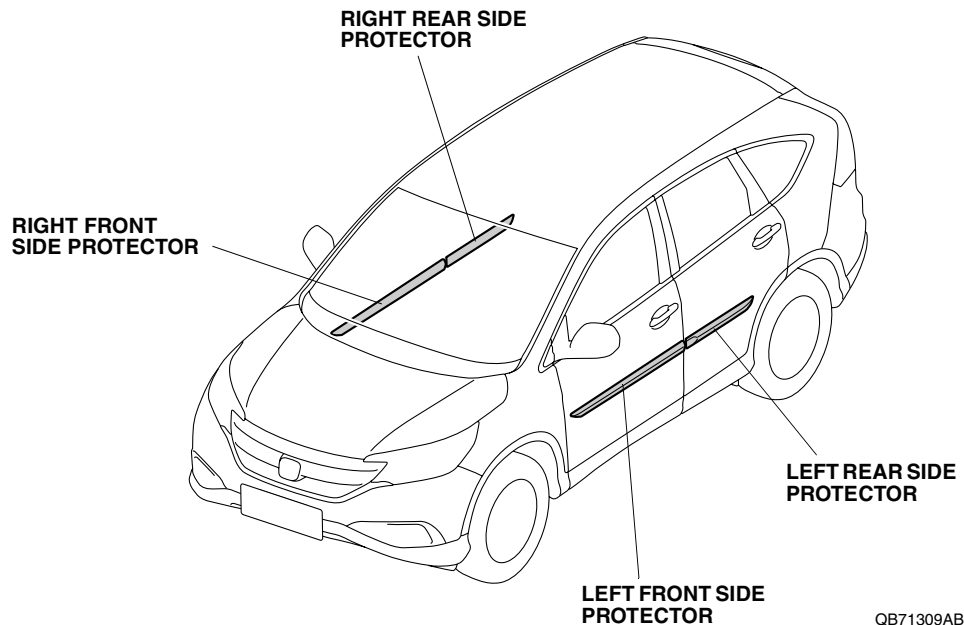

FOR YOUR SAFETY (Read carefully)

Introduction of Symbol Messages

- These symbols warn you about the possible hazards and explain how to avoid them. And give you some advices.

DANGER

You will be killed or seriously hurt if you do not follow the instructions.

WARNING

You can be killed or seriously hurt if you do not follow the instructions.

CAUTION

You can be hurt if you do not follow the instructions.

NOTICE


Gives advice to prevent damage to the product.
Gives helpful information or instructions to be followed in using the product.




Indicates prohibited actions.

Introduction of Icons

- These icons indicate the working place and the worker's vision.



The place for the vehicle.



The place for the instrument panel.

- These icons indicate the necessary things for your safety and the work.



Wear eye protection.



Wear heavy gloves.



Work with an assistant.



Place the part on a blanket.



Remove any burrs.



Use the touch-up paint and dry.



Keep the parts and give it to the customer.
(Not use)



Press firmly.



Tighten by specified torque.



Work perpendicularly.



Clean with the contact cleaner.

Safety: General





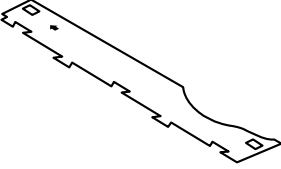
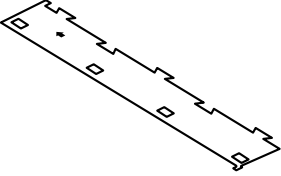



- Be careful not to damage the vehicle and the parts.

Safety: For the Accessory

- Do not perform installation work and attaching work at the place where gets the direct rays of the sun or the dust appears.
- Always install these accessories at the ambient air temperature 15°C (60°F) or above.
- Heat the accessories and bonding surfaces if the ambient air temperature is below 15°C (60°F).
- Attach the accessories by pressing it firmly with the palm of your hand. Be careful not to damage the accessories and the vehicle parts.
- Carefully place the double-sided adhesive tape on the proper position. Once the double-sided adhesive tape touches the surface, do not try to detach and relocate it. If you attempt to move after it touches the surface, you will damage the part before the adhesive will give way.
- Not to wash the vehicle for 24 hours to allow the adhesive to cure.

PARTS LIST

Side Protectors Kit

Left front side protector	Right front side protector	Left rear side protector	Right rear side protector
			
Template A	Template B	Template C	Template D
			
Cleaners (4)			
			


TOOLS AND SUPPLIES REQUIRED

- Masking tape


INSTALLATION

Installing the Side Protectors



1. Assemble the template A and template B.

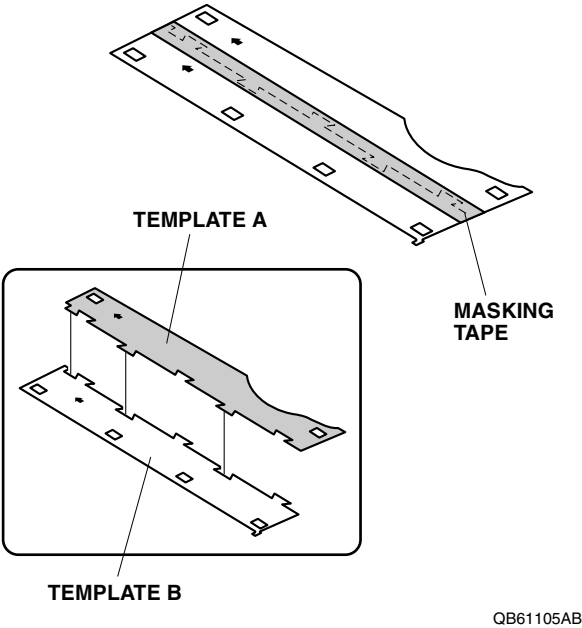


2. Assemble the template C and template D.

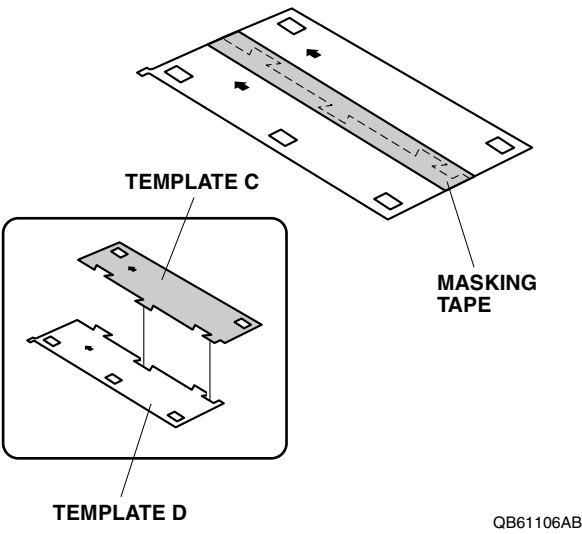


3. Attach the template A and B.

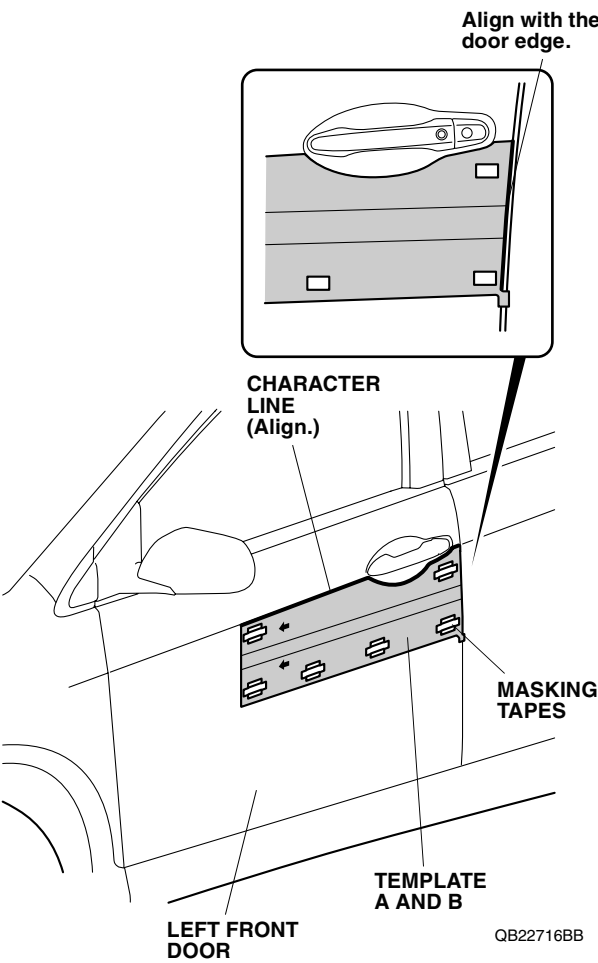

4. Clean the attaching area.

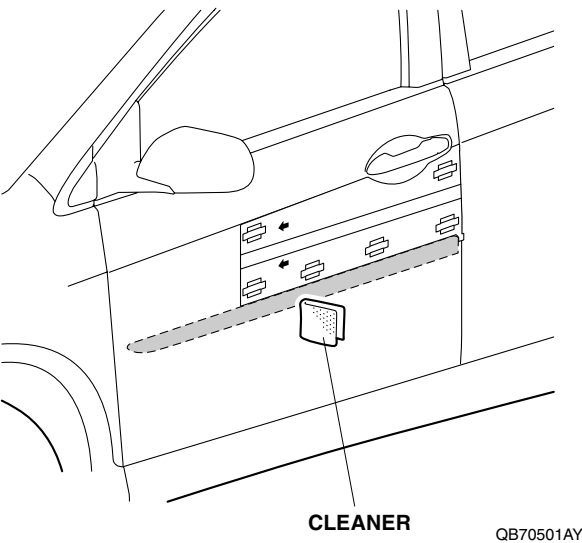


5. Temporarily attach the adhesive backings.
6. Remove the adhesive backings.

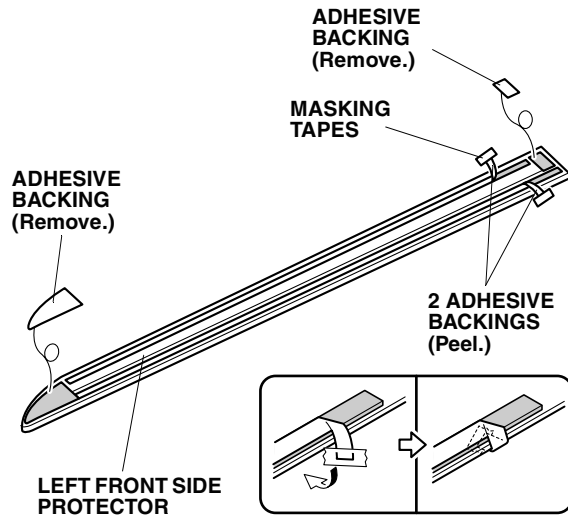


QB22717AB

7. Attach the left front side protector.

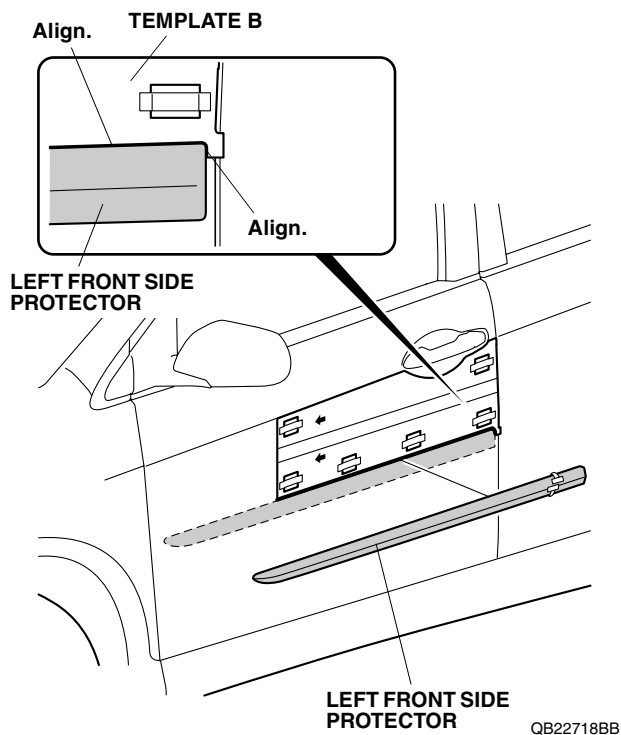


QB22718BB

8. Secure the left front side protector.
9. Remove the template A and B.

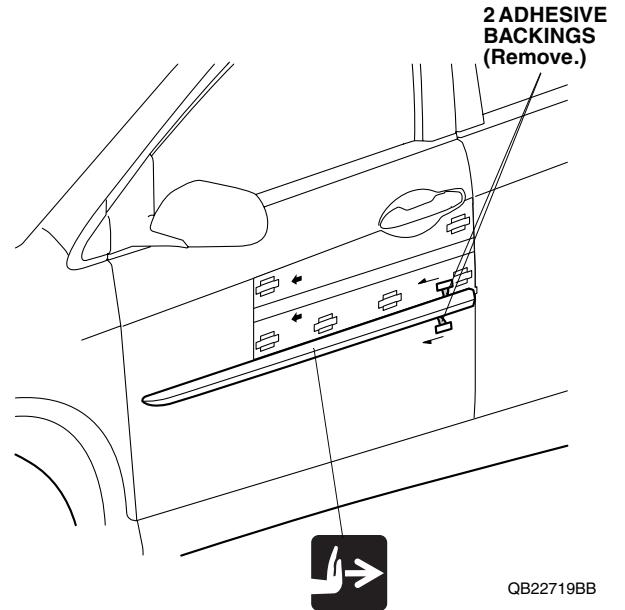


QB22719BB

10. Attach the template C and D.




Align with the door edge.

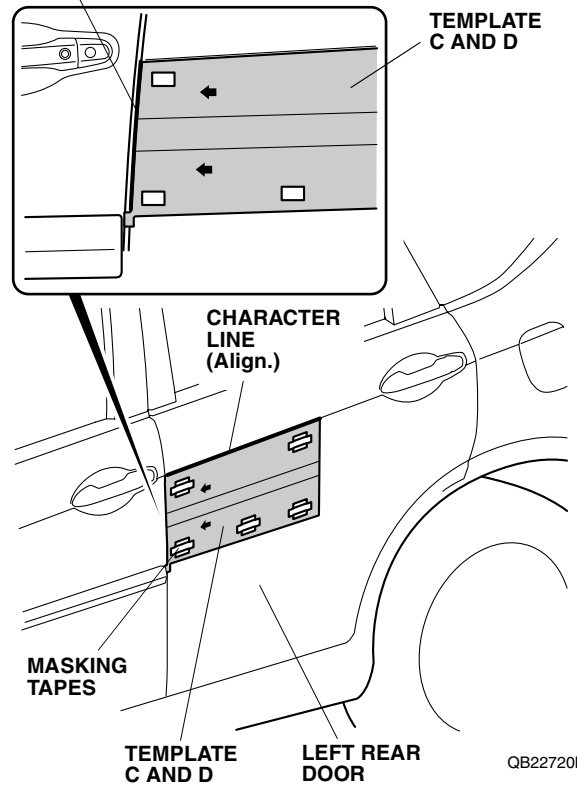


QB22720BB


11. Clean the attaching area.

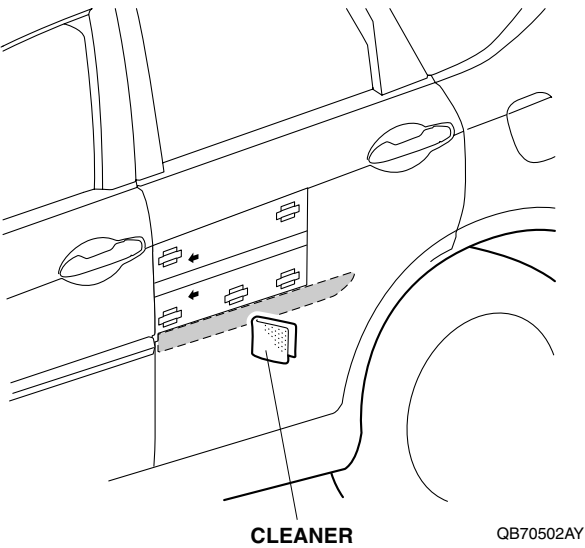


12. Temporarily attach the adhesive backings.
13. Remove the adhesive backings.

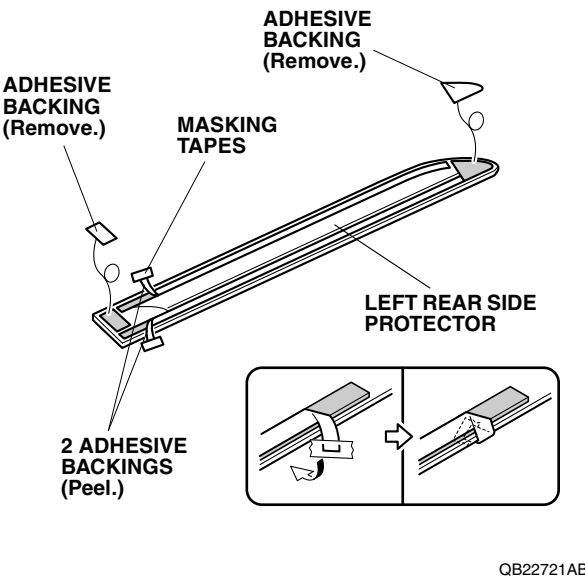


14. Attach the left rear side protector.

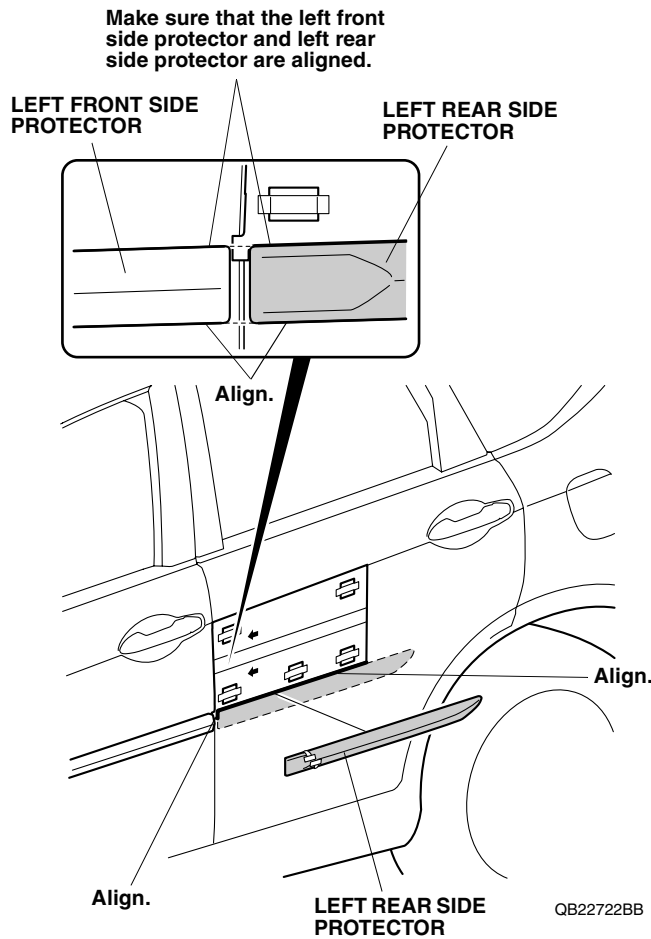

15. Secure the left rear side protector.
16. Remove the template C and D.

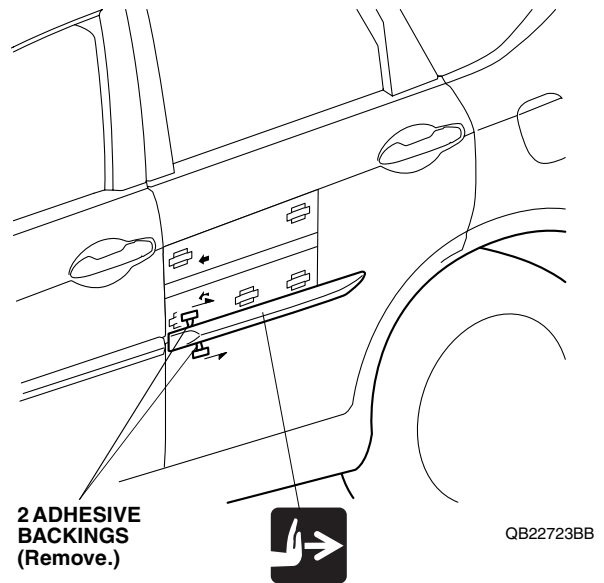

17. Flip the templates.
18. Repeat same procedures for the other side.

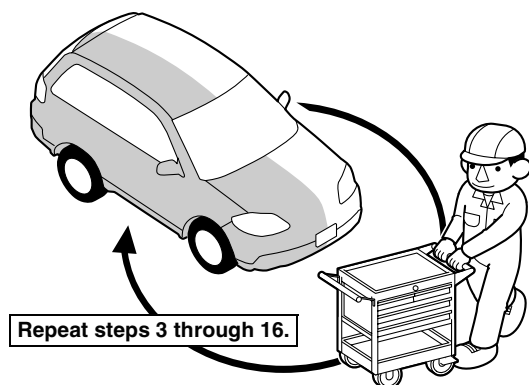

Q9D1012AE

19. Check that all parts are installed properly.
(End of installation)