


Parts List

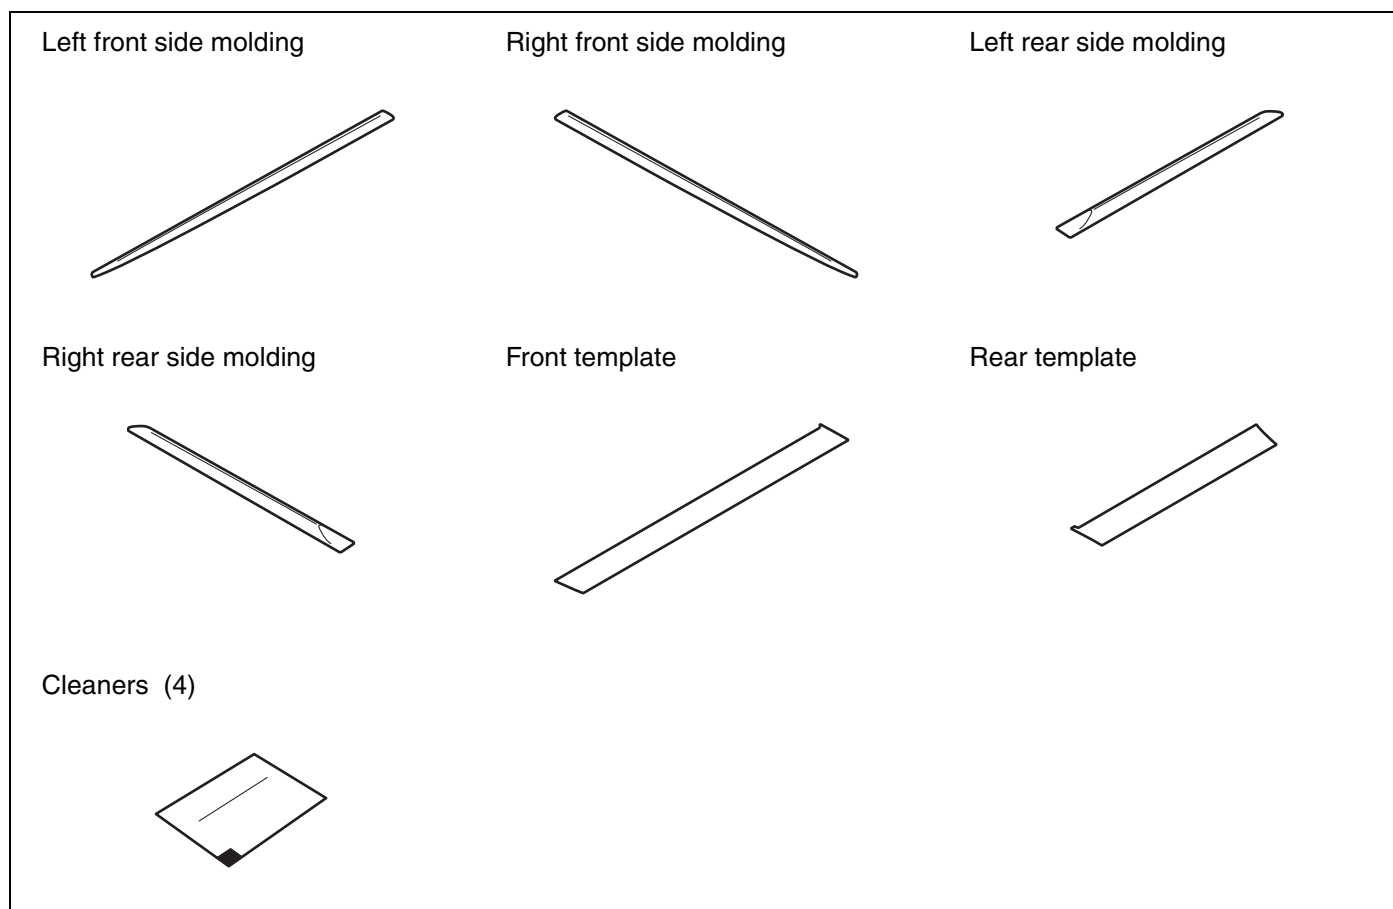

Tools and Supplies Required


- Masking tape
- Shop towel

Before You Begin

Customer Information

- Be careful not to damage the body paint finish.
- This side molding kit should be installed only if the ambient air temperature is above 15°C (60°F).
- To allow the adhesive to cure, do not wash the vehicle for 24 hours.
- These installation instructions show the left side molding being installed. The same procedure applies to installing the right side molding.


Illustration of the Components on the Vehicle

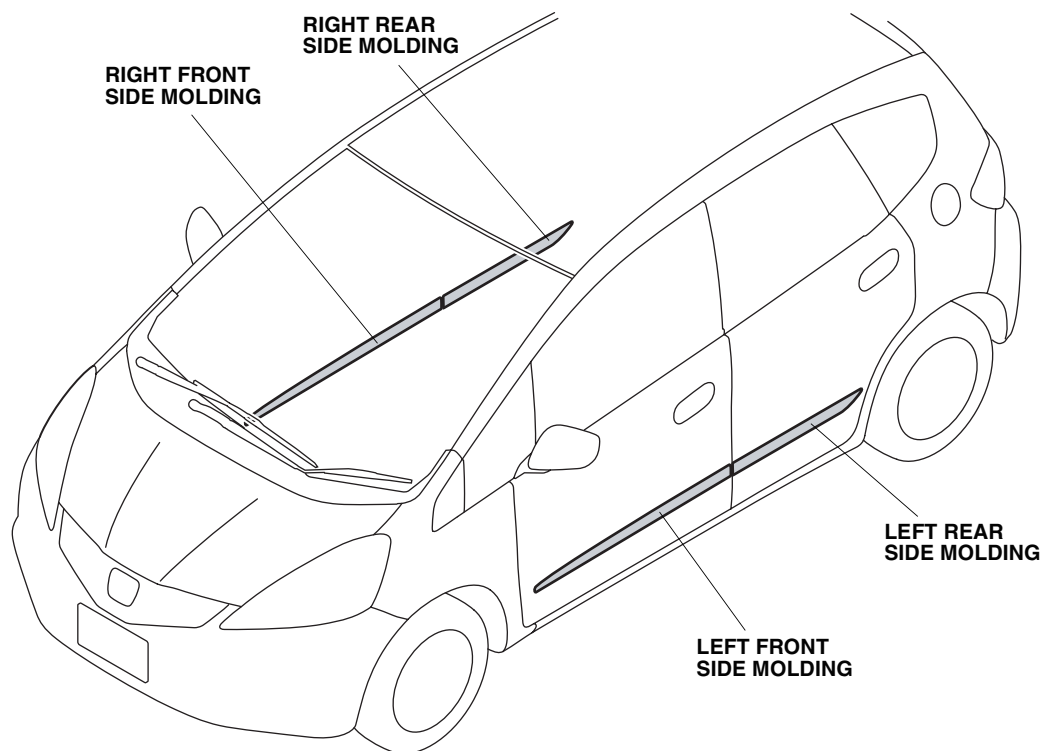

751103AH


Installation

1. Align the front template with the left front door as shown and secure it with four masking tapes.

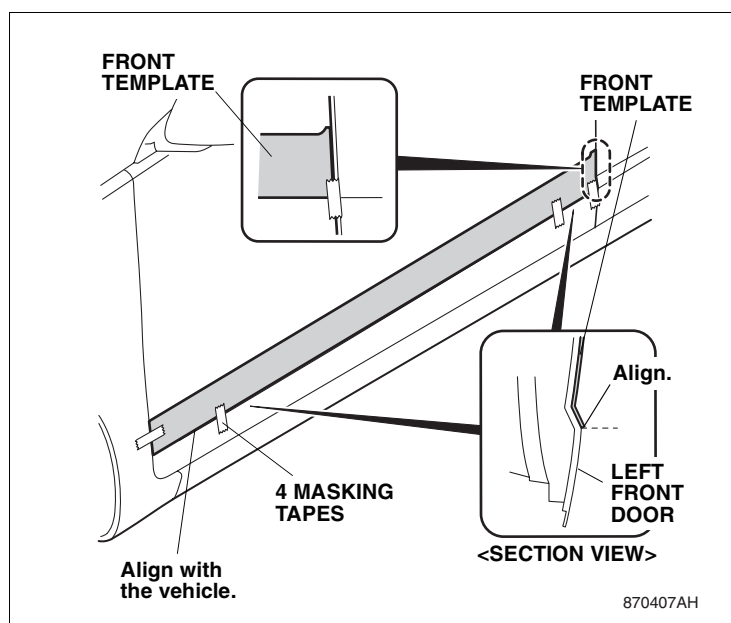


870407AH


2. Align the rear template with the left rear door and left front door as shown and secure it with four masking tapes.

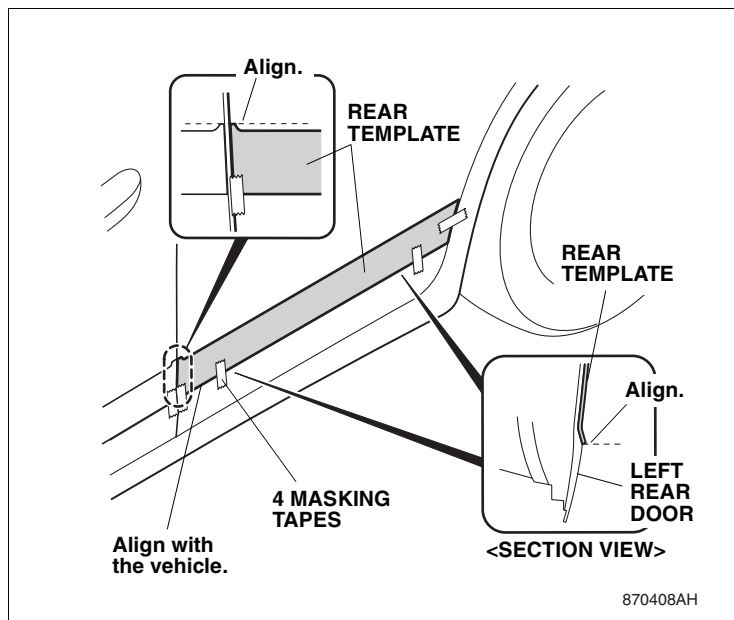


3. Remove the two adhesive backings of the left front side molding.
4. Turn back the ends of the four adhesive backings of the left front side molding and secure them temporarily with four masking tapes to the front surface.

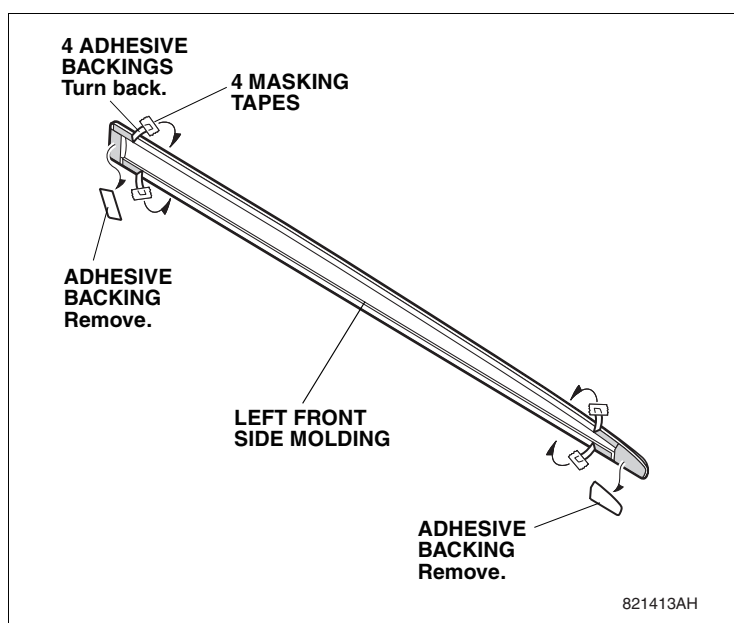


5. Clean the attachment position of the left front side molding with the cleaner.
6. Align the left front side molding with the front template and attach it to the left front door.

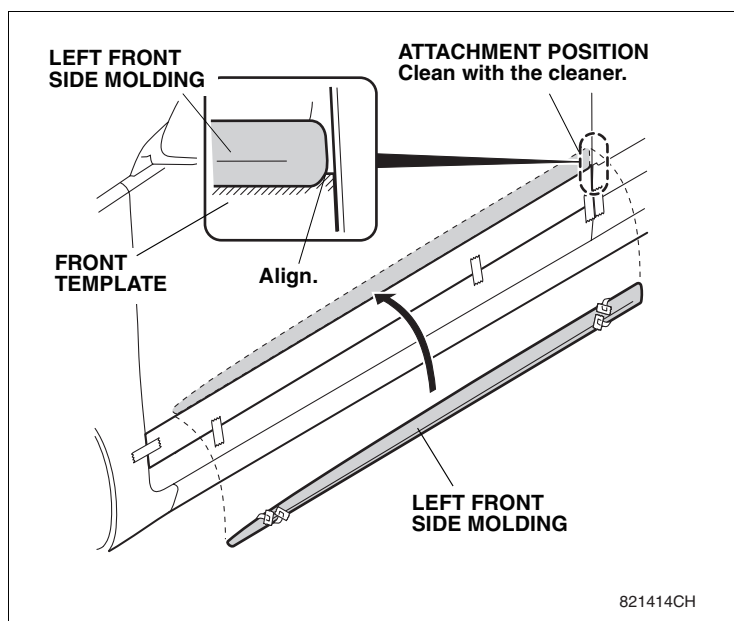


7. Remove the two adhesive backings of the left rear side molding.
8. Turn back the four adhesive backings of the left rear side molding and secure them temporarily with four masking tapes to the front surface.

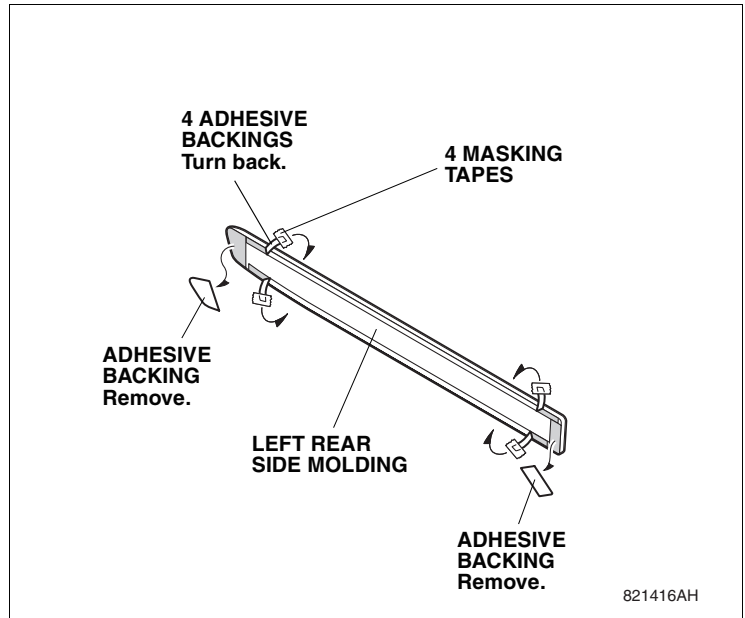

9. Clean the attachment position of the left rear side molding with the cleaner.
10. Align the left rear side molding with the rear template and attach it to the left rear door.
11. Remove the front and rear template.

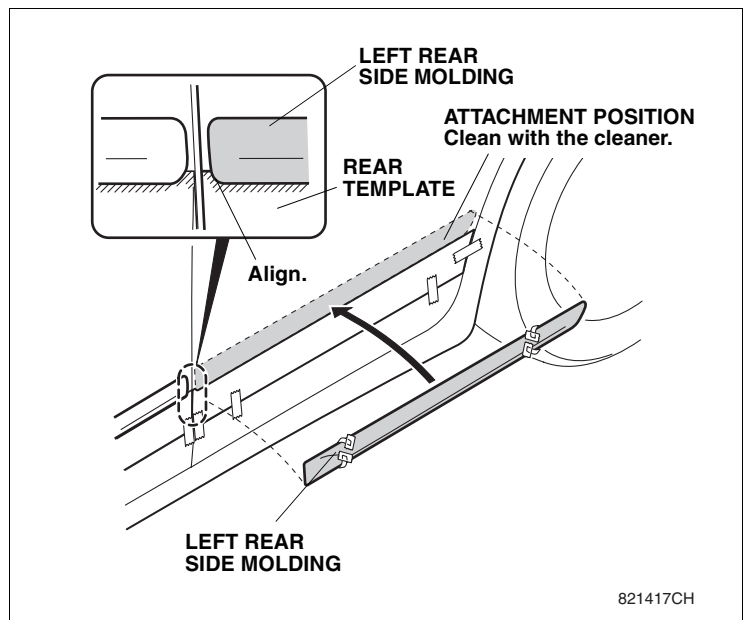

12. Remove the four adhesive backings of the left front side molding.
 - Hold the left front side molding so that it does not shift, and remove the adhesive backings.
13. Apply pressure to the left front side molding with the palm of your hands for 30 seconds to adhere.
 - Apply pressure especially thoroughly to the end parts.

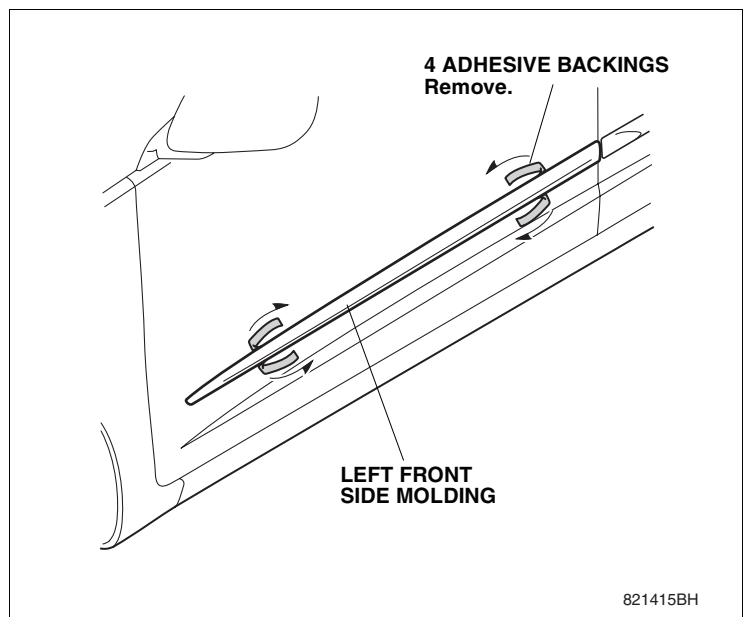

14. Remove the four adhesive backings of the left rear side molding.
 - Hold the left rear side molding so that it does not shift, and remove the adhesive backings.
15. Apply pressure to the left rear side molding with the palm of your hands for 30 seconds to adhere.
 - Apply pressure especially thoroughly to the end parts.
16. Perform the work of steps 1 to 15 also on the opposite side.

