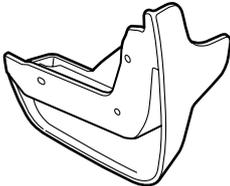
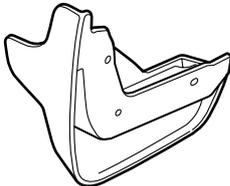


Parts List

Left front mud guard	Right front mud guard	Tapping screws	(2)
			
Screws	(4)		
			

Tool Required

- Stubby Phillips screwdriver


Before You Begin

Customer Information

- These instructions are for the left front mud guard. The same procedure applies to the right front mud guard.

Installation

1. Turn the steering wheel clockwise fully.
2. Remove the three washer-screws from the left inner fender.

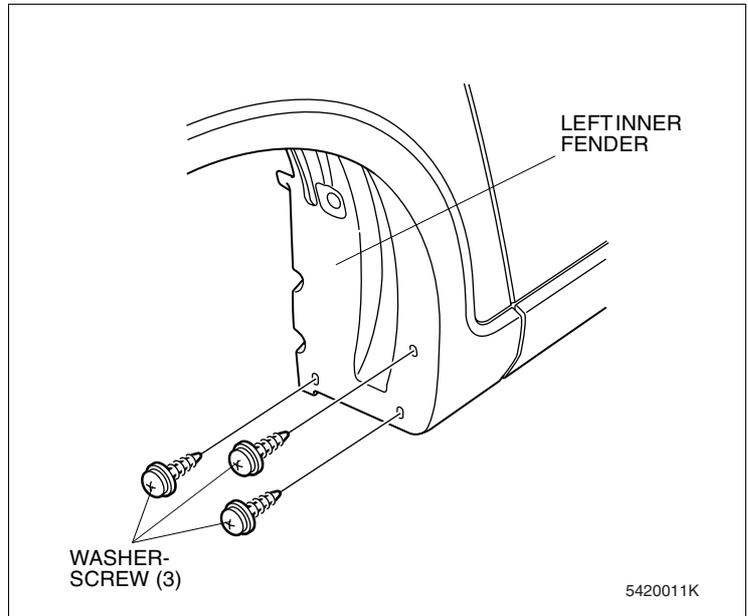

3. Secure the mud guard with two screws and one tapping screw.
 - Secure in the order of 1, 2 and 3.
4. Repeat the procedure on the other side.

