
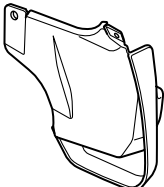


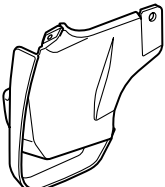


Parts List

Left rear mud guard	Right rear mud guard	Clip As	(2)
			
Clip Bs	(2)	Self-tapping screws	
			

Tool Required

- Phillips screwdriver
- Stubby Phillips screwdriver


Before You Begin

Customer Information

- Be careful not to damage the body.
- These instructions show the left rear mud guard being installed. The same procedure applies to installing the right rear mud guard.

Installation

1. Remove the two clips and one self-tapping screw from the left rear inner fender.
 - Take care not to confuse the clips shown when removing them from the underside of the inner fender.

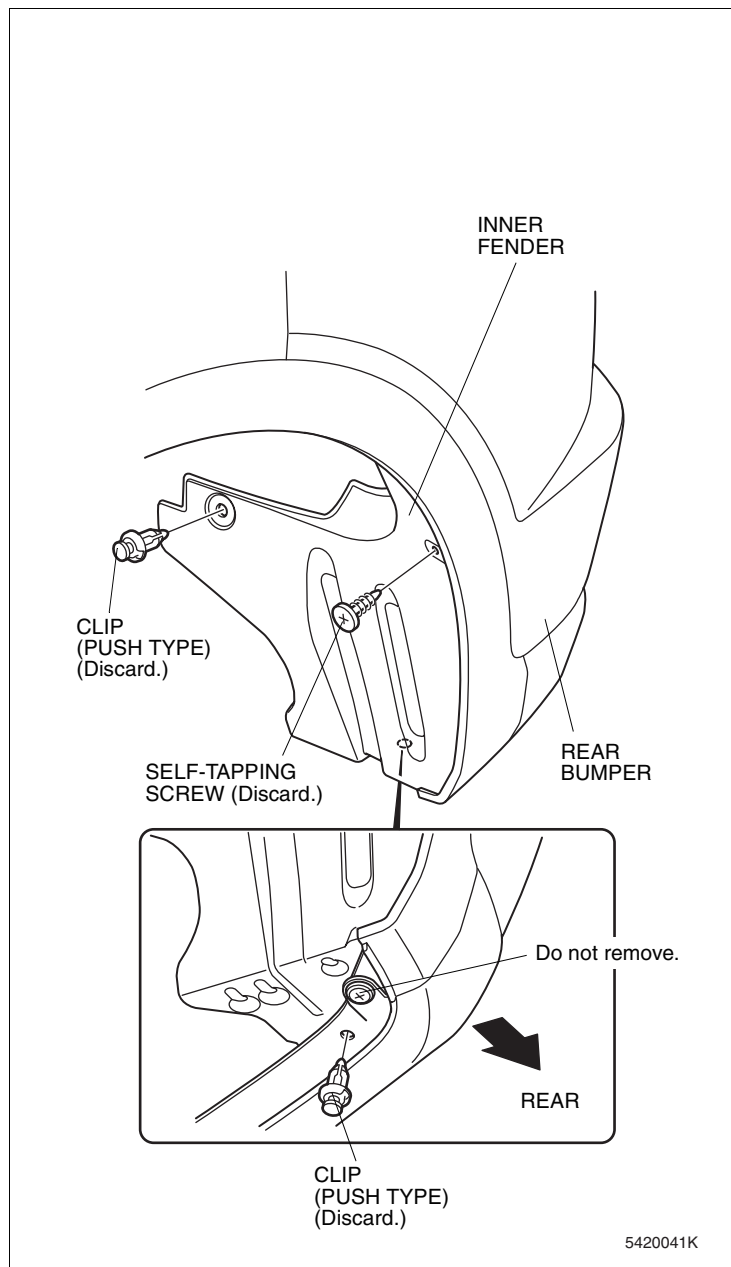

2. Install the left rear mud guard with the clip A, clip B and the self-tapping screw.
 - Tighten the clip A, clip B and the self-tapping screw in the order of 1, 2 and 3.
 - If there is a gap between the left rear mud guard and the car body, loosen the clip A and B once and adjust the left rear mud guard to remove the gap. After adjustment, tighten the clip A and B again.
3. Repeat the procedure from step 1 to step 2 on the right side.
4. Installation completes.

