


## REAR LOWER GARNISH

**CR-V**

### GENERAL VIEW

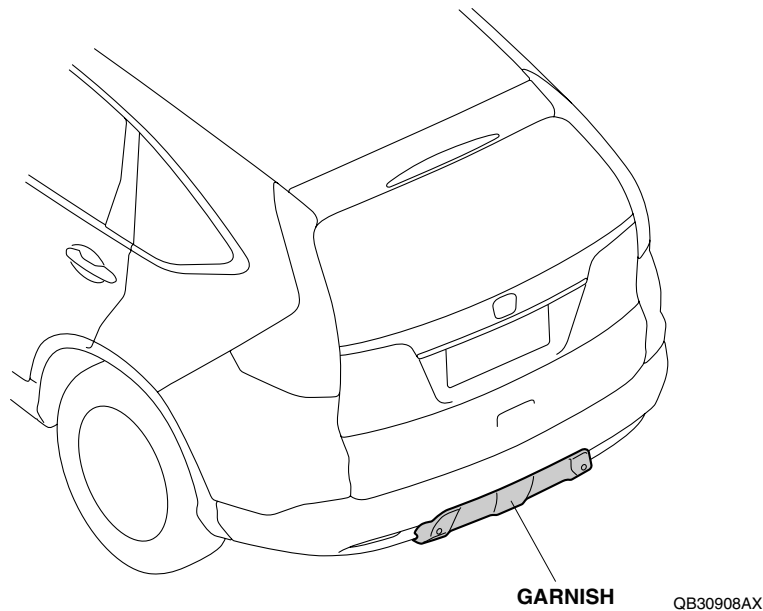

### FOR YOUR SAFETY (Read carefully)

#### Introduction of Symbol Messages

- These symbols warn you about the possible hazards and explain how to avoid them. And give you some advices.

#### **DANGER**

You will be killed or seriously hurt if you do not follow the instructions.

#### **WARNING**

You can be killed or seriously hurt if you do not follow the instructions.

#### **CAUTION**

You can be hurt if you do not follow the instructions.

#### **NOTICE**


Gives advice to prevent damage to the product.  
Gives helpful information or instructions to be followed in using the product.




Indicates prohibited actions.

## Introduction of Icons

- These icons indicate the working place and the worker's vision.



The place for the vehicle.



The place for the instrument panel.

- These icons indicate the necessary things for your safety and the work.



Wear eye protection.



Wear heavy gloves.



Work with an assistant.



Place the part on a blanket.



Remove any burrs.



Use the touch-up paint and dry.



Keep the parts and give it to the customer.  
(Not use)



Press firmly.



Tighten by specified torque.




Work perpendicularly.




Clean with the contact cleaner.


## Wire Harness Routing Precaution

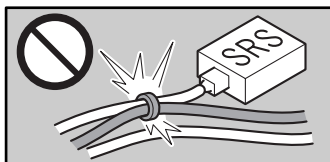


Do not clamp the  
accessory harness and  
SRS harness together.

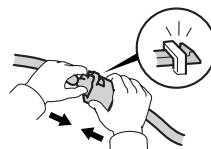


Connect the connectors  
and terminals securely  
until they lock.

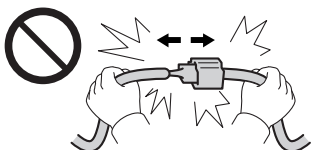

Do not pull the harness to  
disconnect the connectors.



Reinstall the connectors to  
the original positions if  
they are removed.

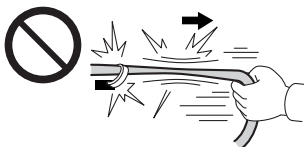


Do not pull the harness  
strongly.



Secure the accessory  
harness to the specified  
position, not to hang down.



Do not pinch the harness  
with the parts.

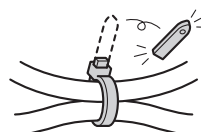

Cut off the excess of the  
wire ties.

## Safety: General

- Observe all safety notes and precautions described in the Shop Manual in addition to those described in this Installation Instruction. Be extremely careful for your safety and safety of others particularly.
- Be careful not to damage the vehicle and the parts.
- Be extremely careful to the handling of the retaining tabs and clips particularly.
- Note the locations of the parts before removing them so that they can be reinstalled in their original positions properly.

## Safety: For Electric Parts








- Do not perform the installation of the accessories with having connected negative cable of the battery.

## Safety: For the Accessory

- Always use the parts and tools specified in the installation instructions.
- Do not perform installation work and attaching work at the place where gets the direct rays of the sun or the dust appears.
- Always install these accessories at the ambient air temperature 15°C (60°F) or above.
- Heat the accessories and bonding surfaces if the ambient air temperature is below 15°C (60°F).
- Attach the accessories by pressing it firmly with the palm of your hand. Be careful not to damage the accessories and the vehicle parts.
- Carefully place the double-sided adhesive tape on the proper position. Once the double-sided adhesive tape touches the surface, do not try to detach and relocate it. If you attempt to move after it touches the surface, you will damage the part before the adhesive will give way.
- Not to wash the vehicle for 24 hours to allow the adhesive to cure.

## PARTS LIST
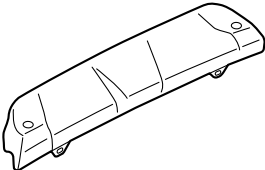
### Rear Lower Garnish Kit

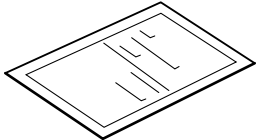Garnish 	Sensor covers (2) (May not used) 	Self-lock counter nuts (4) 	Clips (2) 
Primers (2) (Some may not used) 	Cleaners (2) (Some may not used) 	Aluminum tapes (3) (May not used) 	


## TOOLS AND SUPPLIES REQUIRED

- Phillips screwdriver
- 10 mm and 17 mm Sockets
- Handy remover
- Pushpin
- Drill
- 10 mm Nut
- Tape
- 10 mm Open end wrench
- Masking tape
- File
- 3 mm and 10 mm Drill bits
- Eye protection (face shield, safety goggles, etc.)
- Ratchet
- Blanket
- Ruler
- Hacksaw
- 14 mm Hole saw

# INSTALLATION

## Disconnecting the Battery Cable

- 1. Make sure that you have the anti-theft code for the audio/navigation system. Write down the customer's radio station presets. Record some settings of the vehicle if necessary.
- 2. Disconnect the negative cable from the battery.


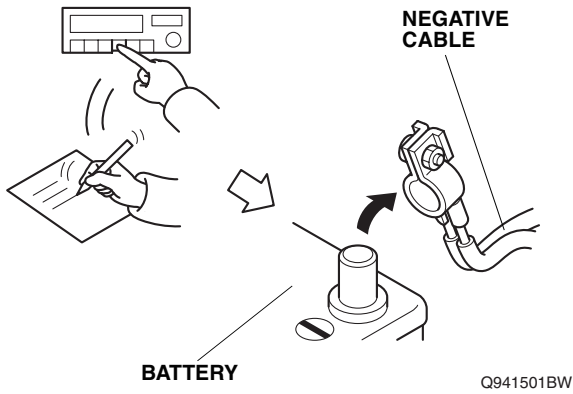


## Removing the Vehicle Parts



• With mud guards	To step 3
• Without mud guards	To step 12

<With mud guards>



- 3. Remove the clip.

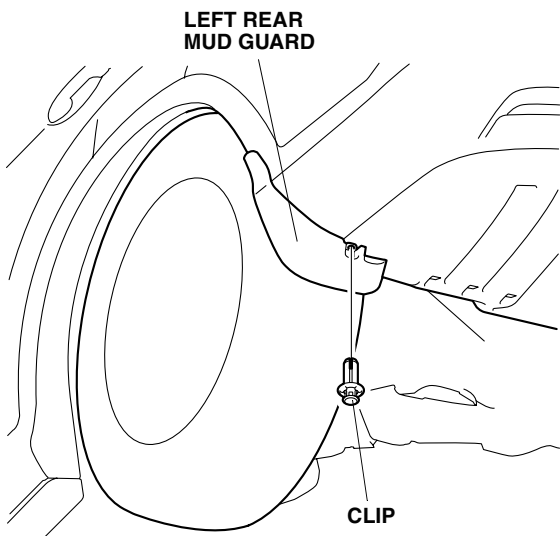



- 4. Remove the left rear mud guard.

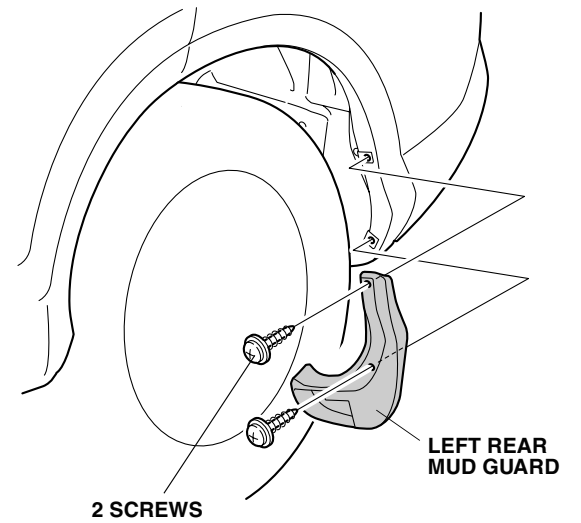

- 5. Remove the clip.

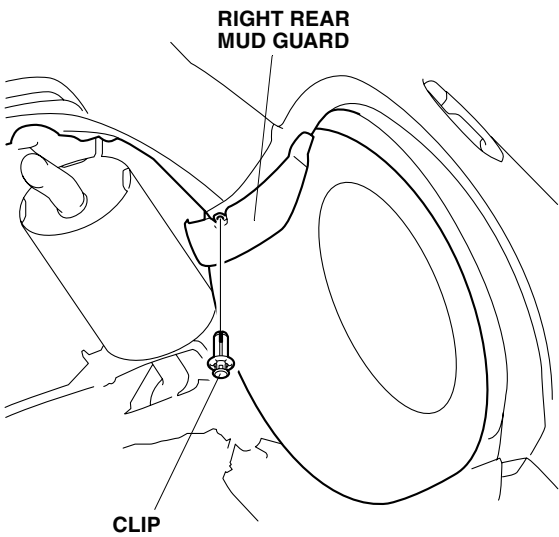



6. Remove the right rear mud guard.

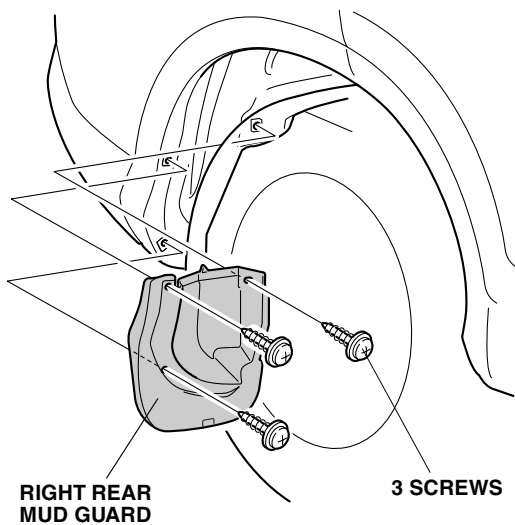


QA11417AE

7. Open the right rear door.  
8. Remove the screws.

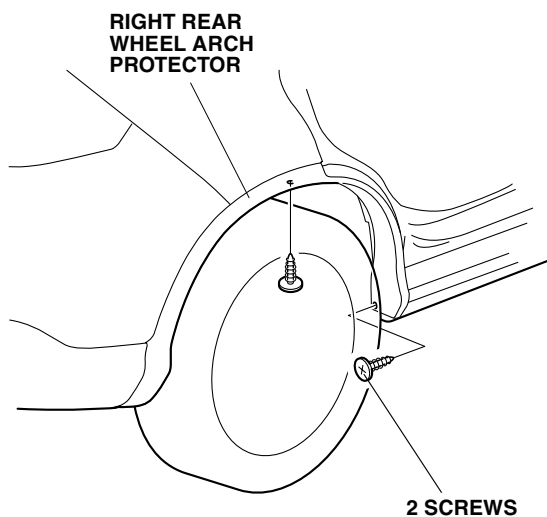

QA00516AB

9. Remove the right rear wheel arch protector.

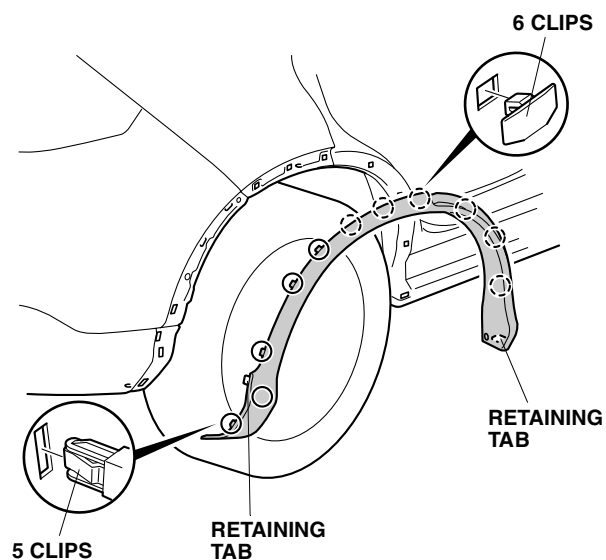


Q0D2002BG

10. Attach the tapes to protect the vehicle.


### NOTICE

- Do not remove the tapes until after the reinstallation.

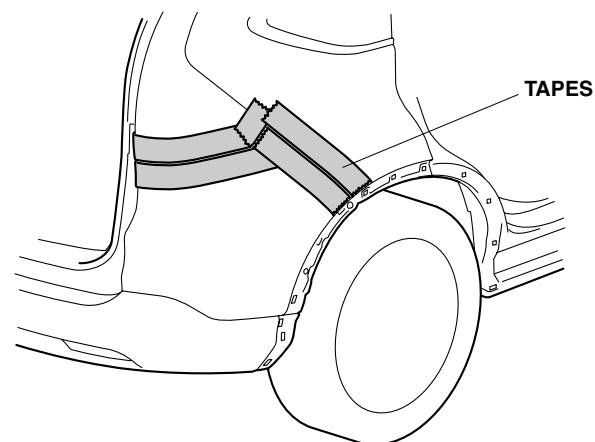

Q0D0112AE

11. Repeat same procedures for the other side.


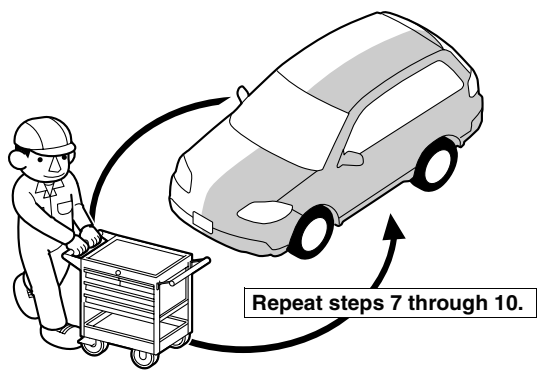


Q9D1013AM

To step 17


<Without mud guards>

- 12. Open the right rear door.
- 13. Remove the clip and screws.

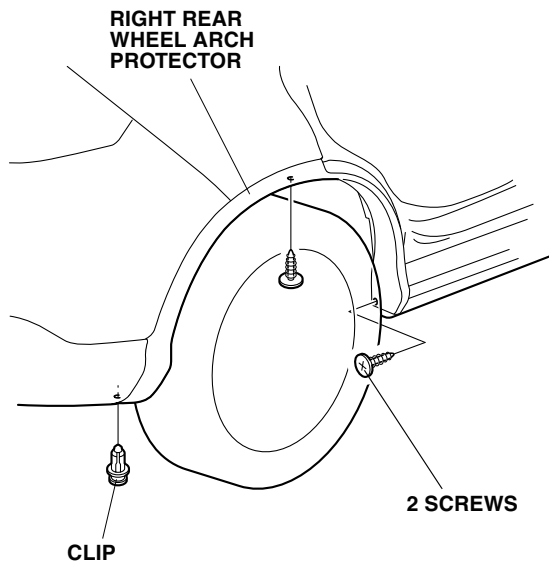

Q0D2001AG


14. Remove the right rear wheel arch protector.

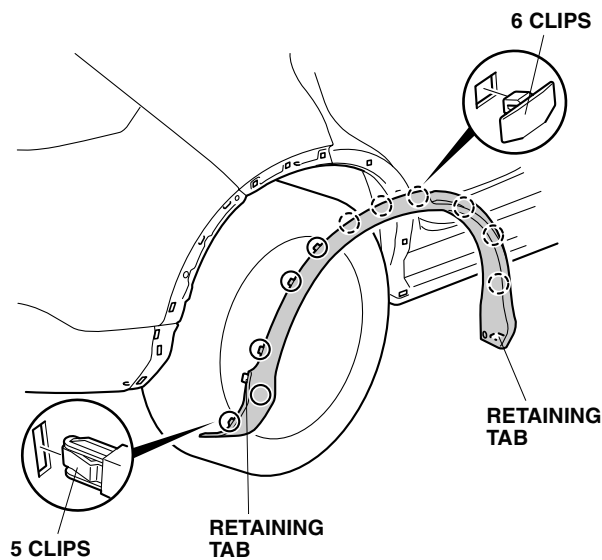

Q0D2002BG


15. Attach the tapes to protect the vehicle.

<b>NOTICE</b>
<ul style="list-style-type: none"><li>Do not remove the tapes until after the reinstallation.</li></ul>

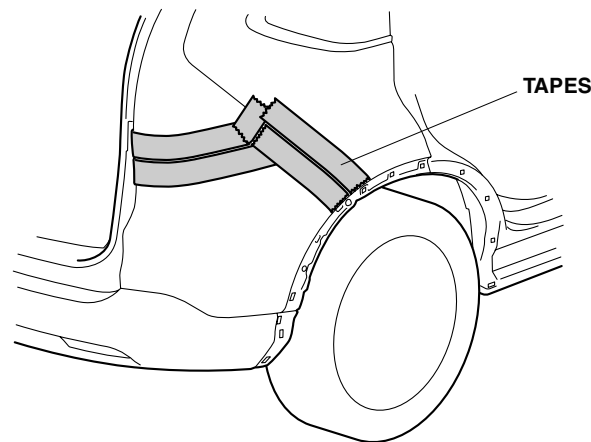


Q0D0112AE

16. Repeat same procedures for the other side.

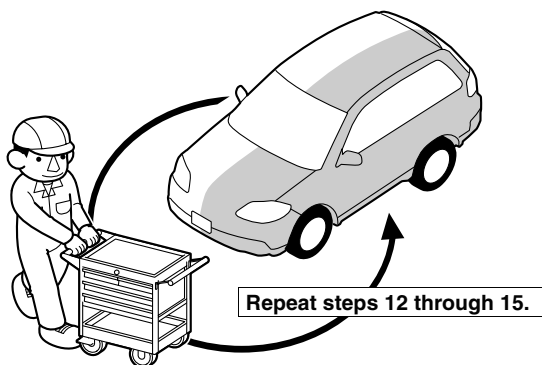


Q9D1013AM


17. Remove the bolts, screws, and clips.



2 COVERS

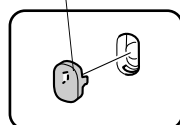

2 SCREWS

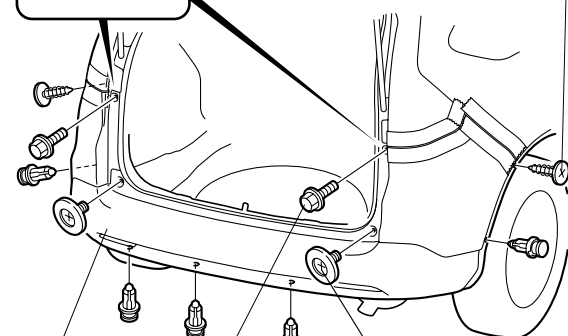

REAR  
BUMPER



2 BOLTS

5 CLIPS

2 BUMPER  
SCREWS


Q0D0201BE

18. Release the retaining tabs.

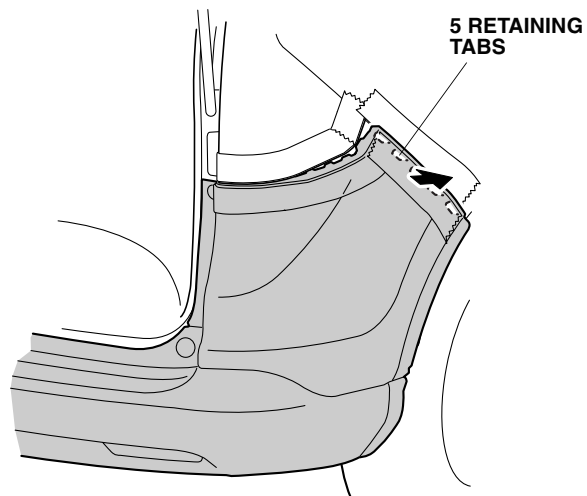


Q0D0202AE

19. Release the retaining tabs.

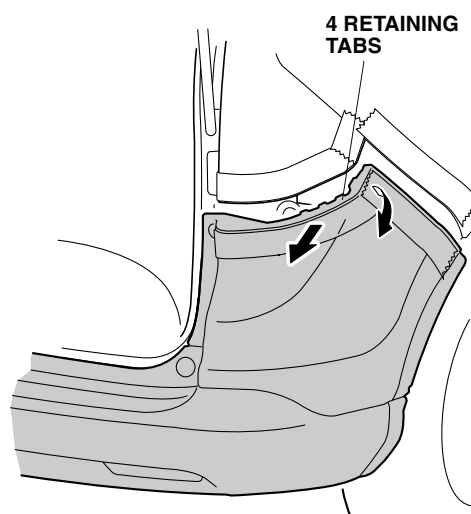



Q0D0203AE

20. Repeat same procedures for the other side.

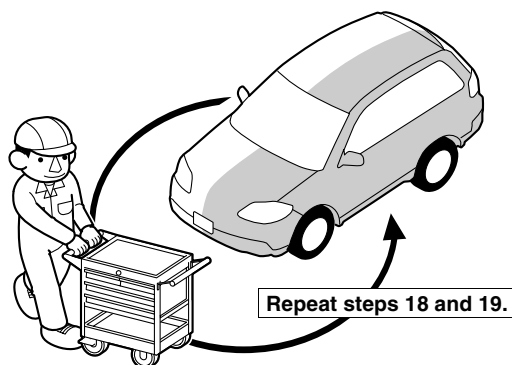

Q9D1013AM

21. Remove the rear bumper.

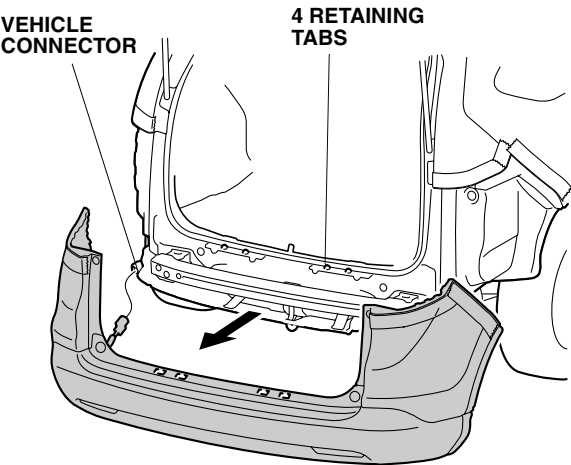



QB30701BX

- |   |            |
|---|------------|
| • With standard rear parking sensors    | To step 22 |
| • Without standard rear parking sensors | To step 24 |

<With standard rear parking sensors>


22. Remove the harness.

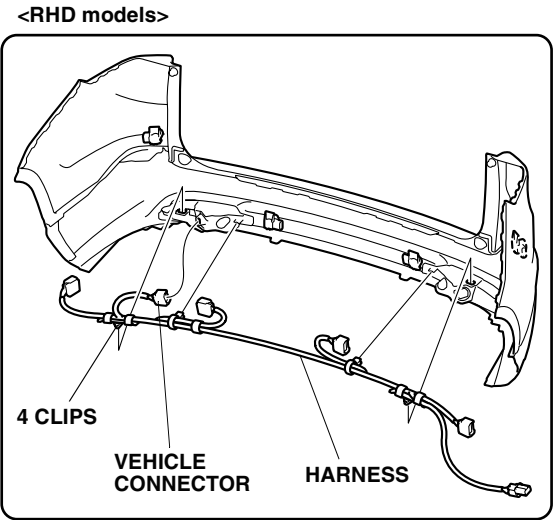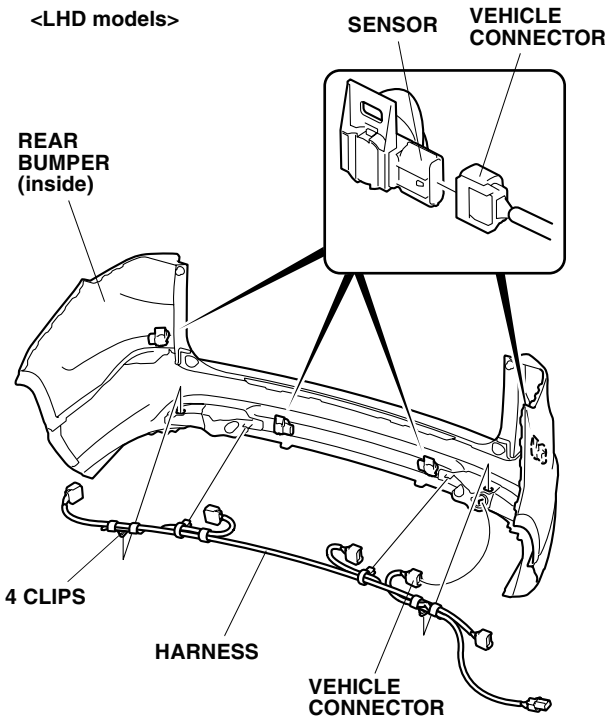

QB30702AX




23. Remove the sensors.

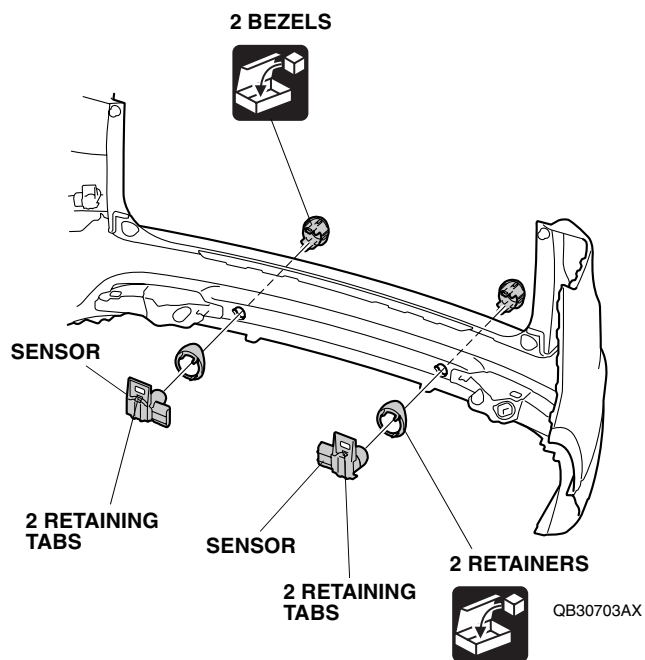


## Installing the Garnish

24. Mark the rear bumper.

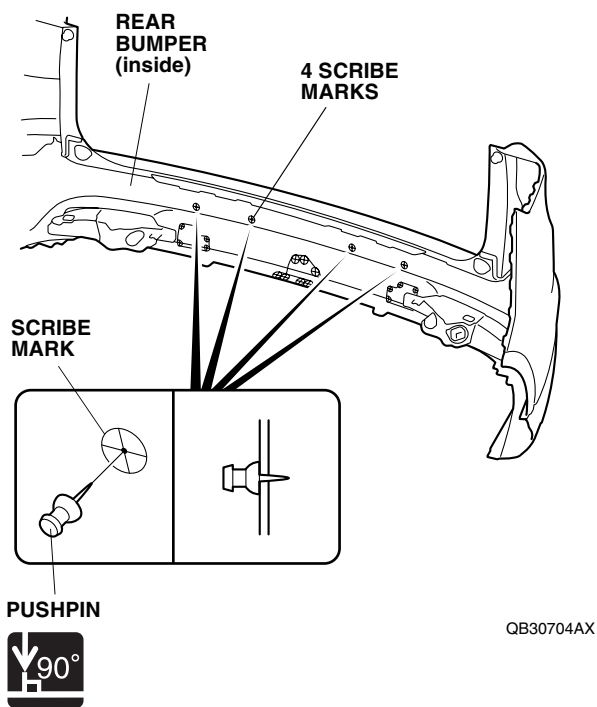


25. Drill the rear bumper.

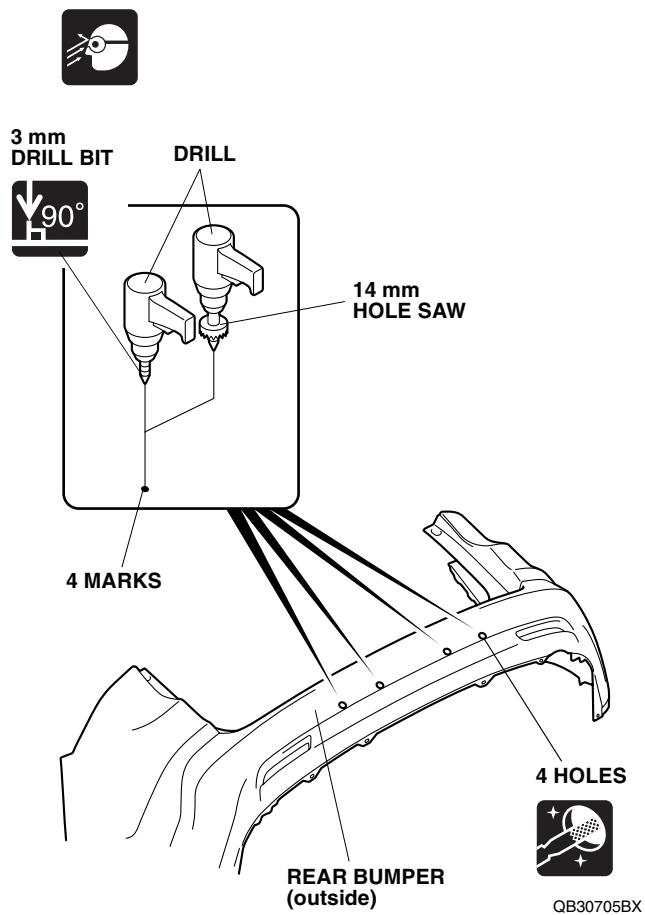


- With standard rear parking sensors To step 26
- Without standard rear parking sensors To step 30

<With standard rear parking sensors>


26. Mark the rear bumper.

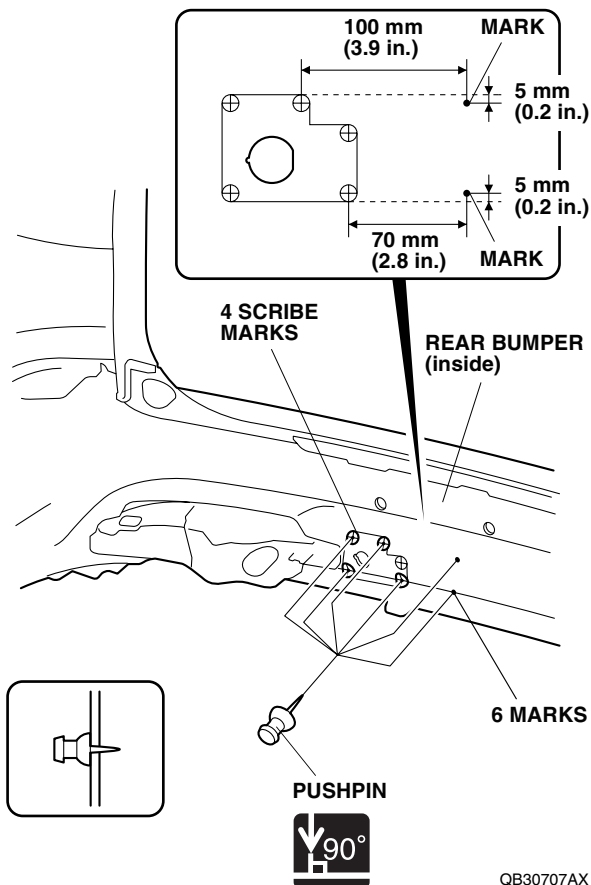


27. Mark the rear bumper.

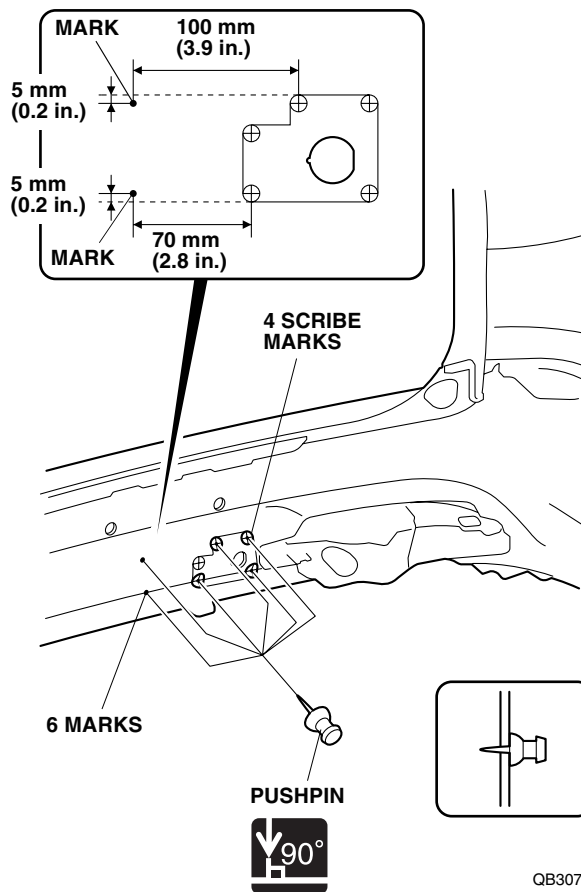


28. Drill the rear bumper.

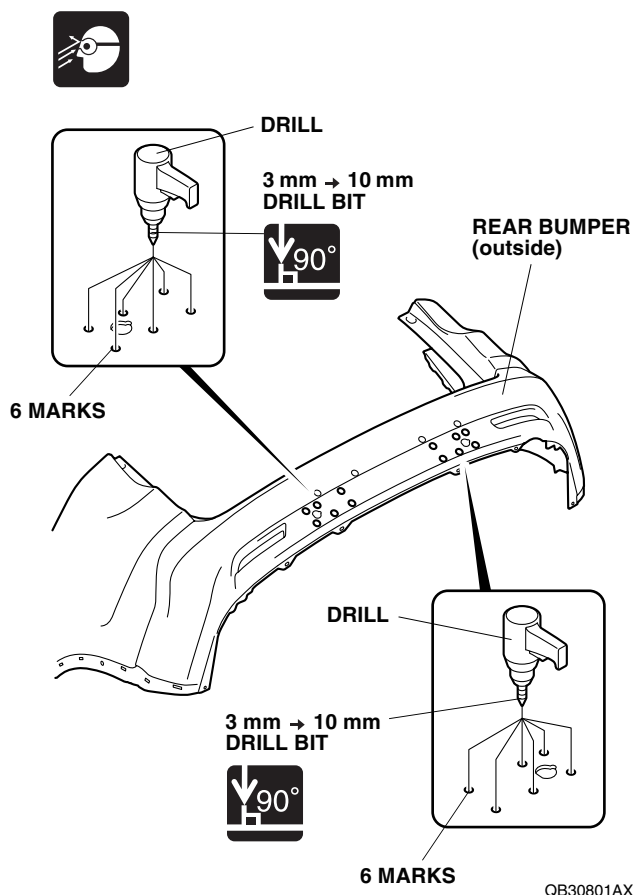


29. Cut the rear bumper.

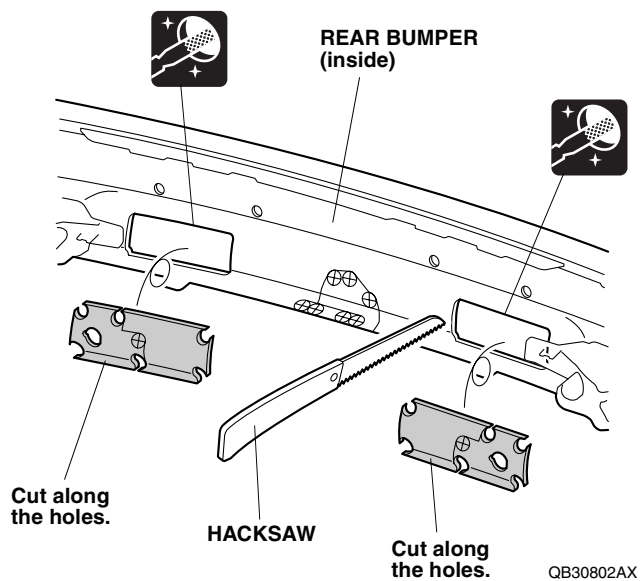

30. Loosely install the garnish.

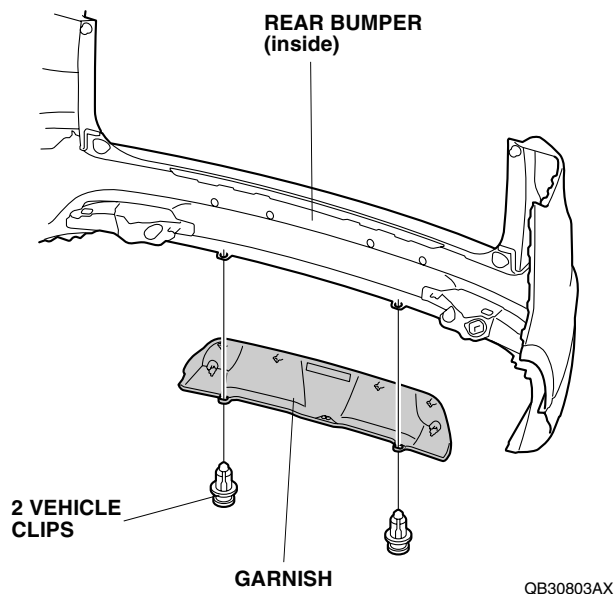


31. Attach the masking tape.

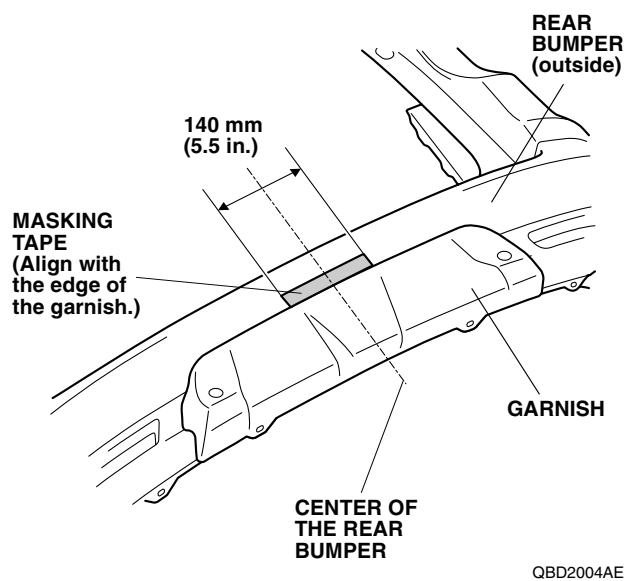

32. Remove the garnish.

33. Attach the masking tapes.

34. Clean the rear bumper.

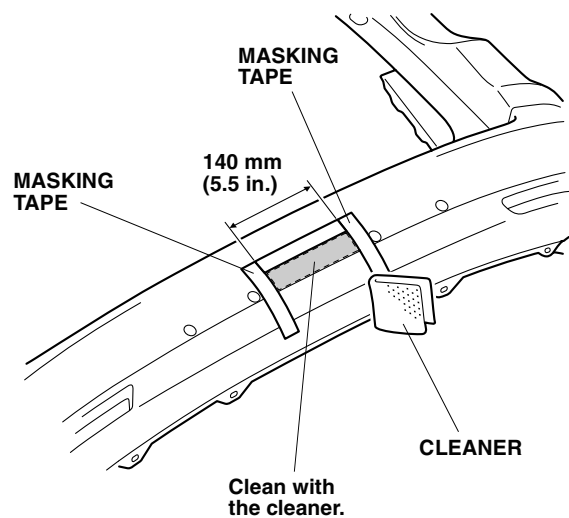


35. Apply the primer.

NOTICE

- Be careful not to apply the primer anywhere except the indicated area.
- Do not apply additional primer.
- Re-apply the primer if twenty four hours has elapsed after the first primer was applied.

36. Remove the masking tapes.

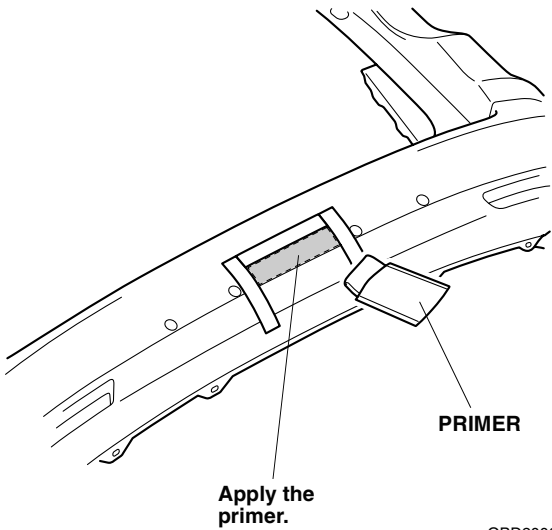

QBD2006AE

- With accessory rear parking sensors
- With standard rear parking sensors
- Without standard rear parking sensors


To step 37

To step 39

To step 40


<With accessory rear parking sensors>

37. Remove the rings and holders.

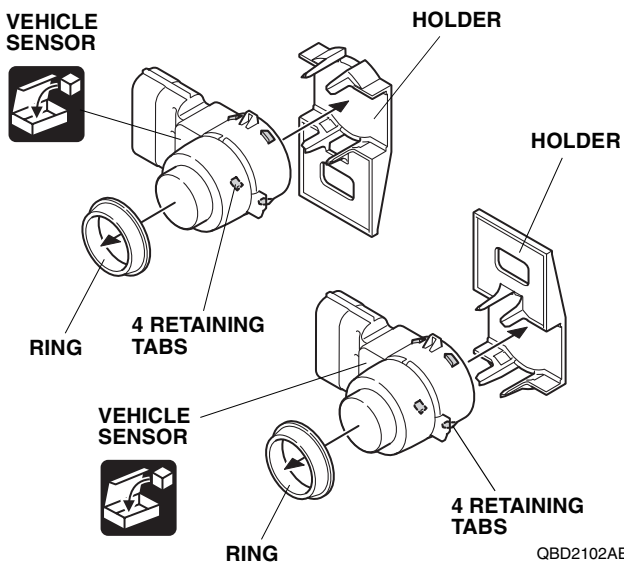

QBD2102AE


38. Install the rings and holders.

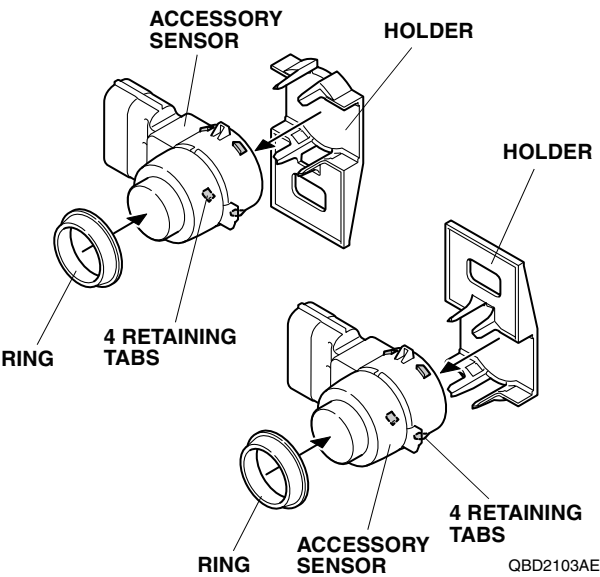

QBD2103AE

<With accessory/standard rear parking sensors>

39. Install the sensors.

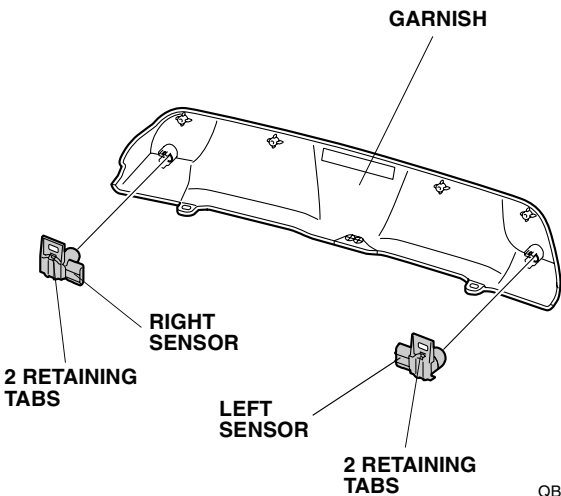


QB30812BX


To step 41

<Without standard rear parking sensors>


40. Install the sensor covers.

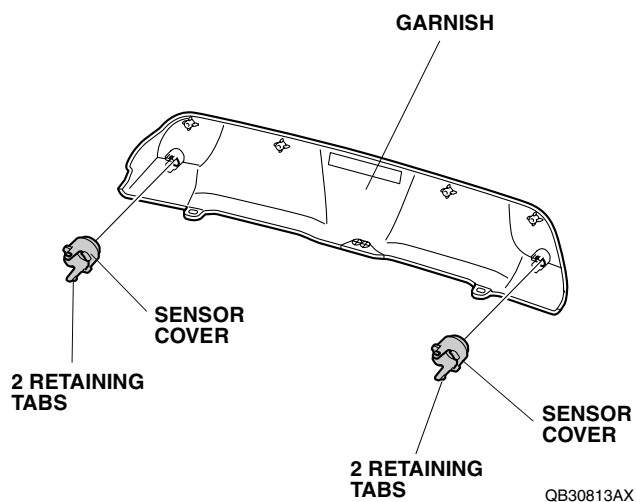


41. Temporarily attach the adhesive backing.

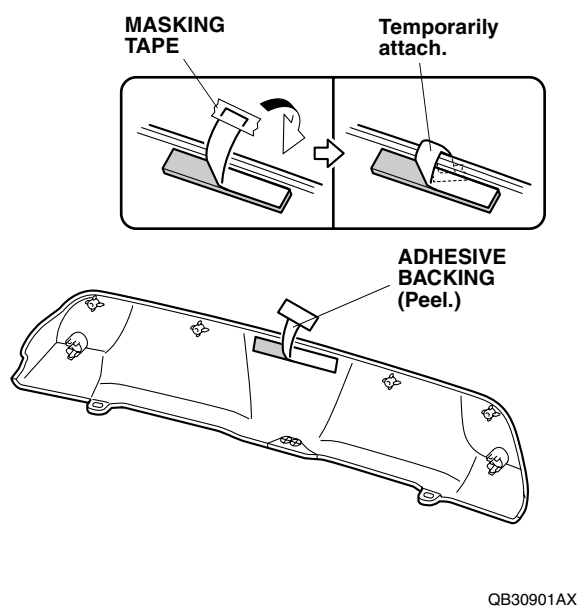


42. Loosely install the garnish.

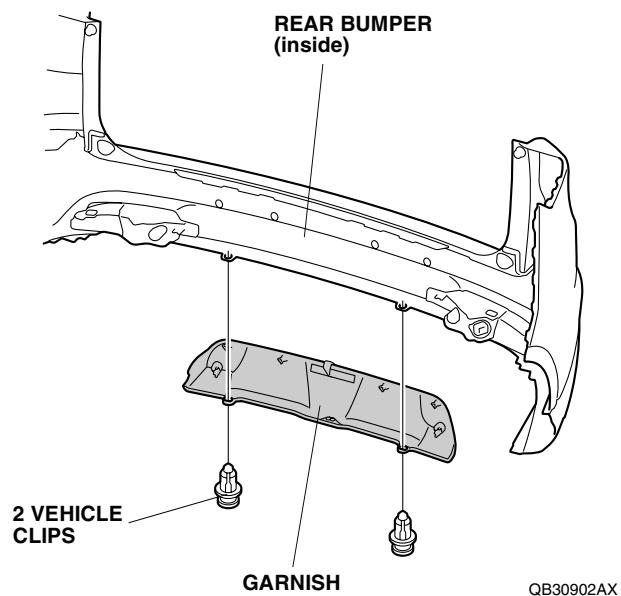


43. Set the 10 mm nut and self-lock counter nut.

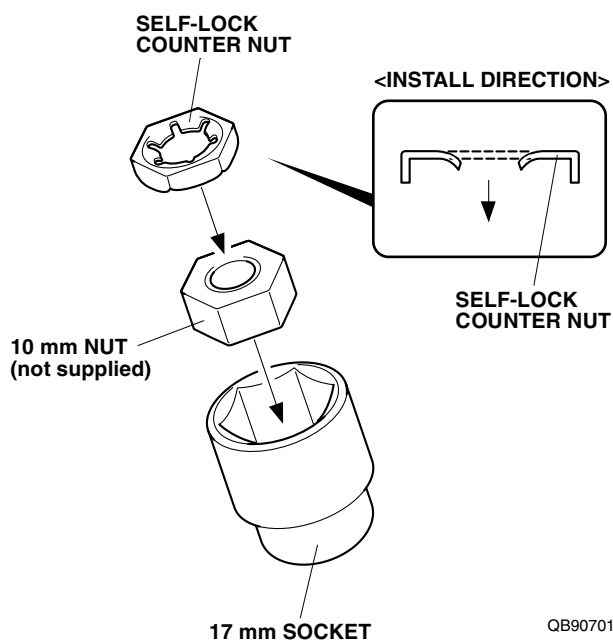


44. Thread the self-lock counter nut.
45. Remove the 10 mm nut.
46. Repeat the same procedures for the other self-lock counter nuts.

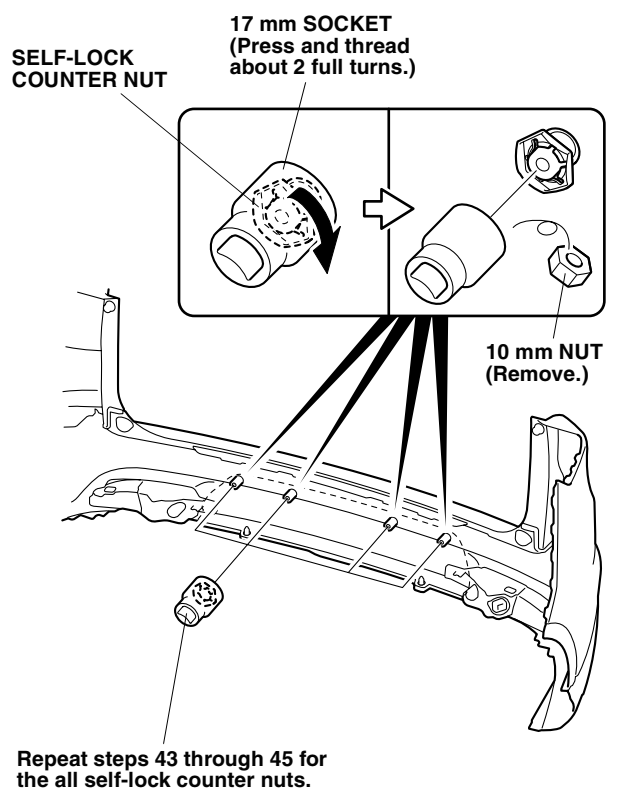

47. Secure the self-lock counter nuts.

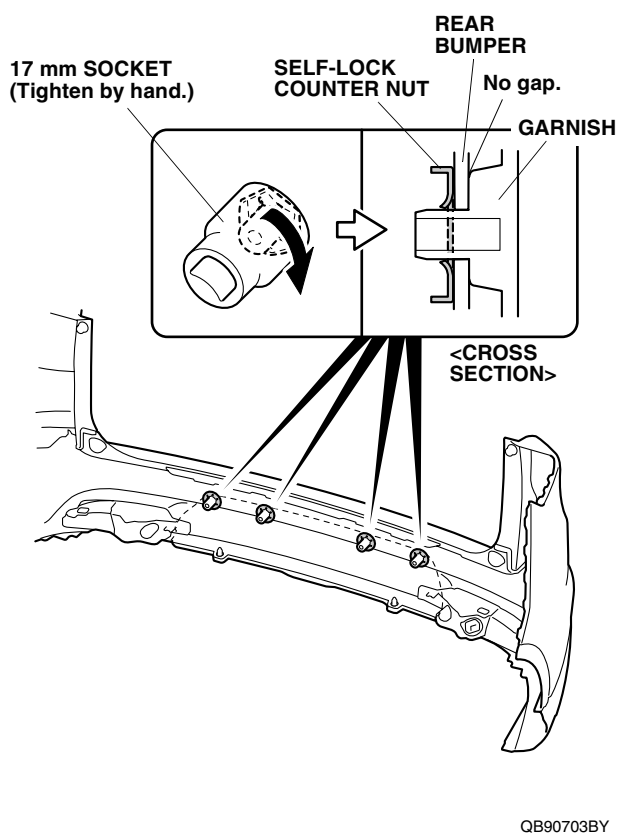


48. Remove the clips.

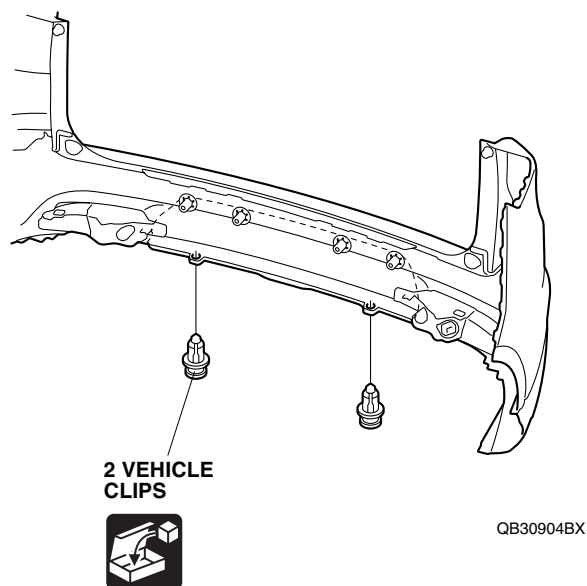


- With standard rear parking sensors: LHD models  
To step 49
- With standard rear parking sensors: RHD models  
To step 53
- Without standard rear parking sensors  
To step 57

<With standard rear parking sensors: LHD models>

49. Install the harness.

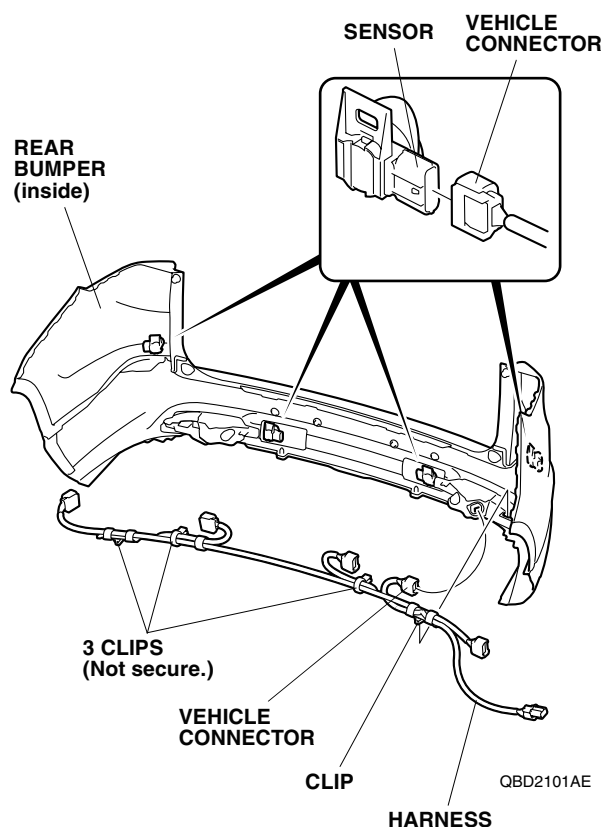


50. Clean the attaching areas.

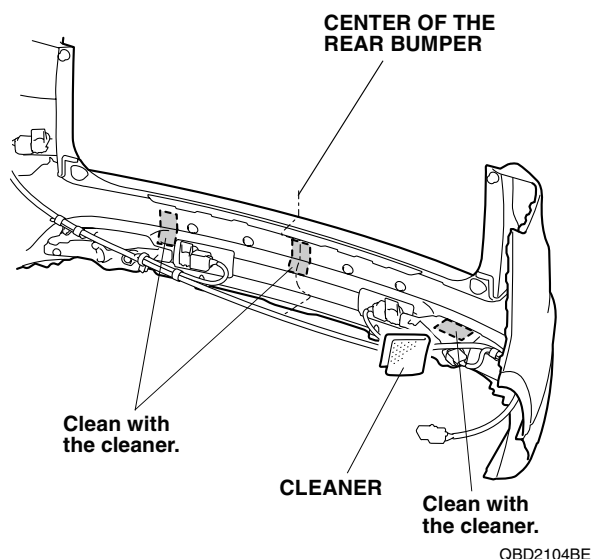


51. Apply the primer.

### NOTICE

- Be careful not to apply the primer anywhere except the indicated area.
- Do not apply additional primer.
- Re-apply the primer if twenty four hours has elapsed after the first primer was applied.

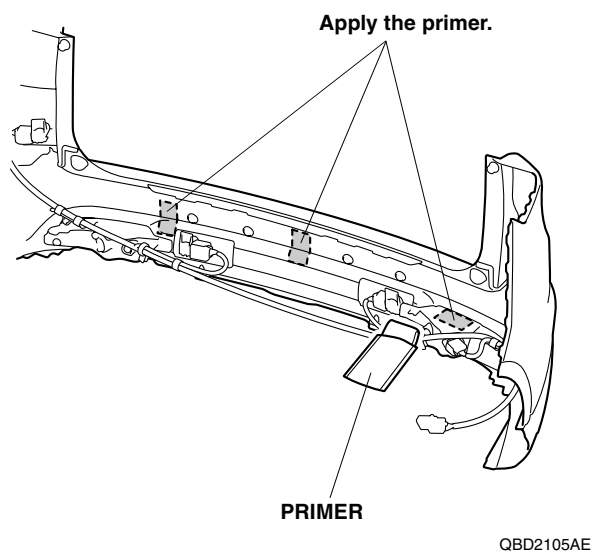


52. Secure the harness.

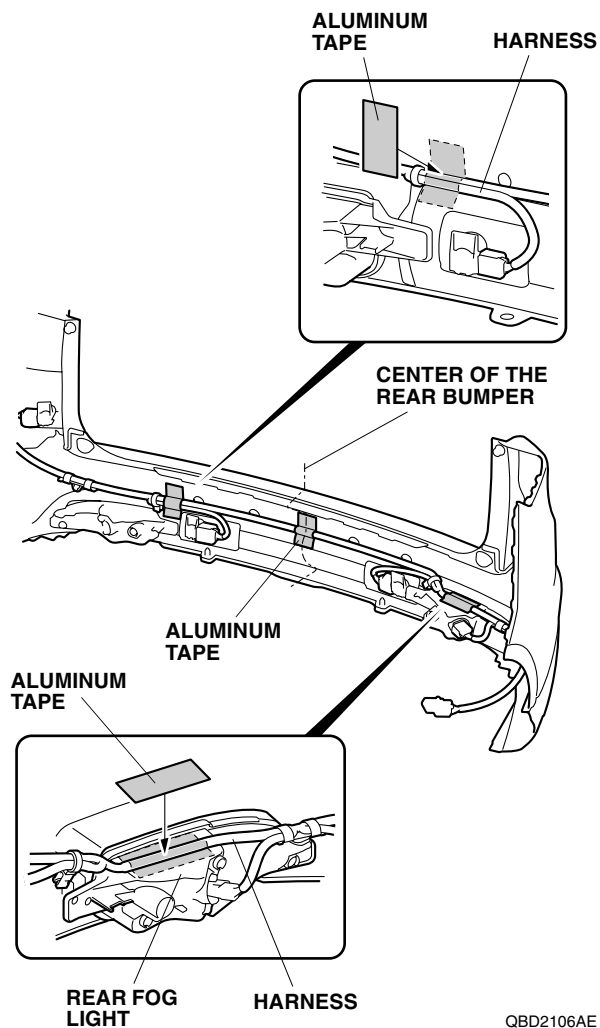


To step 57

<With standard rear parking sensors: RHD models>

53. Install the harness.

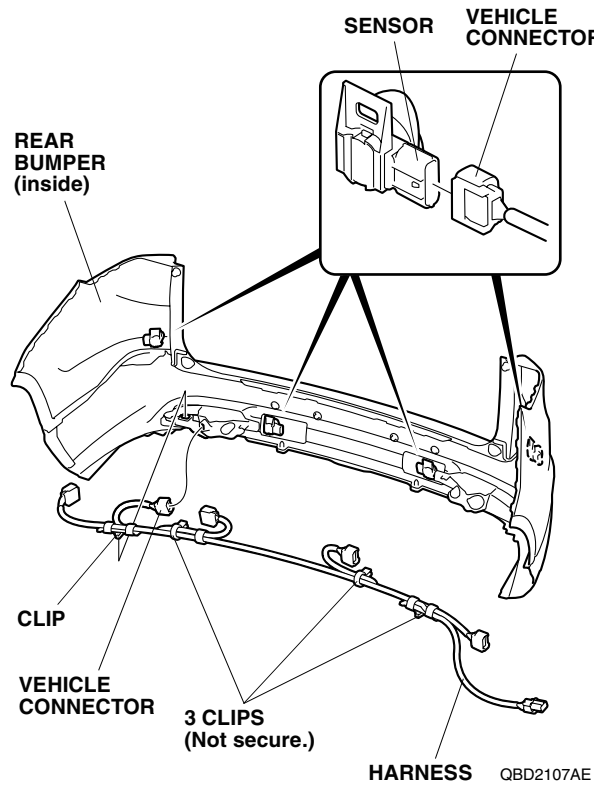


54. Clean the attaching areas.

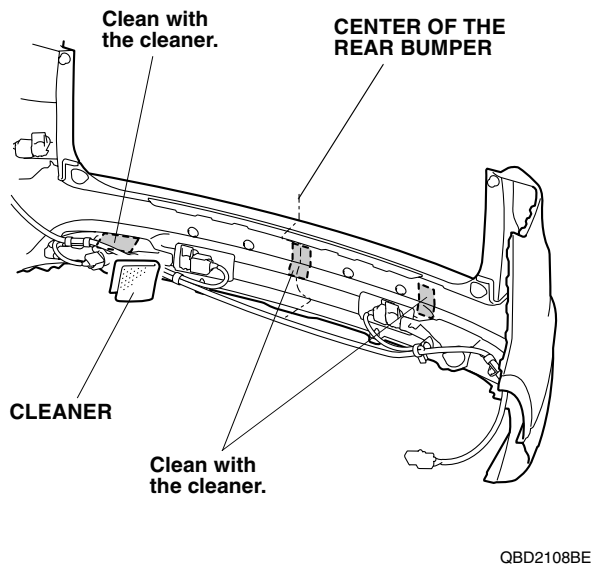


55. Apply the primer.

**NOTICE**

- Be careful not to apply the primer anywhere except the indicated area.
- Do not apply additional primer.
- Re-apply the primer if twenty four hours has elapsed after the first primer was applied.

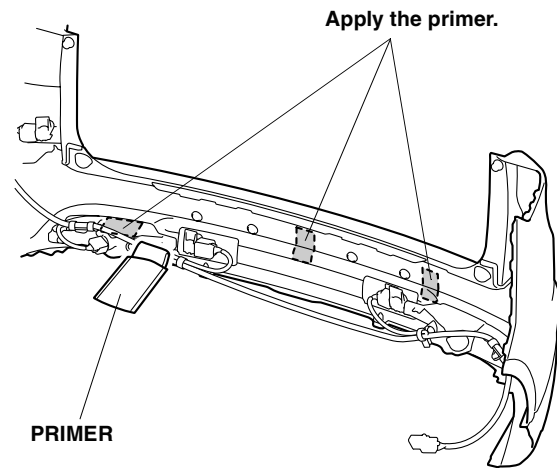


56. Secure the harness.

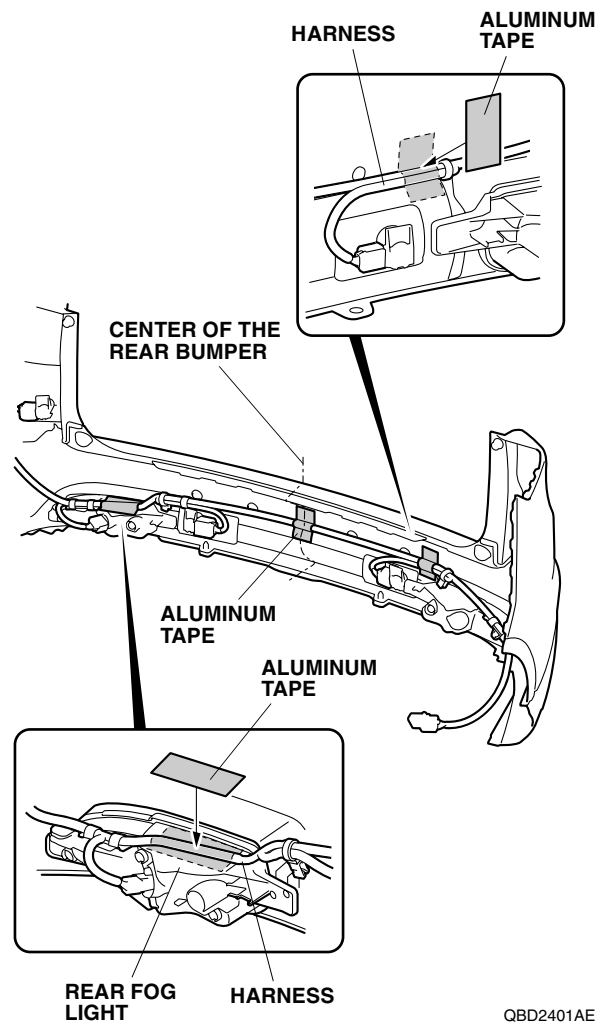




57. Install the rear bumper.

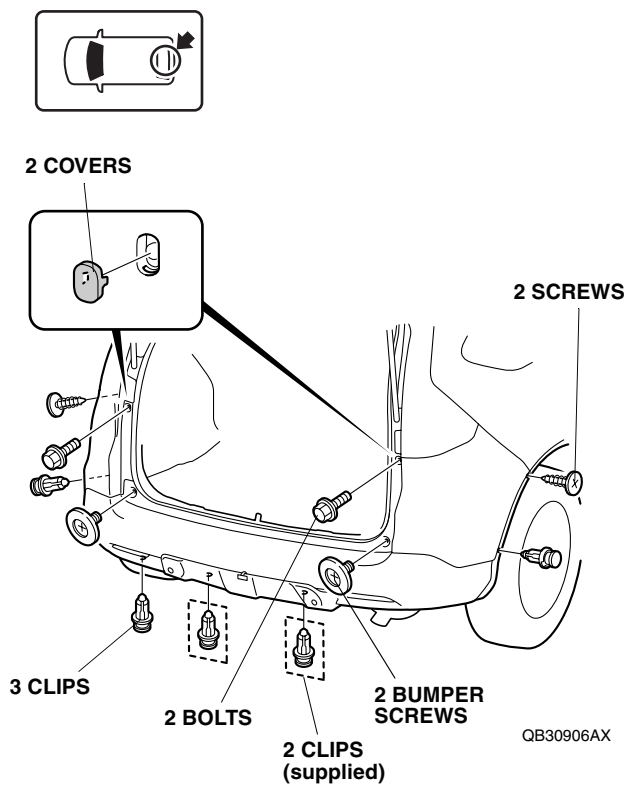

58. Secure the garnish.

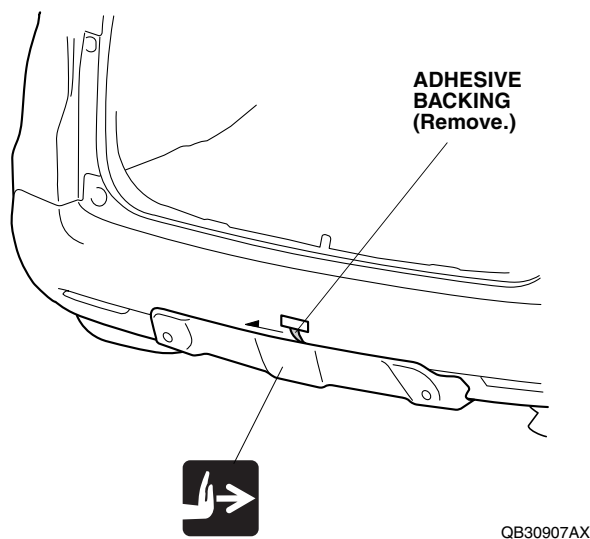


## Check After Installation

59. Check that all parts are routed and installed properly.


### NOTICE

- Check that the harnesses are not pushed, not pulled and not pinched.
- Check that all clamps and wire ties are installed securely.

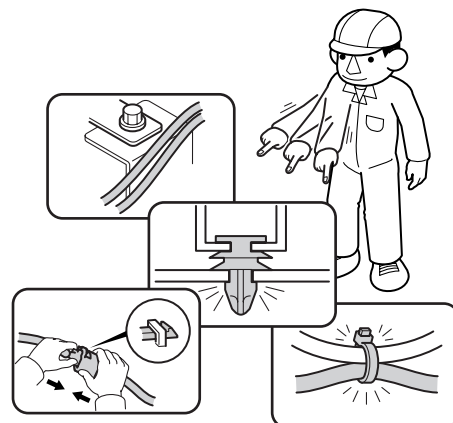

## Operation Check

60. Reconnect the negative cable to the battery.

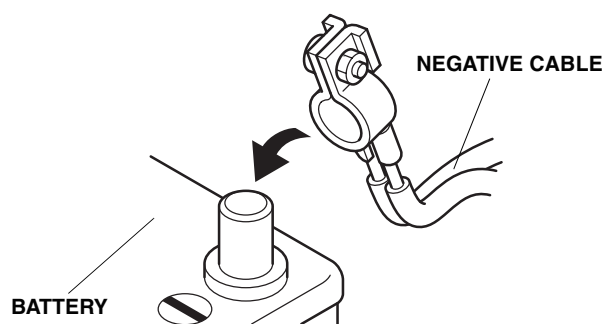


## Reinstalling the All Removed Parts

61. Reinstall all removed parts.


### NOTICE

- When you connect the connector, be sure to disconnect the negative cable from the battery.
- Be extremely careful not to damage the vehicle parts, pinch the harnesses.
- Make sure to secure the retaining tabs and clips properly to avoid separation.

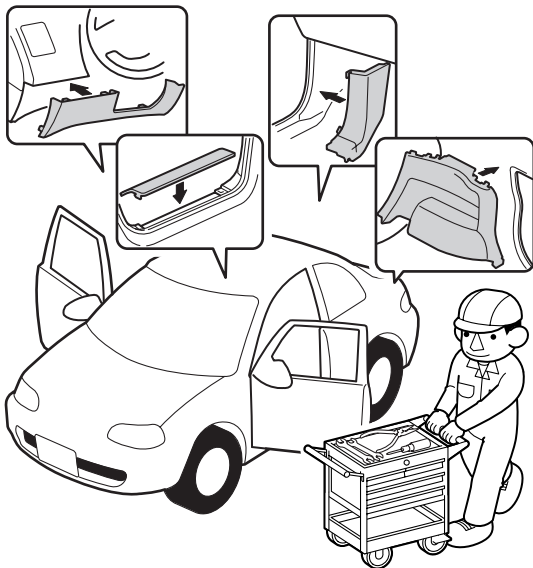

Q060703AM

62. Check that the electric accessories and systems operate properly.
63. Press and hold the audio power button for two seconds, or enter anti-theft code for the audio/navigation system.
64. Reset the memory of each equipment and restore the positions of those control knobs.

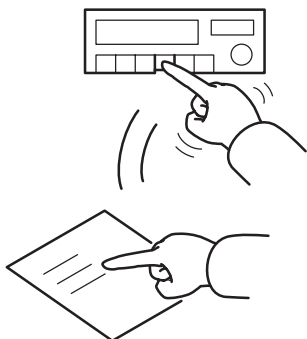

Q060704AM