


TRUNK STEP PROTECTOR KIT

CR-V

GENERAL VIEW

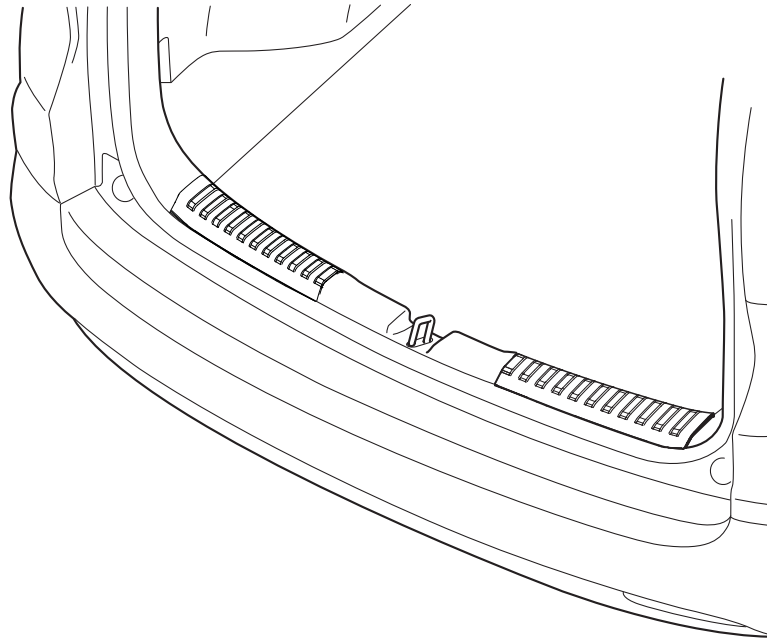

FOR YOUR SAFETY (Read carefully)

Introduction of Symbol Messages

- These symbols warn you about the possible hazards and explain how to avoid them. And give you some advices.

⚠ DANGER

You will be killed or seriously hurt if you do not follow the instructions.

⚠ WARNING

You can be killed or seriously hurt if you do not follow the instructions.

⚠ CAUTION


You can be hurt if you do not follow the instructions.

NOTICEGives advice to prevent damage to the product.
Gives helpful information or instructions to be followed in using the product.


Indicates prohibited actions.

Introduction of Icons

- These icons indicate the working place and the worker's vision.



The place for the vehicle.



The place for the instrument panel.

- These icons indicate the necessary things for your safety and the work.



Wear eye protection.



Wear heavy gloves.



Work with an assistant.



Place the part on a blanket.



Remove any burrs.



Use the touch-up paint and dry.



Keep the parts and give it to the customer.
(Not use)



Press firmly.



Tighten by specified torque.



Work perpendicularly.



Clean with the contact cleaner.

Safety: General





- Be careful not to damage the vehicle and the parts.

Safety: For the Accessory

- Do not perform installation work and attaching work at the place where gets the direct rays of the sun or the dust appears.
- Always install these accessories at the ambient air temperature 15°C (60°F) or above.
- Heat the accessories and bonding surfaces if the ambient air temperature is below 15°C (60°F).
- Attach the accessories by pressing it firmly with the palm of your hand. Be careful not to damage the accessories and the vehicle parts.
- Carefully place the double-sided adhesive tape on the proper position. Once the double-sided adhesive tape touches the surface, do not try to detach and relocate it. If you attempt to move after it touches the surface, you will damage the part before the adhesive will give way.
- Not to wash the vehicle for 24 hours to allow the adhesive to cure.
- When applying the primer, allow the primer to dry for at least 3 minutes. Wipe up excess primer at once.

PARTS LIST

Trunk Step Protector Kit

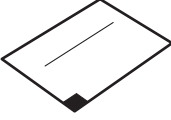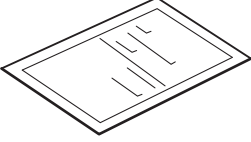Right Trunk step protector	Left Trunk step protector	Cleaner	Primer
			



TOOLS AND SUPPLIES REQUIRED

- Masking tape
- Ruler


INSTALLATION

Installing the Trunk Step Garnish


1. Open the tailgate of the vehicle.
2. Partially remove the tailgate weatherstrip from the tailgate opening.

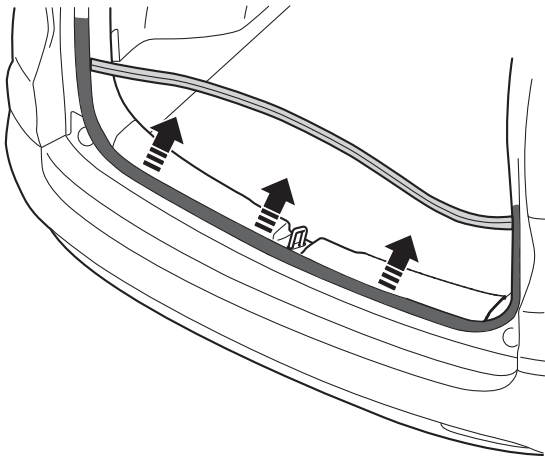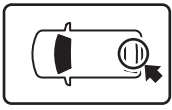



3. Temporarily position the right trunk step garnish 1 mm from the character line.

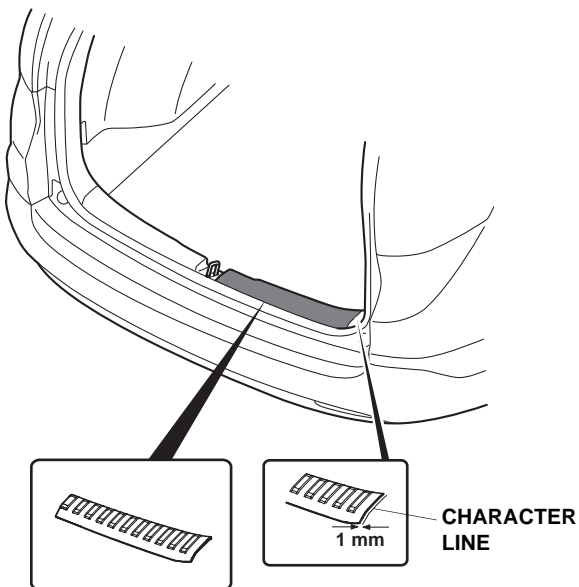


4. Fix the right trunk step garnish with masking tape to keep it in place.

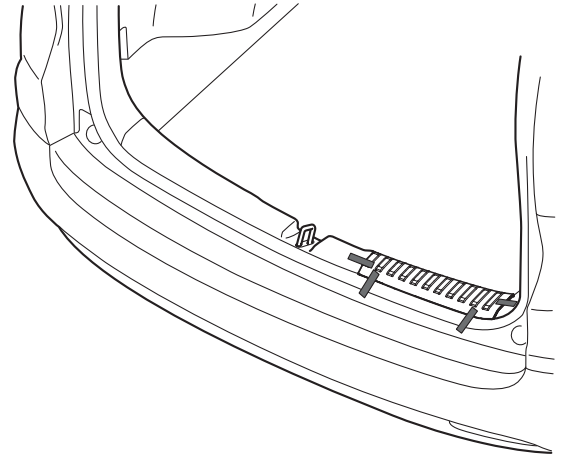


5. Carefully tape the area around the right trunk step garnish using a masking tape.

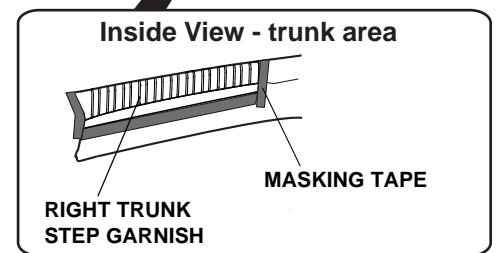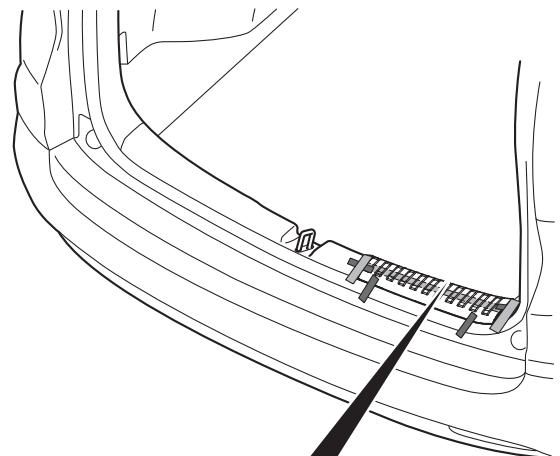


- Remove the right trunk step garnish and additionally apply 1 mm of tape to the inside of the surface.

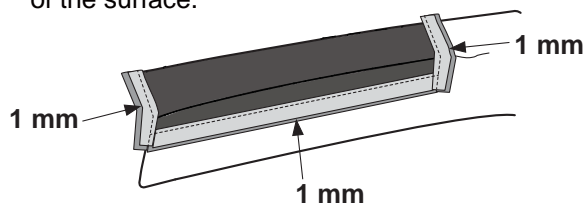


- Repeat steps 3 - 6 for the left trunk step garnish.
- Degrease the inside of both taped surfaces with the supplied cleaning tissue.

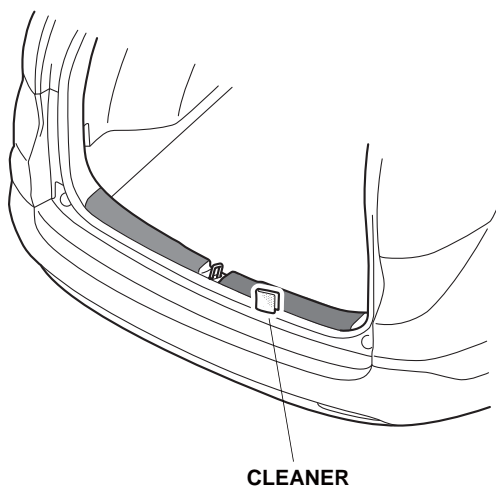


- Apply the primer very carefully once the degreased surface is completely dry. Be careful not to spill any primer to the outside of the taped areas.

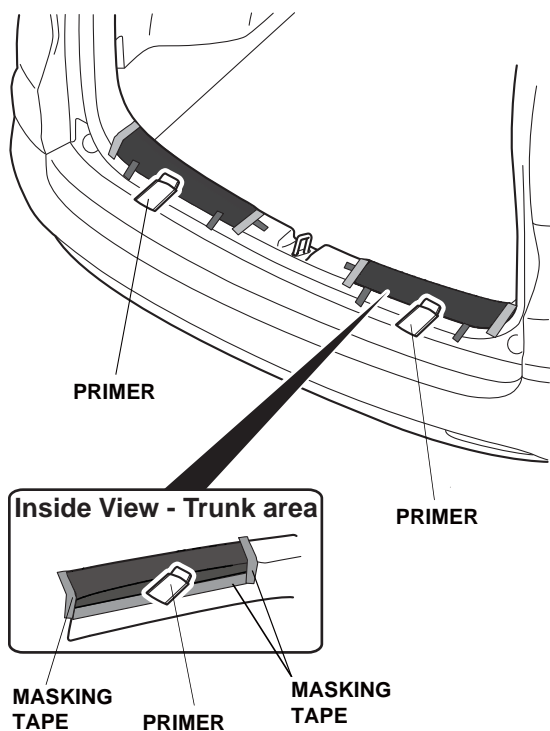




- Remove the masking tape around the primed surface once the primer has fully dried.

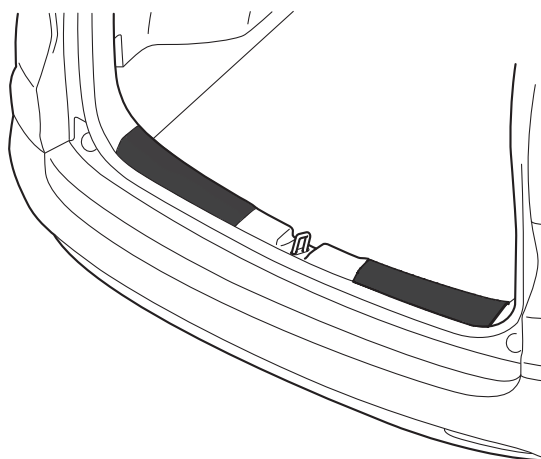


- Remove the inner tape adhesive backings of both right and left trunk step garnishes. Partially turn back the ends of the outer adhesive backings and temporarily secure them with masking tapes on the outside.

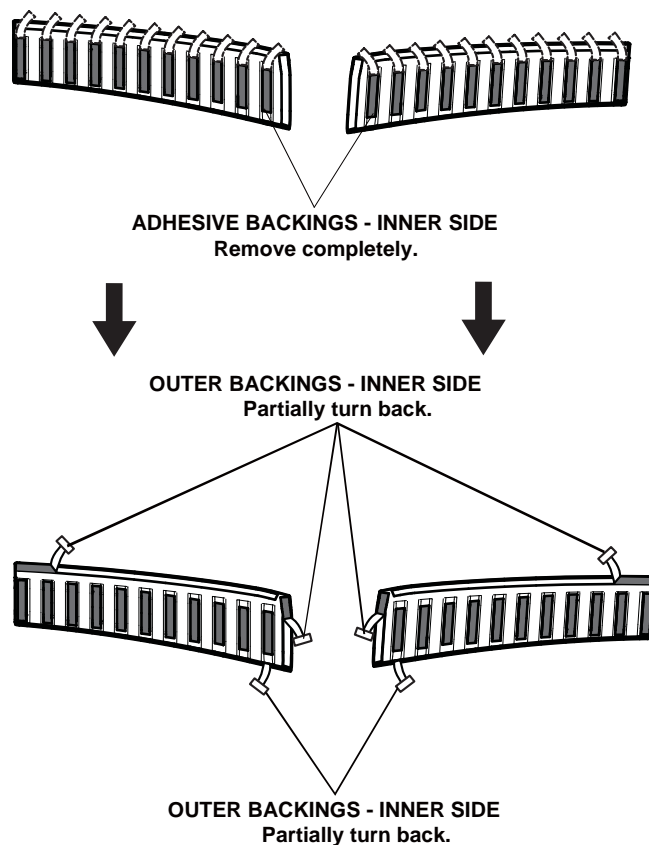

12. Position the right and left trunk step garnishes 1mm from the character line and lightly push the parts onto the primed surface.

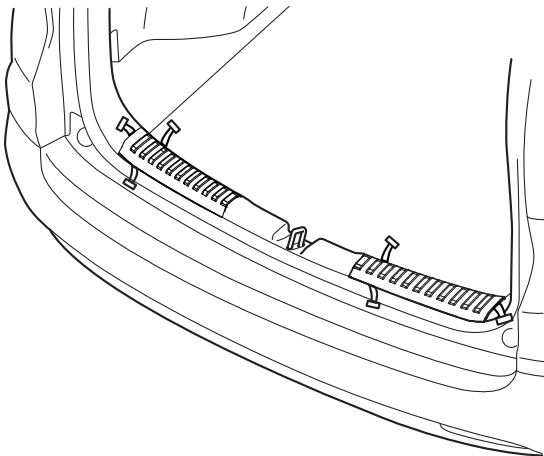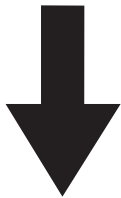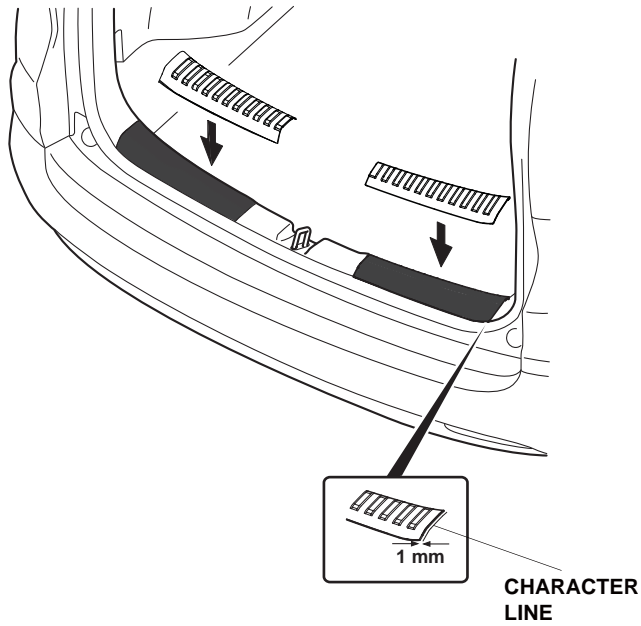

13. Remove the outer backings and press the both trunk step garnishes firmly to the surface.

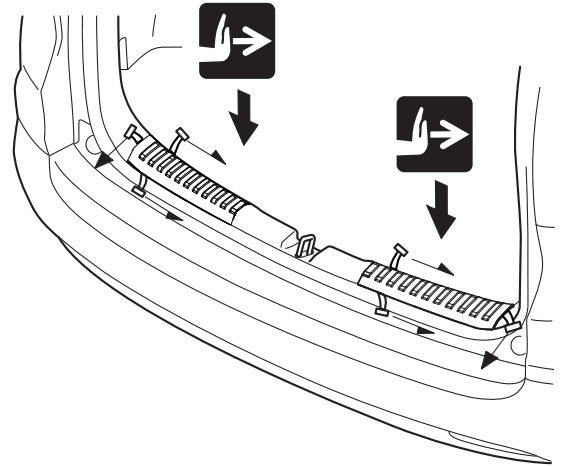

14. Reinstall the weatherstrip to the tailgate opening.