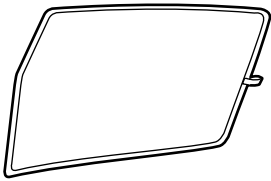

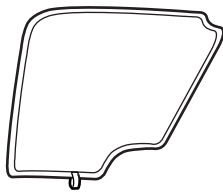


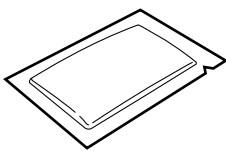
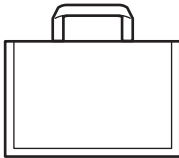


## Parts List

Rear sunshades (2)	Quarter sunshades (2)	Tailgate sunshades (2)
		
Frame clips (8)	Glass clips (6)	Primer
		
Sunshade bag		
		

## Tools and Supplies Required

- Scale
- Shop towel
- Felt-tip pen

## Before You Begin



### Customer Information

- In these instructions, the illustrations show the left side sunshade being installed. The same procedure applies to the right side sunshade.
- This kit should only be installed if the ambient air temperature is 15°C (60°F) or above. Heat the bonding surfaces with a hair dryer set on LOW when the ambient air temperature is below 15°C (60°F).
- Before attaching the sunshades, thoroughly clean the bonding surfaces with a contact cleaner. To prevent spilling, use a shop towel to apply the cleaner and allow it to dry thoroughly before installing the sunshades. Wipe up spilled cleaner at once.
- Be extremely careful not to damage the body paint finish.
- To allow the adhesive to “cure”, do not install the sunshade for 24 hours.


# Installation

## Install the rear door sunshade


1. Open the left rear door.
2. Check the positions where the frame clips are attached and clean the surfaces with a primer.
3. Measure each frame clips installation position to the dimensions shown.
4. Mark with a felt-tip pen the position of the measured dimension of the door sash.

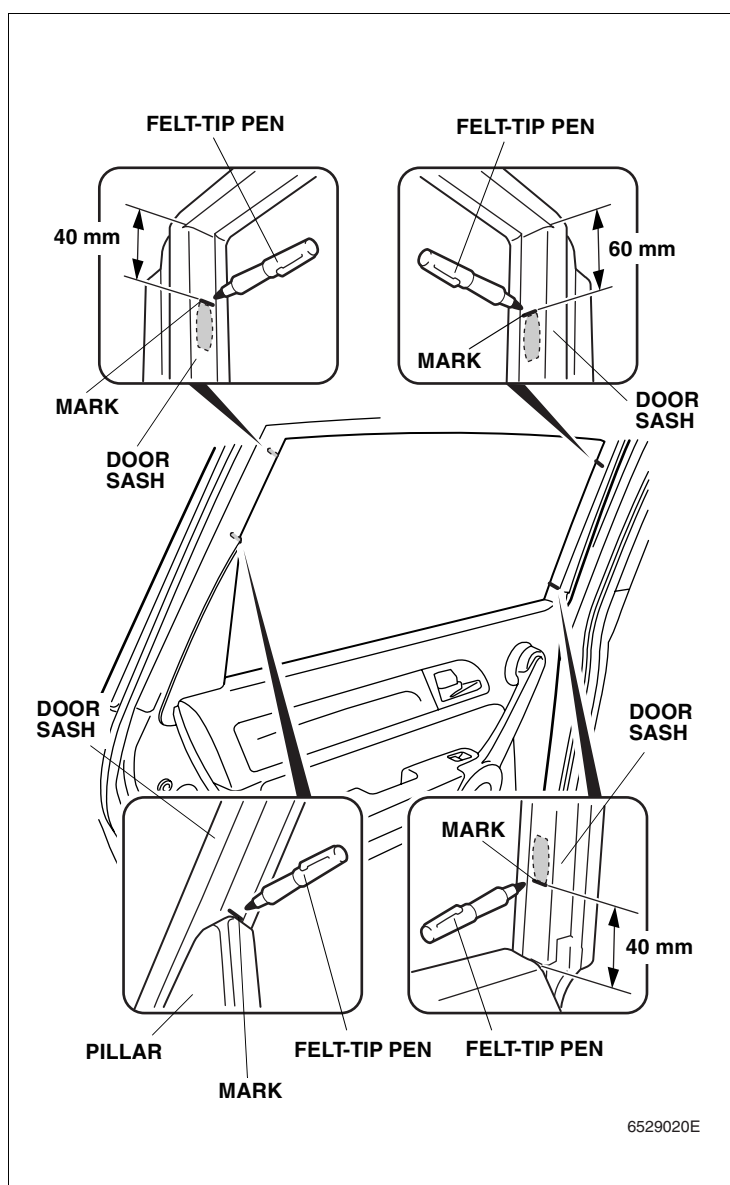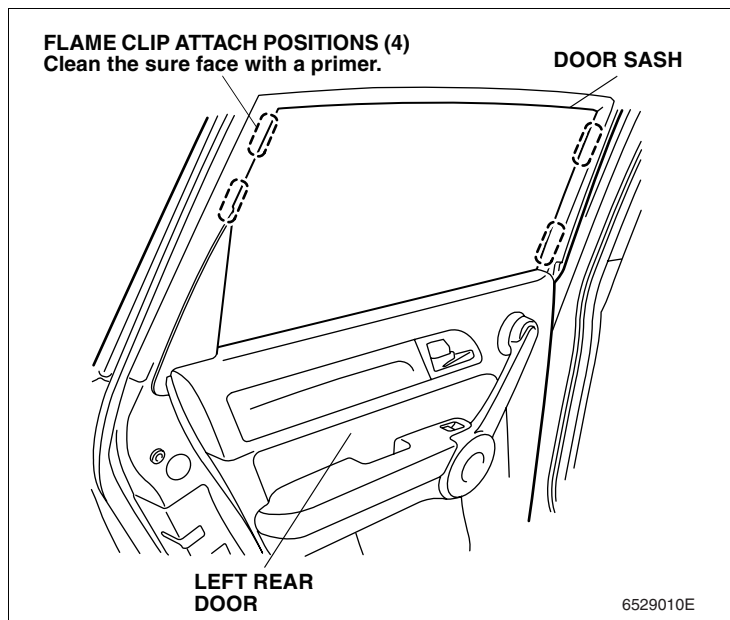

5. Remove the adhesive backing from each frame clip.
6. Align the edge of the frame clips with the mark on the door sash, and attach the frame clips on the door sash.
  - Hold the adhesive tape of the frame clip back side firmly against the door sash after attaching the frame clip.

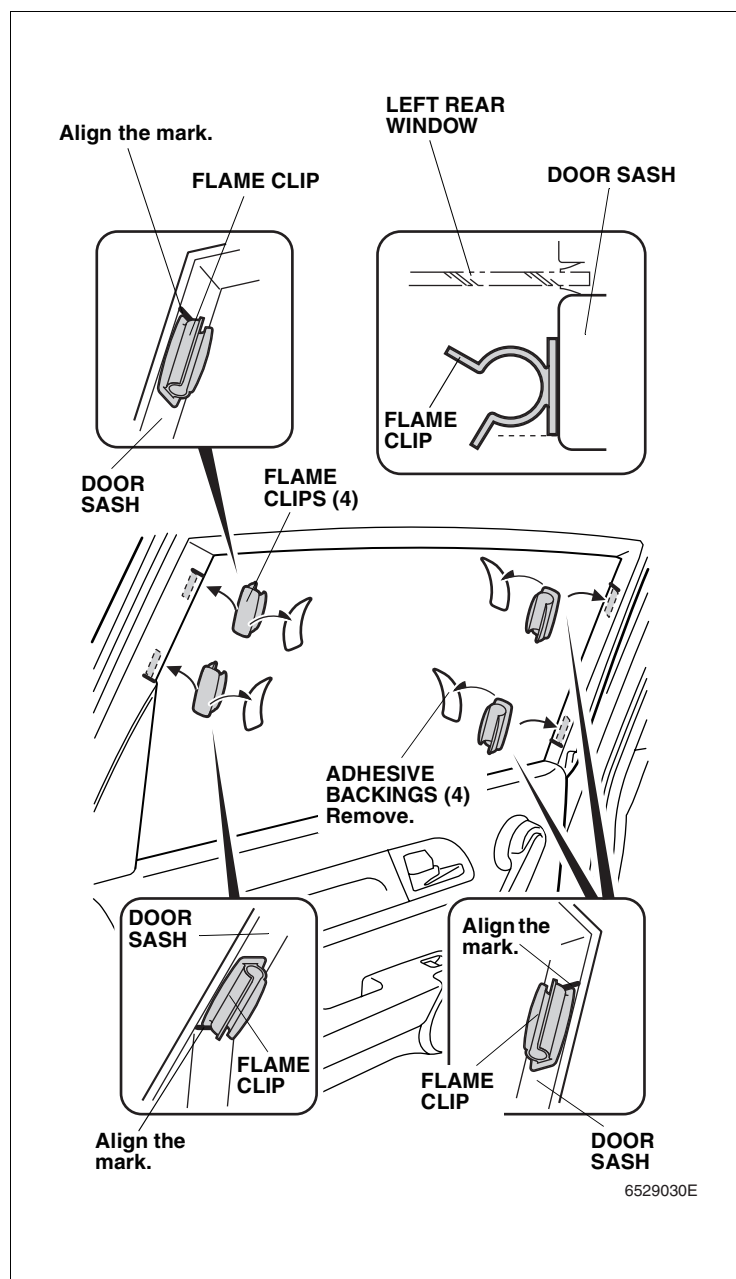


7. Install the rear sunshade.
8. Repeat the steps 1 through 7 on the right side.

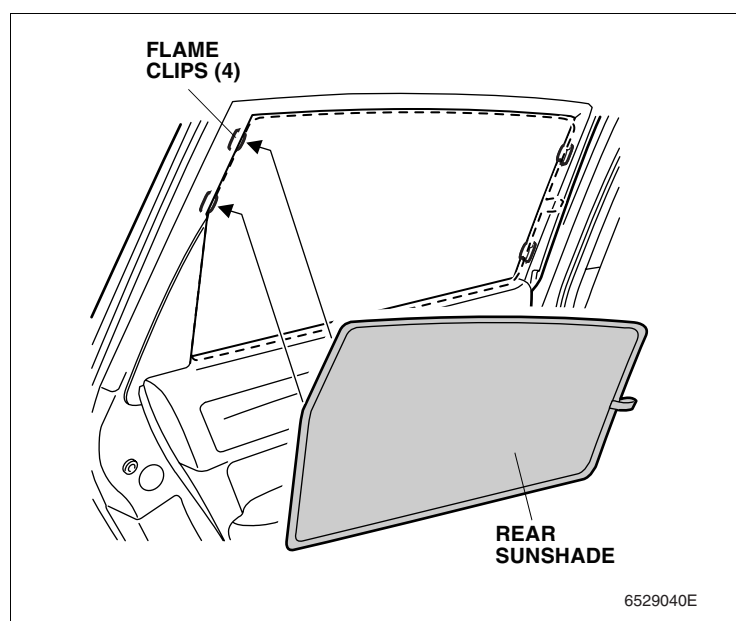


## Install the quarter sunshade


9. Check the positions where the glass clips are attached and clean the surfaces with a primer.

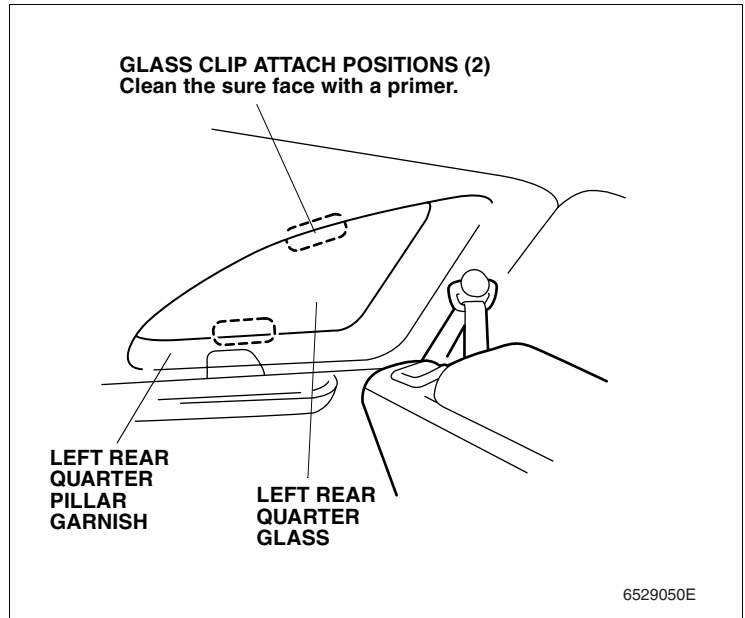

10. Remove the adhesive backing from glass clip.
11. Align the edge of the glass clip with the left rear quarter pillar garnish, and attach the glass clip on the left rear quarter glass as shown.
  - Hold the adhesive tape of the glass clip back side firmly against the left rear quarter glass after attaching the glass clip.

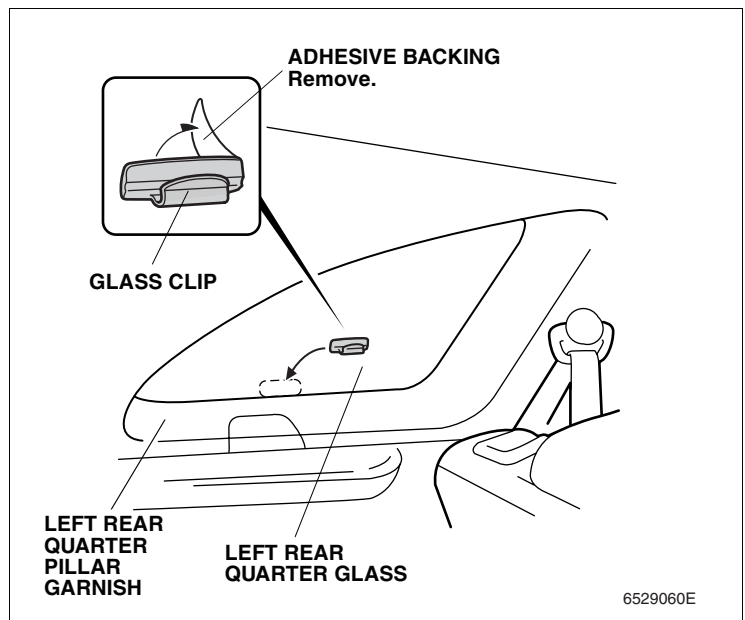


12. Remove the adhesive backing from glass clip and, install the glass clip to quarter sunshade as shown.
13. Install the quarter sunshade.
14. Repeat the steps 9 through 13 on the right side.

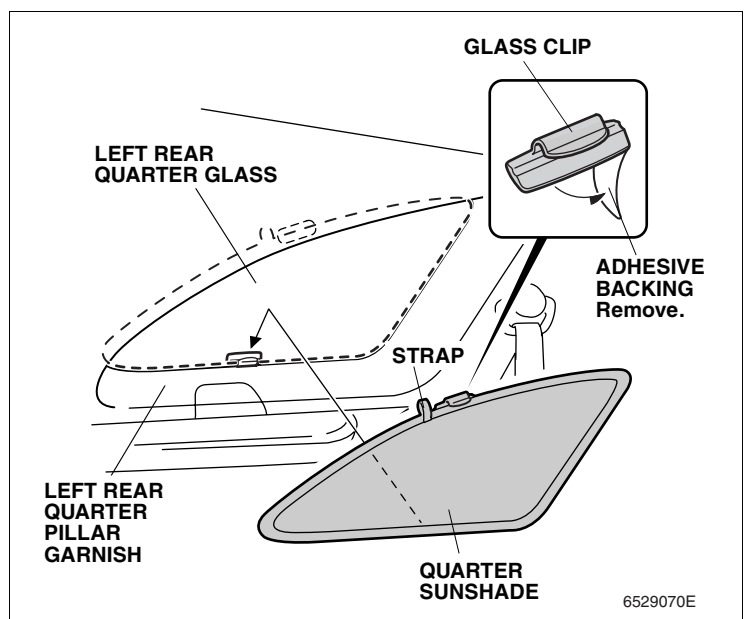

## Install the tailgate sunshade

15. Check the positions where the glass clip is attached and clean the surfaces with a primer.

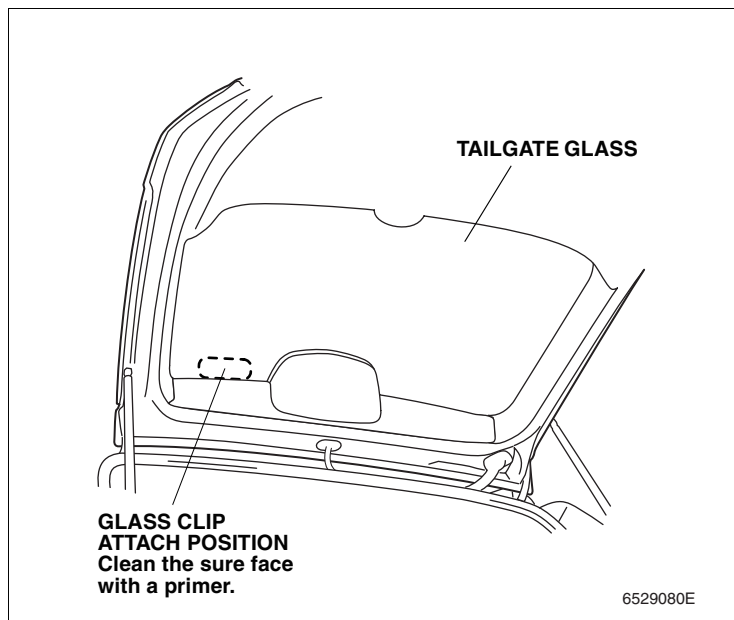

16. Remove the adhesive backing from glass clip and, install the glass clip to tailgate sunshade as shown.
17. Install the tailgate sunshade.
18. Repeat the steps 15 through 17 on the right side.

