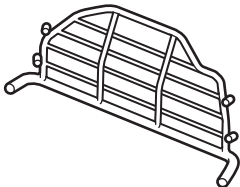
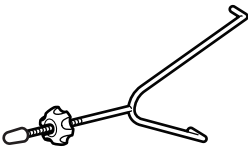
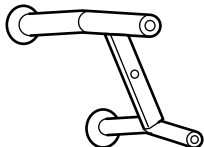
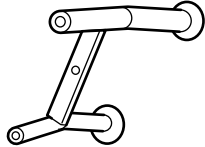

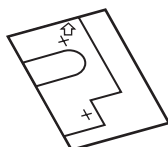


Parts List

<p>Upper dog guard</p> 	<p>Upper dog guard anchors (2)</p> 	<p>Right upper dog guard bracket</p> 
<p>Left upper dog guard bracket</p> 	<p>Grommets (4)</p> 	<p>Template</p> 

Tools and Supplies Required

- Electric drill (3 mm, 8 mm drill bit)
- gummed tape
- Eye protection (safety goggles, face shield, etc.)
- scissors
- file
- pushpin
- hexagon wrench
- Masking tape

Before You Begin

Symbol Messages

Tips on installation-related information and other are also provided in this manual using the word of **ADVICE**. Read it carefully.


ADVICE

- Tips to prevent malfunction or damage to the accessory
- Useful tips for the operator to service the accessory

Customer Information

- Install the accessory with care not to damage the vehicle body and the parts of the vehicle.
- This manual shows the upper dog guard installation procedure on the right side of the vehicle. Repeat the procedure on the left side.


Illustration of the Upper Dog Guard on the Vehicle

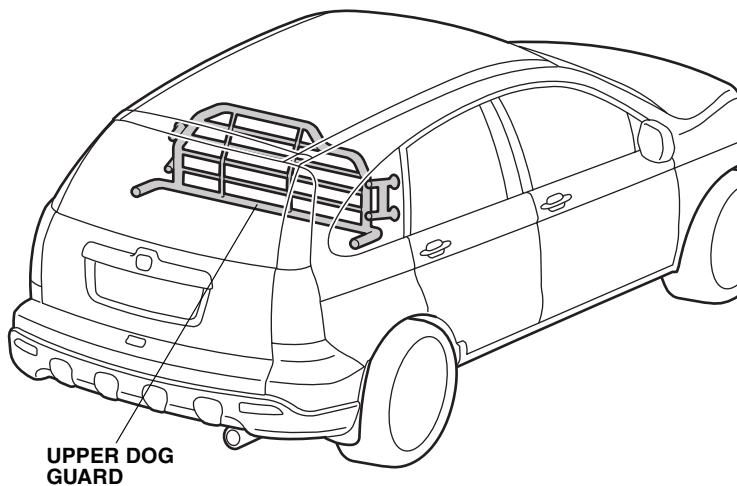


6223010Y

Installation

1. Cut out the template.

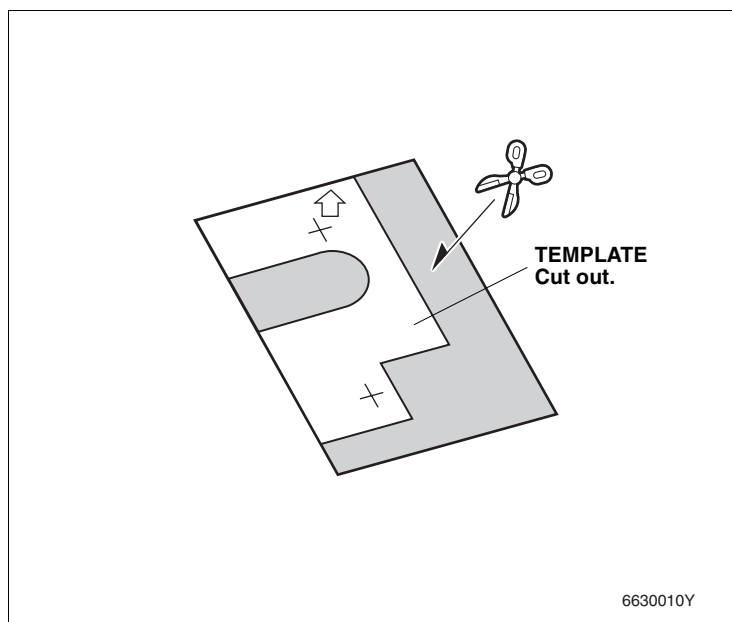


2. Shift the seat belt to the side.
Attach the template with the masking tape to the right rear quarter trim and marks with the push-pin as shown.

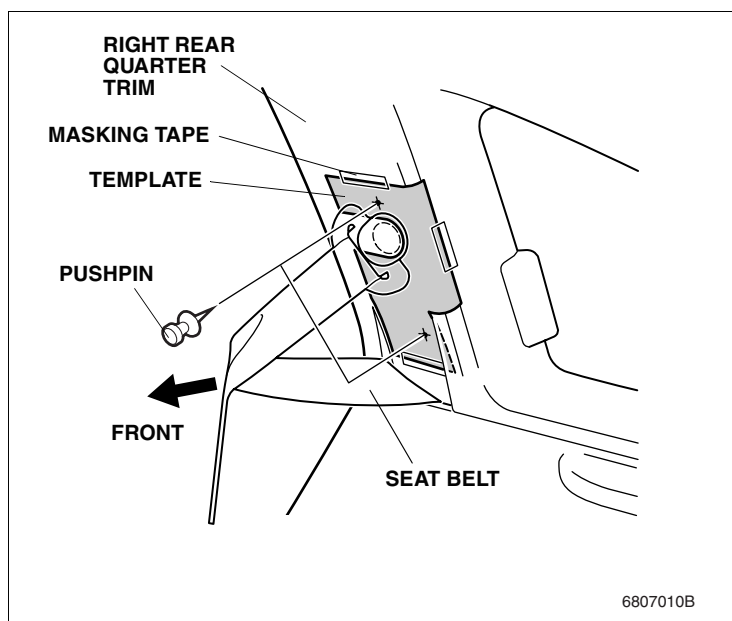


- Remove the template, drill holes with an electric drill and 3 mm drill bits at the positions marked in step 2, and then widen the holes to a diameter of 10 mm.

ADVICE


- Wear protective goggles when drilling holes.
- Wind gummed tape around the drill at a position 10 mm from the tip to prevent drilling too deep.
- Use a file or similar to remove any burr from the drilled holes.

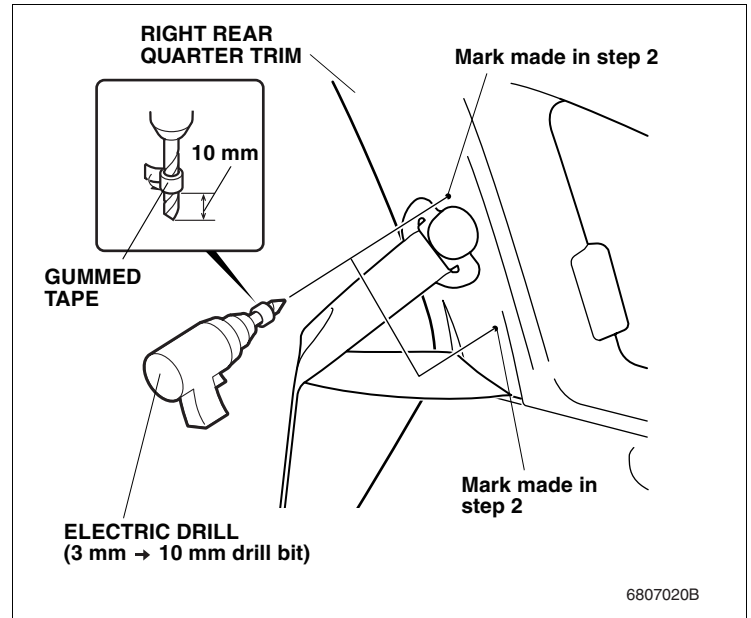


- Install two grommets in the holes drilled in step 3.
- Reverse the template and repeat the steps 2 through 4 on the left side.

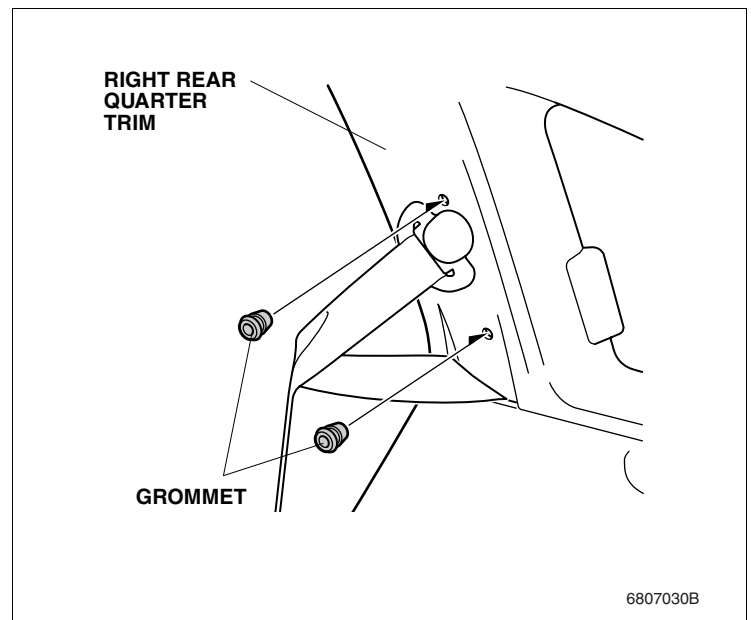


- Turn down the rear seat and put the upper dog guard into the vehicle.

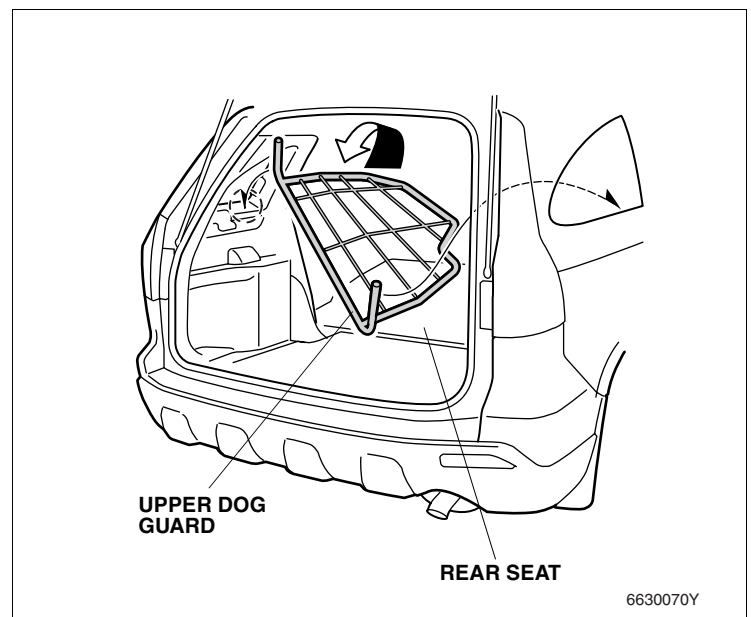


7. Rotate the upper dog guard and match it to the installation position.
8. Return the rear seat to its original condition.

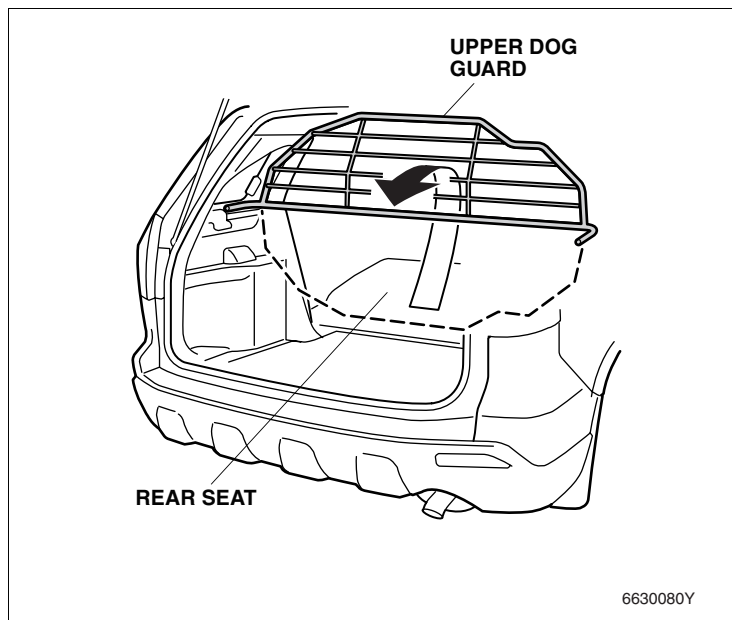


9. Remove the end cap and the knob from the upper dog guard anchor.

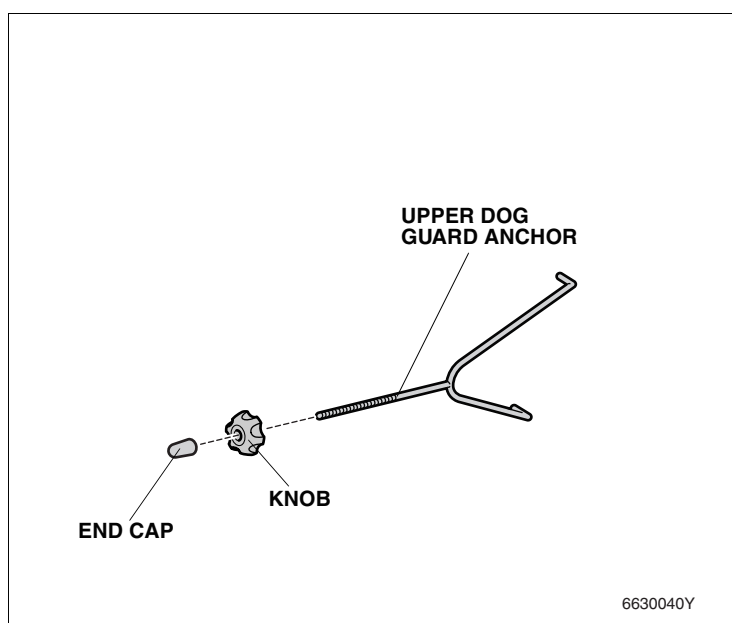


10. Remove the two torx screws and the two washers from the right upper dog guard bracket and tighten the stopper.

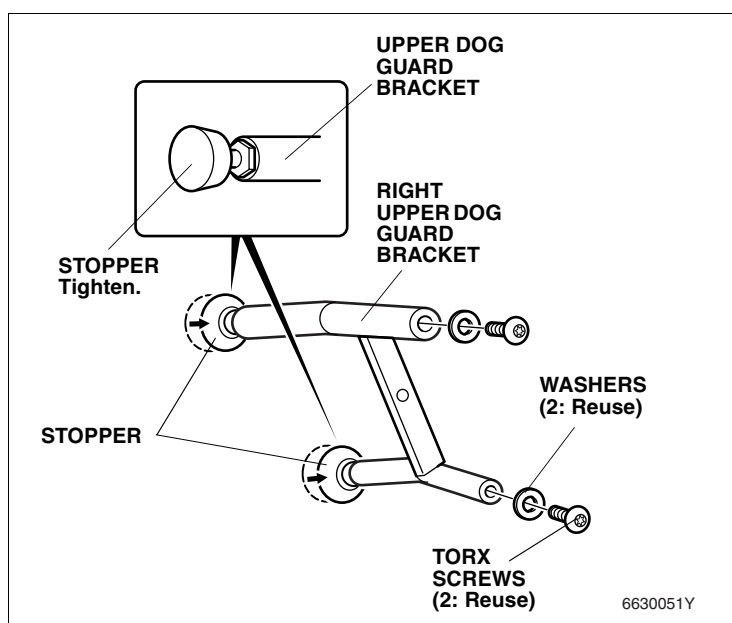

11. Insert the upper dog guard bracket to the upper dog guard mounting position and secure it with two torx screws and two washers.
12. Repeat the steps 9 through 11 on the left side.

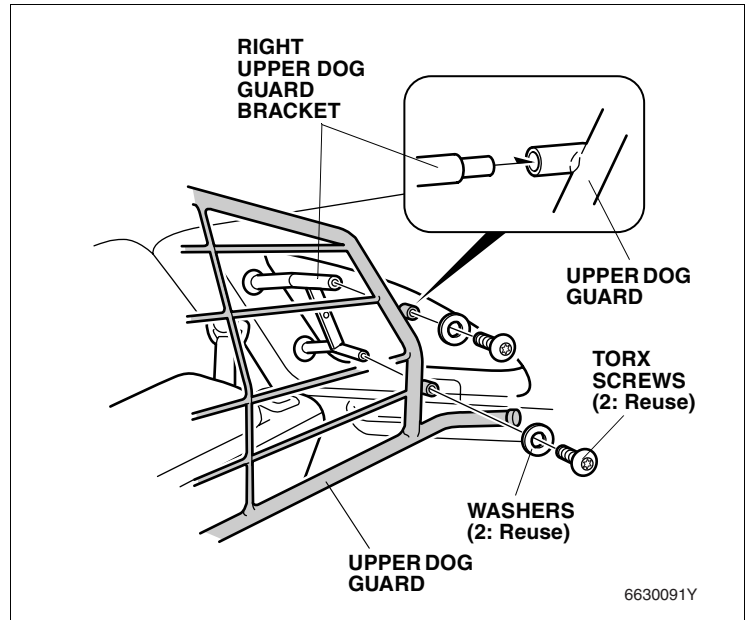


13. Install the upper dog guard anchor to the two grommets installed in step 4.

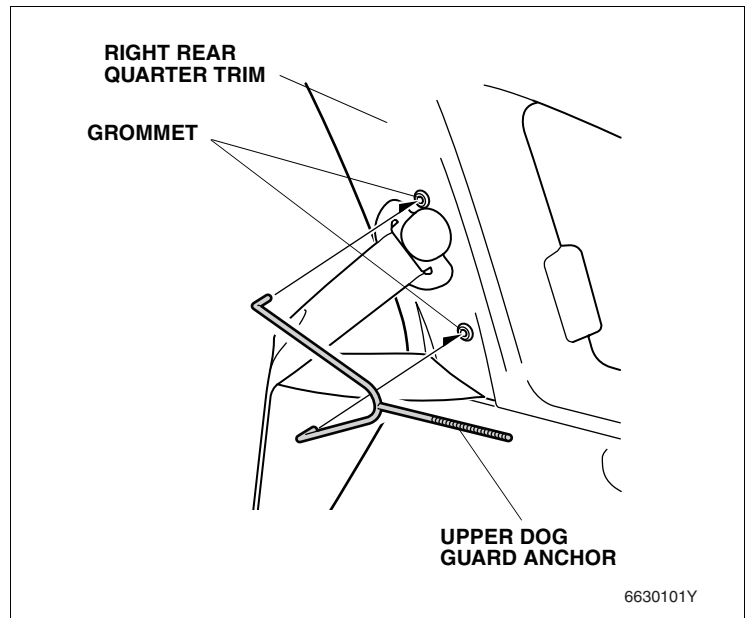

14. Pass the bolt part of the upper dog guard anchor through the hole of the right upper dog guard bracket.

ADVICE
Adjust the right upper dog guard bracket stopper length to match the distance from the right rear quarter trim to the upper dog guard.

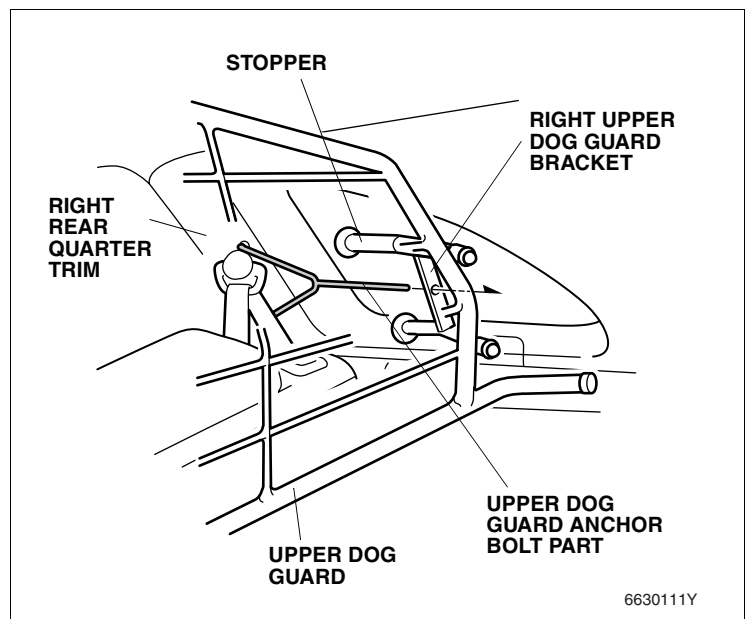

15. Loosely install the knob to the bolt part of the upper dog guard anchor and install the end cap.
16. Repeat the steps 13 through 15 on the left side.
17. Tighten the two knobs to the part of the upper dog guard anchor.
18. This completes the installation.

ADVICE
<ul style="list-style-type: none">• Confirm that the Torx screws and the knobs are tightened securely.• Confirm that the upper dog guard is not loose.

