
## CIVIC

## Parts List

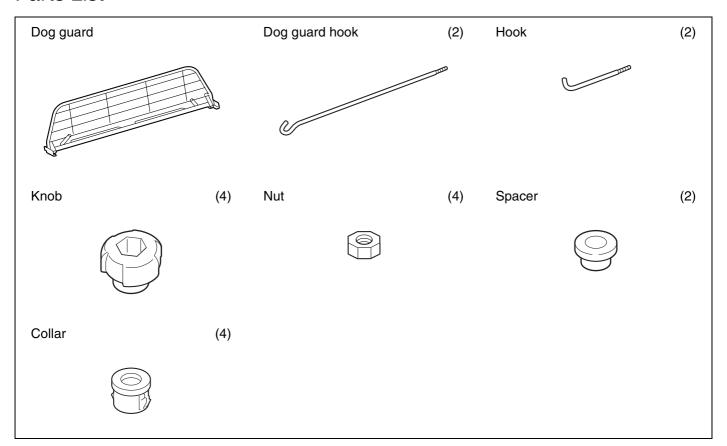

# Tool and Supplies Required

- Electric drill motor
- Drill bit (3 mm, 10 mm)
- File


# Before You Begin

## **Customer Information**


• Be careful not to damage the body.

#### Installation


- 1. Open the tailgate.
- When the vehicle is equipped with the tonneau cover, release the two hooks, and remove the tonneau cover. Turn the rear seat back to the front side.
  - Store the tonneau cover after removing it.

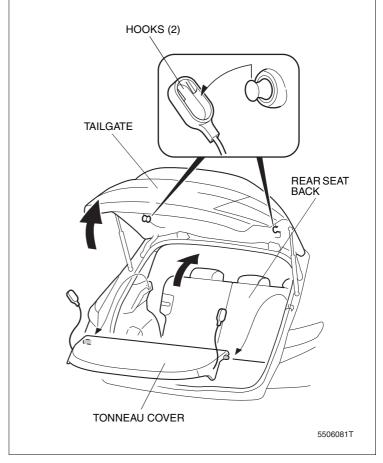


- 3. Measure the rear side garnish and mark it with a felt-tip pen.
- Drill the rear side garnish through the mark you just made using an electric drill motor (with 3 mm bit first, then finish drilling with 10 mm drill bit).
- 5. Repeat the procedure on the other side.
  - Remove the burrs thoroughly from the edge of the holes.

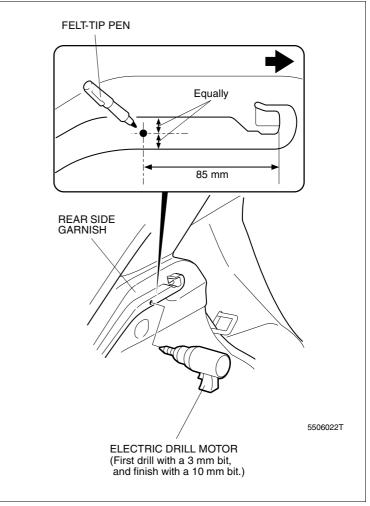


- 6. Install the spacer in the hole you made in the rear side garnish.
- 7. Repeat the procedure on the other side.

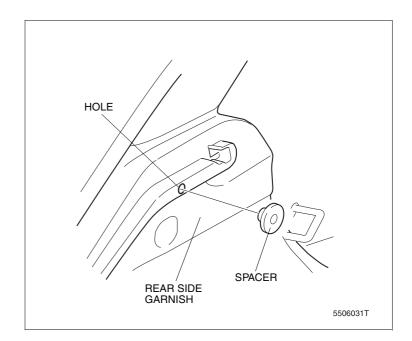


- 8. Insert the hook into the spacer mounted on the rear side garnish and turn the hook so its end points rearward of the car.
- 9. Repeat the procedure on the other side.

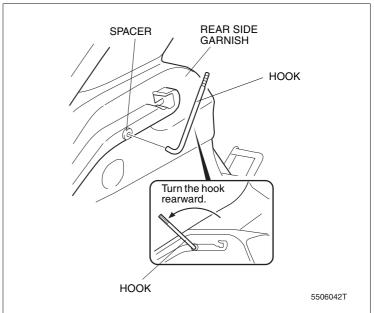


- Hook the dog guard on the hook that you just installed on the rear side garnish (right and left sides).
- 11. Raise the dog guard you just hooked on the hook by turning it forward and position it on the rear side garnish.

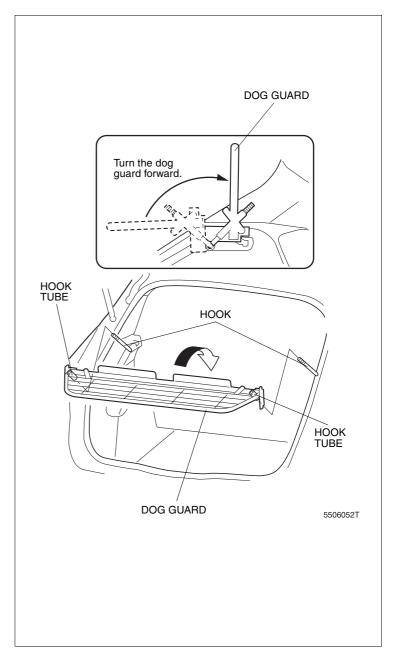

- 12. Install the collar on the end of the hook, that is out of the hook tube, and loosely tighten the knob on the hook.
  - Insert a nut into the knob before tightening
    it
- 13. Repeat the procedure on the other side.

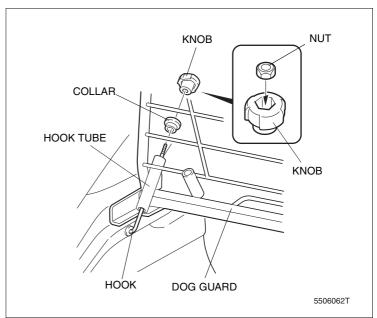

- 14. Insert the dog guard hook into the tube of the dog guard. Hook the dog guard hook on the vehicle's striker from the bottom.
  - Note the direction of the dog guard hook that is hooked on the vehicle's striker.
- 15. Install the collar on the end of the dog guard hook, that is out of the tube, and loosely tighten the knob on the hook.
  - Insert a nut into the knob before tightening
    it
- 16. Repeat the procedure on the other side.

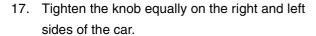

Do not tighten them excessively.

