


## **INSTALLATION INSTRUCTIONS**

FEB. 2017

DOG GUARD	CIVIC

## **GENERAL VIEW**

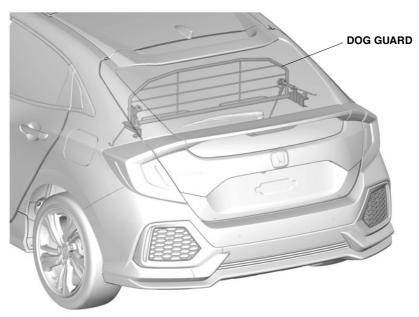

QF81401AT

# FOR YOUR SAFETY (Read carefully)

# Introduction of Symbol Messages

These symbols warn you about the possible hazards and explain how to avoid them. And give you some advices.

Gives helpful information or instructions to be followed in using the product.

**A** DANGER You will be killed or seriously hurt if you do not follow the instructions. **WARNING** You can be killed or seriously hurt if you do not follow the instructions. **A** CAUTION You can be hurt if you do not follow the instructions.

Gives advice to prevent damage to the product.

Indicates prohibited actions.



NOTICE

## Introduction of Icons

· These icons indicate the working place and the worker's vision.



The place for the vehicle.



The place for the instrument panel.

These icons indicate the necessary things for your safety and the work.



Wear eye protection.



Wear heavy gloves.



Work with an assistant.



Place the part on a blanket.



Remove any burrs.



Use the touch-up paint and dry.



Keep the parts and give it to the customer. (Not use)



Press firmly.



Tighten by specified torque.



Work perpendicularly.



Clean with the contact cleaner.

# Safety: General


- Observe all safety notes and precautions described in the Shop Manual in addition to those described in this Installation Instructions. Be extremely careful for your safety and safety of others particularly.
- · Be careful not to damage the vehicle and the parts.
- Note the locations of the parts before removing them so that they can be reinstalled in their original positions properly.
- The illustrations may differ a little from the actual accessories for the design change of the vehicle.

# Safety: For the Accessory

• Always use the parts and tools specified in the installation instructions.

## **PARTS LIST**

## Dog Guard Kit

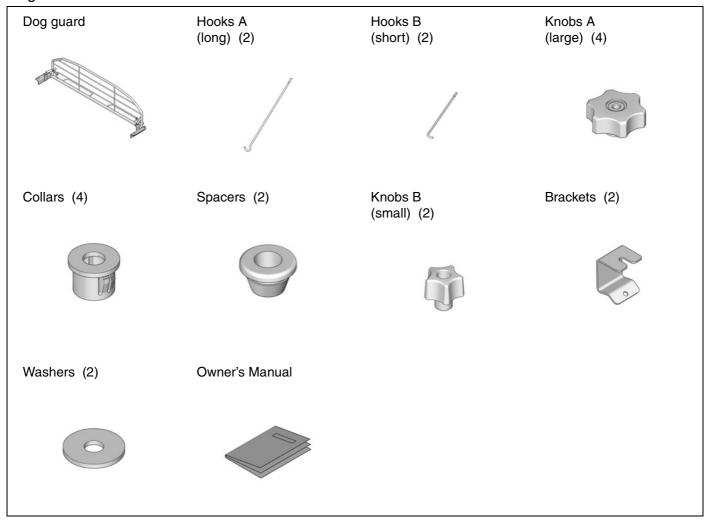

# **TOOLS AND SUPPLIES REQUIRED**

- File
- Pushpin
- · Masking tape

- Felt-tip pen
- Ruler
- 3 mm, 6 mm, 8 mm, and 10 mm Drill bits
- Drill
- Tape
- Eye protection (face shield, safety goggles, etc.)


# **INSTALLATION**


# Removing the Vehicle Parts

- 1. Fold down the rear seat-backs.
- 2. Open the tailgate.






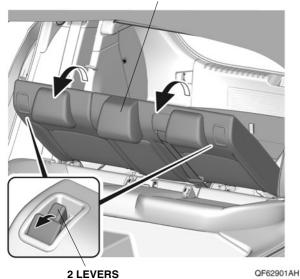




#### <With tonneau cover>

3. Release the tonneau cover.

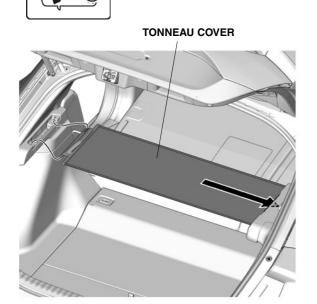


4. Remove the tonneau cover.

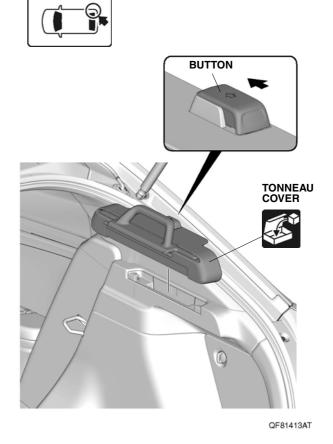

# Installing the Dog Guard


5. Mark the left rear pillar trim.

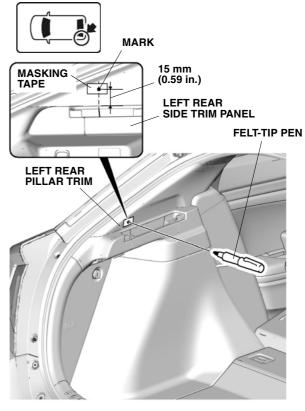

QF81402BT

QF81414AT


6. Pierce the left rear pillar trim.

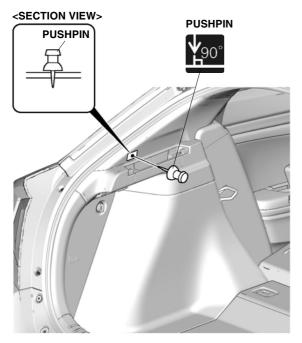

QF81403BT


- 7. Drill the left rear pillar trim.
- 8. Remove the masking tape.



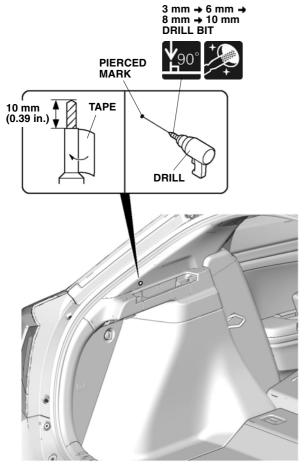


QF81404BT

9. Install the spacer.

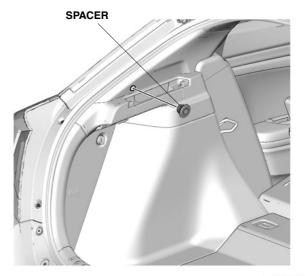

QF81405AT

10. Repeat same procedures for other side.

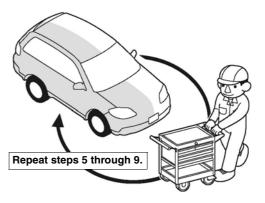


Q9D1014AM


## 11. Position the dog guard.



## DOG GUARD

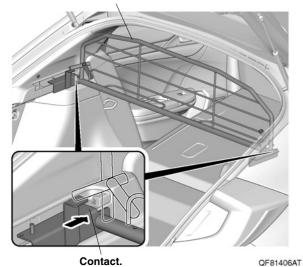


## 12. Install the brackets.

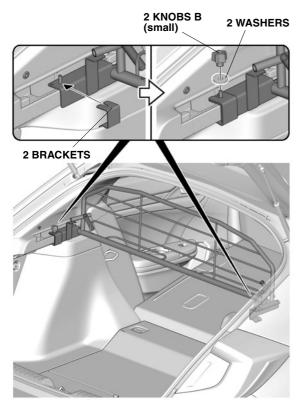

QF81407CT


## 13. Install the hook B.




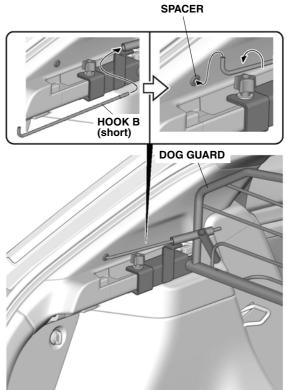

QF81408BT


## 14. Loosely install the knob A.



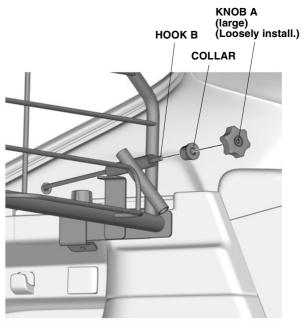


QF81409AT

15. Repeat same procedures for other side.

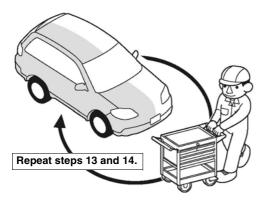


Q9D1014AM

16. Install the hook A.

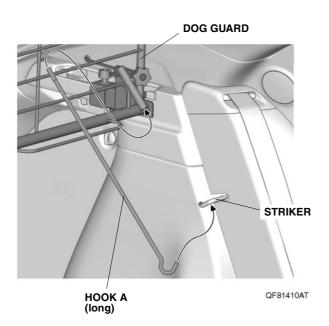


17. Loosely install the knob A.

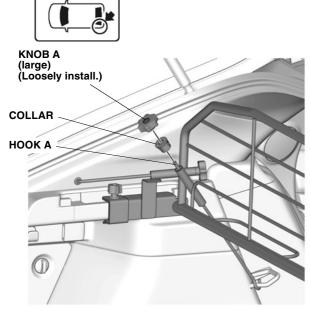


QF81411AT


18. Repeat same procedures for other side.

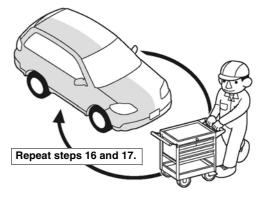

Q9D1014AM

19. Tighten the knobs A.



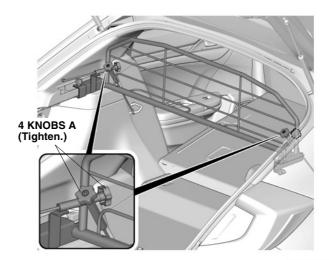


QF81412AT

20. Raise the rear seat-backs.

## Check After Installation

21. Check that all parts are installed properly.

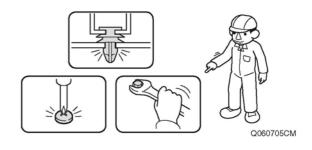

# Please pass your customer the following things.

· Owner's Manual