FOOT LIGHTS	*CIVIC Type R*

GENERAL VIEW

<LHD models>

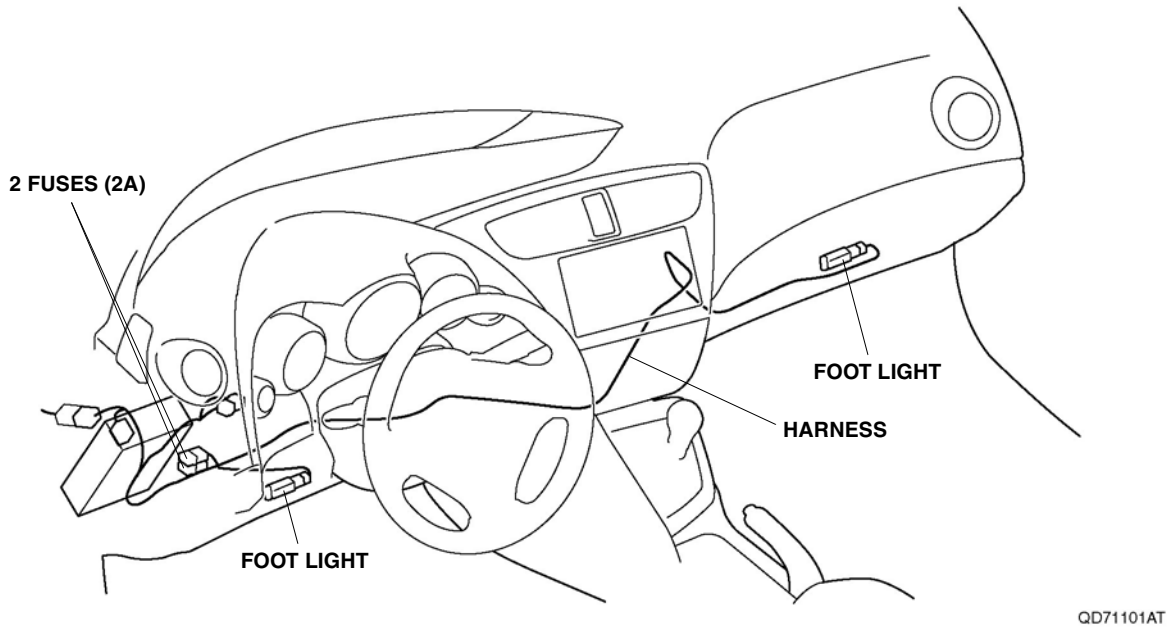

<RHD models>

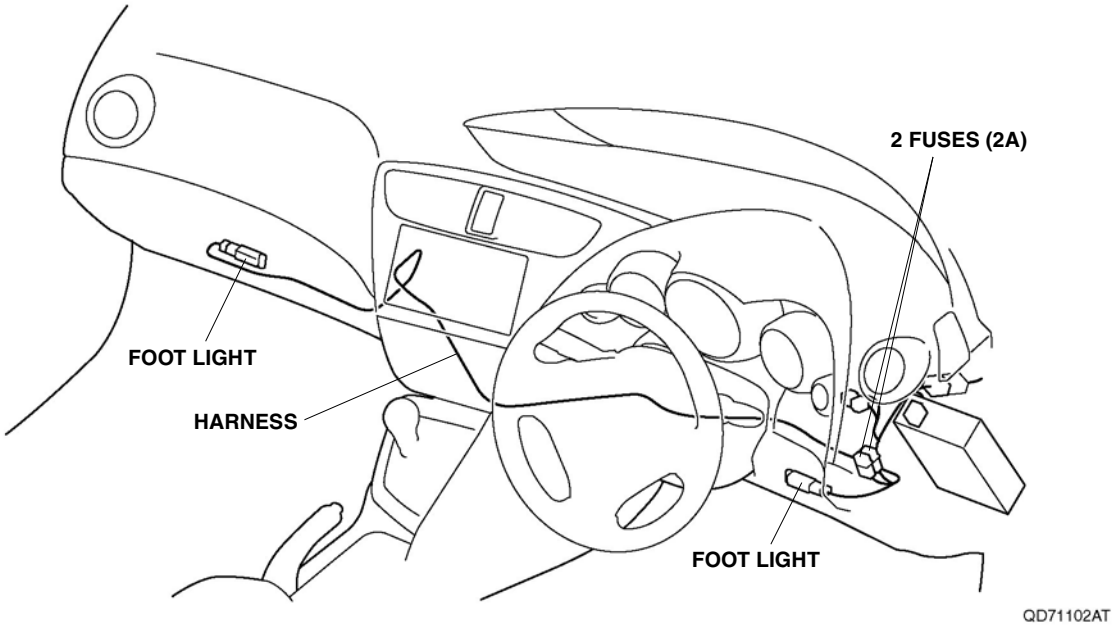

© Honda Access Corp. 2015

FOR YOUR SAFETY (Read carefully)

Introduction of Symbol Messages

- These symbols warn you about the possible hazards and explain how to avoid them. And give you some advices.

⚠ DANGER	You will be killed or seriously hurt if you do not follow the instructions.
⚠ WARNING	You can be killed or seriously hurt if you do not follow the instructions.
⚠ CAUTION	You can be hurt if you do not follow the instructions.
NOTICE	Gives advice to prevent damage to the product. Gives helpful information or instructions to be followed in using the product.
	Indicates prohibited actions.

Introduction of Icons

- These icons indicate the working place and the worker's vision.

 The place for the vehicle.

 The place for the instrument panel.

- These icons indicate the necessary things for your safety and the work.

Wear eye protection.

Wear heavy gloves.

Work with an assistant.

Place the part on a blanket.

Remove any burrs.

Use the touch-up paint and dry.

Keep the parts and give it to the customer.
(Not use)

Press firmly.

Tighten by specified torque.

Work perpendicularly.

Clean with the contact cleaner.

Wire Harness Routing Precaution

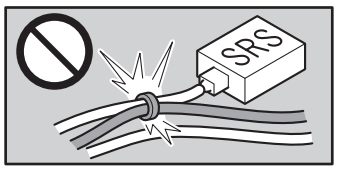

Do not clamp the accessory harness and SRS harness together.

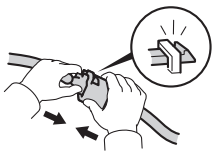

Connect the connectors and terminals securely until they lock.

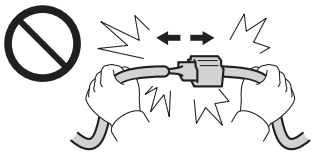

Do not pull the harness to disconnect the connectors.



Reinstall the connectors to the original positions if they are removed.

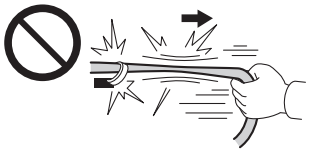

Do not pull the harness strongly.

Secure the accessory harness to the specified position, not to hang down.

Do not pinch the harness with the parts.

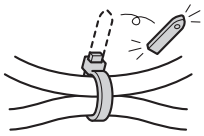

Cut off the excess of the wire ties.

Safety: General

- Observe all safety notes and precautions described in the Shop Manual in addition to those described in this Installation Instructions. Be extremely careful for your safety and safety of others particularly.
- Be careful not to damage the vehicle and the parts.
- Be extremely careful to the handling of the retaining tabs and clips particularly.
- Note the locations of the parts before removing them so that they can be reinstalled in their original positions properly.

Safety: For Electric Parts

- Do not perform the installation of the accessories with having connected negative cable of the battery.

Safety: For the Accessory

- Always use the parts and tools specified in the installation instructions.
- Do not perform installation work and attaching work at the place where gets the direct rays of the sun or the dust appears.
- Always install these accessories at the ambient air temperature 15°C (60°F) or above.
- Heat the accessories and bonding surfaces if the ambient air temperature is below 15°C (60°F).
- Attach the accessories by pressing it firmly with the palm of your hand. Be careful not to damage the accessories and the vehicle parts.
- Carefully place the double-sided adhesive tape on the proper position. Once the double-sided adhesive tape touches the surface, do not try to detach and relocate it. If you attempt to move after it touches the surface, you will damage the part before the adhesive will give way.

PARTS LIST

Foot lights (2)

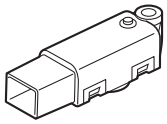

Washer

(May not used)

Harness

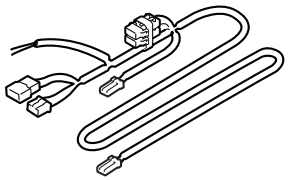

Wire ties A (8)

(Some may not used)

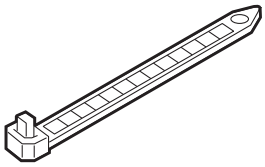

Wire ties with clip (2)

(Some may not used)

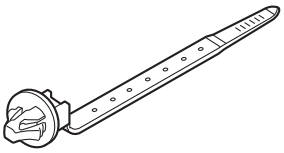

Joint connector covers (2)

Joint connector cases (2)



Self-tapping screws (2)

Wire ties B (2)

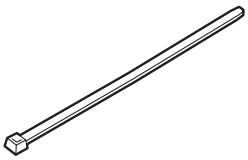

Fuse label

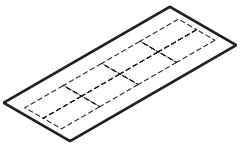

Urethane tape



Aluminum tape

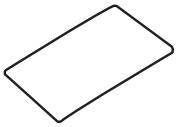

Wire tie with holder

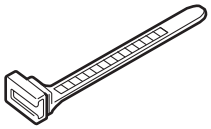

Template

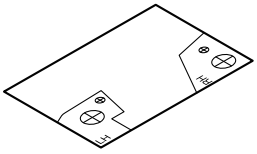

TOOLS AND SUPPLIES REQUIRED

- Phillips screwdriver
- Pliers
- Ruler
- Electrical tape
- File
- Shop towel
- Steel wire
- 3 mm, 5 mm, 6 mm, and 9 mm Drill bits
- Ratchet
- Nippers
- Felt-tip pen
- Drill
- Handy remover
- Tape
- Utility knife
- Eye protection (face shield, safety goggles, etc.)
- 10 mm Socket
- Scissors
- Pushpin
- 12 mm Hole saw
- Contact cleaner
- White marker
- Masking tape

INSTALLATION

How to Use the Contact Cleaner

- Using contact cleaner on a shop towel, thoroughly clean the areas where the accessories will be attached.

NOTICE
• Always use the contact cleaner. • Do not apply the cleaner to the object of the work directly. • Completely dry the cleaned areas before attachment work.

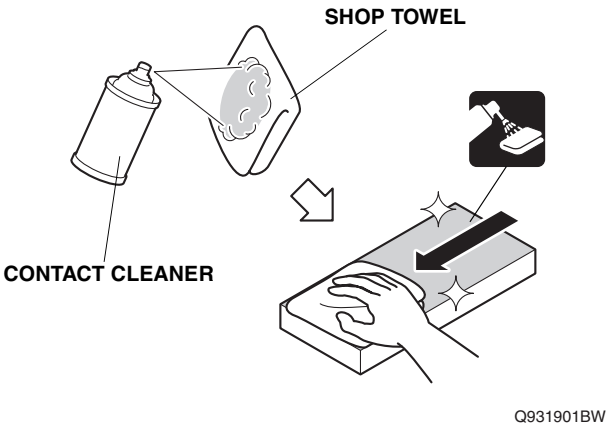

Disconnecting the Battery Cable

1. Make sure that you have the anti-theft code for the audio/navigation system. Write down the customer's radio station presets. Record some settings of the vehicle if necessary.
2. Disconnect the negative cable from the battery.

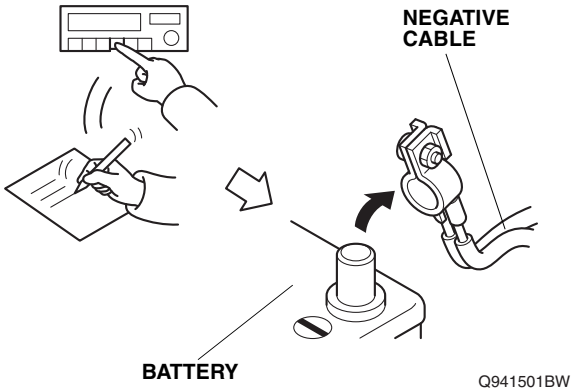

Removing the Vehicle Parts (LHD)

• LHD models	To step 3
• RHD models	To step 53

<LHD models>

3. Remove the passenger's under cover.



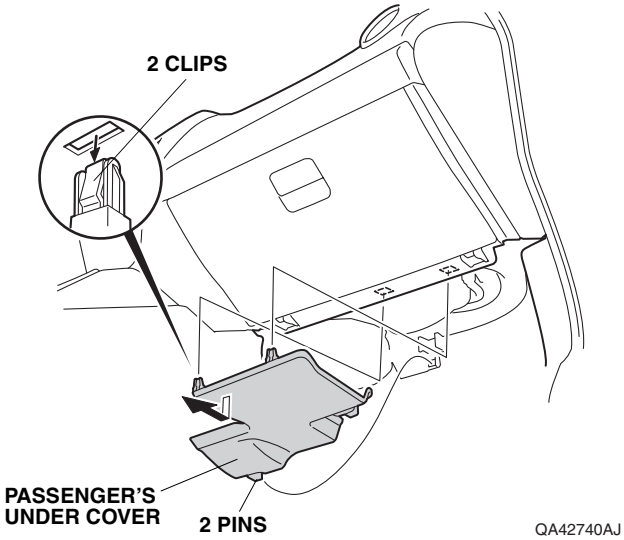

4. Remove the bolts.

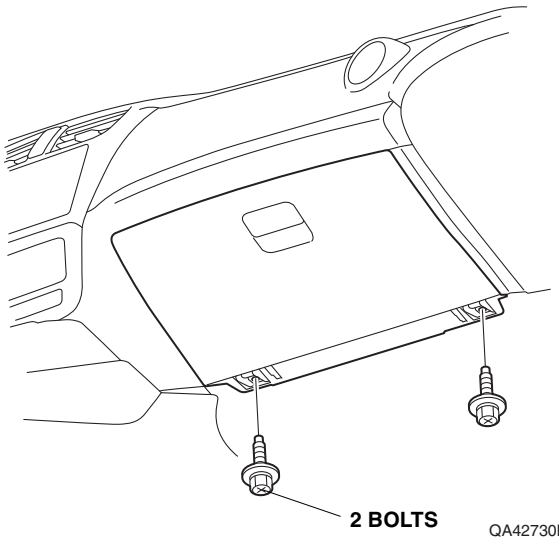

5. Remove the glove box.

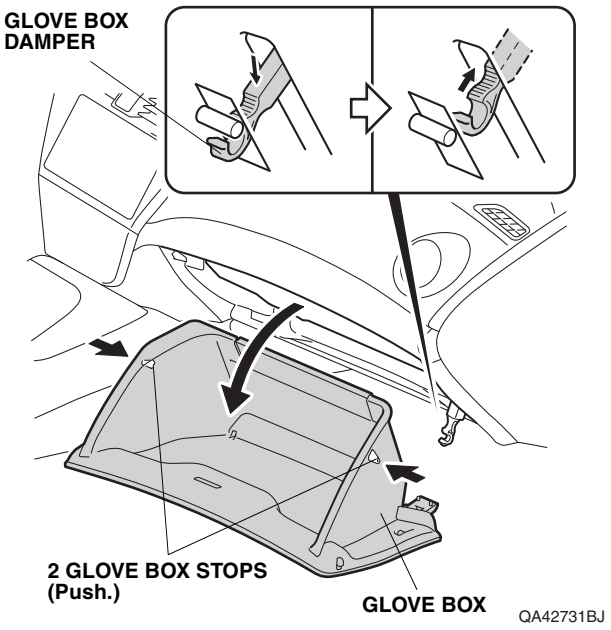

6. Remove the driver's outer dashboard trim.

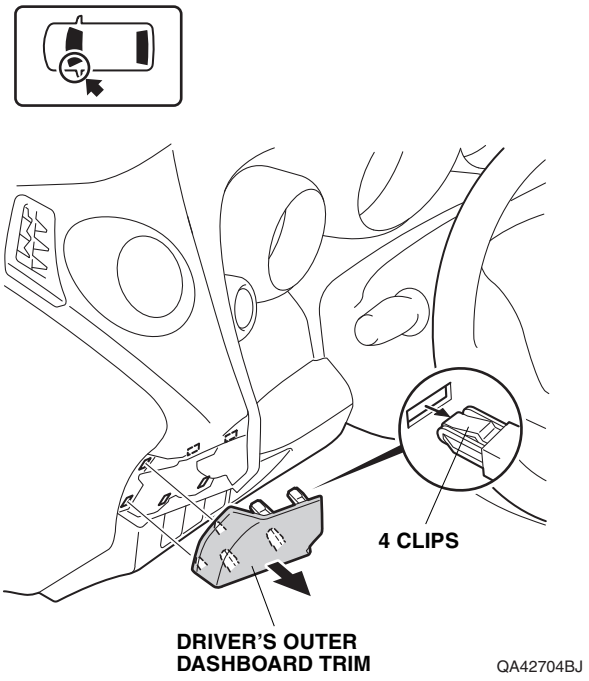

7. Remove the driver's dashboard lower cover.

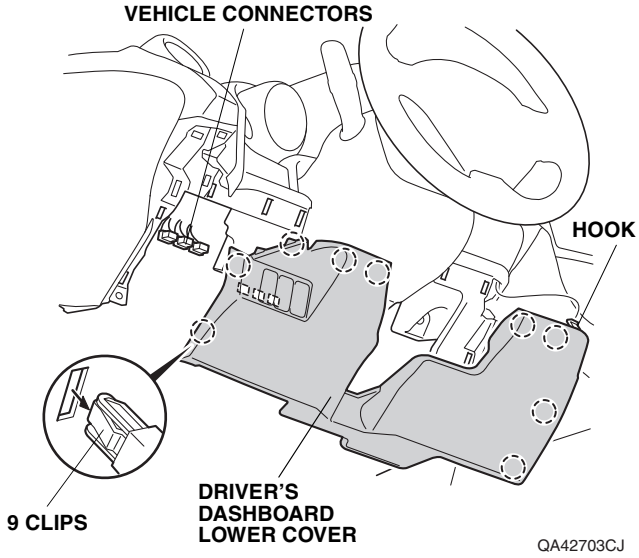

8. Remove the driver's instrument side lid.

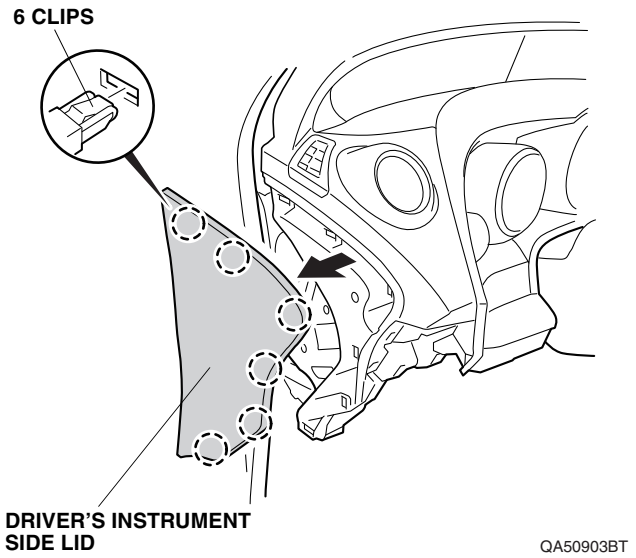

9. Attach the tapes to protect the vehicle.

NOTICE
• Do not remove the tapes until after the reinstallation.



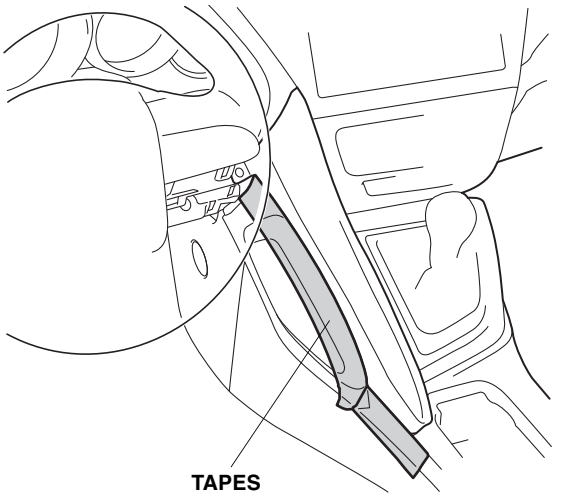

QA42764AJ

10. Remove the driver's inner dashboard trim.

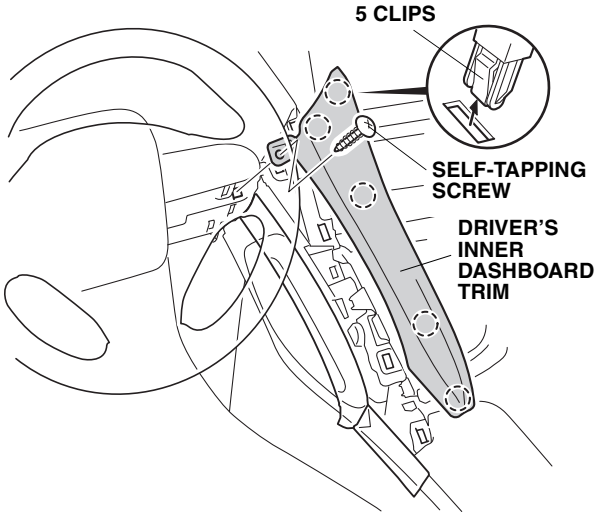

QA42705BJ

11. Remove the blind.



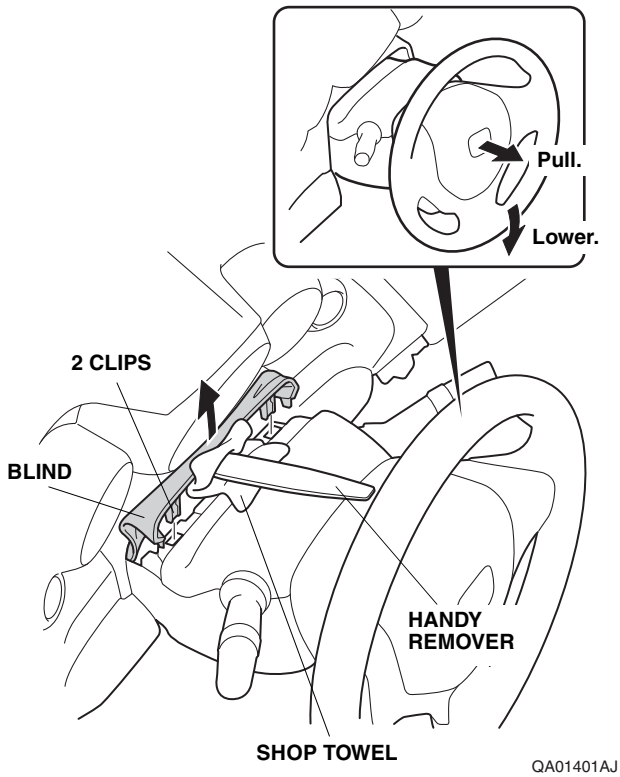

QA01401AJ

12. Remove the subdisplay visor.

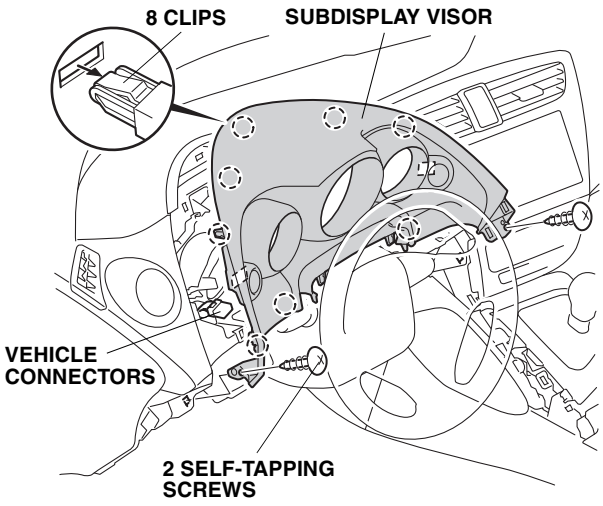

QA42706CJ

Routing the Harness (LHD)

13. Attach the fuse labels.

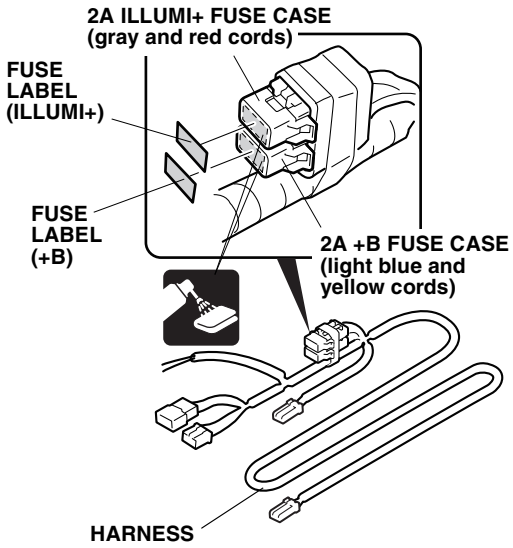

QA51002AT

14. Mark the lower column cover.
15. Pierce the lower column cover.

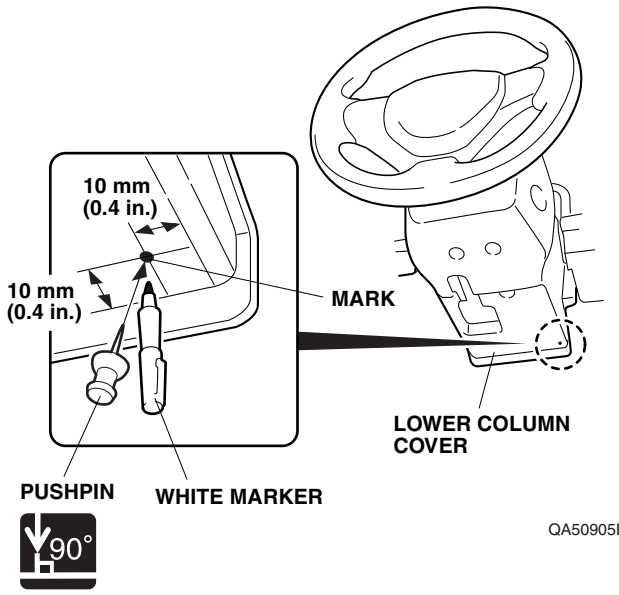

QA50905BT

16. Drill the lower column cover.

QA50906BT

17. Release the fuse box.



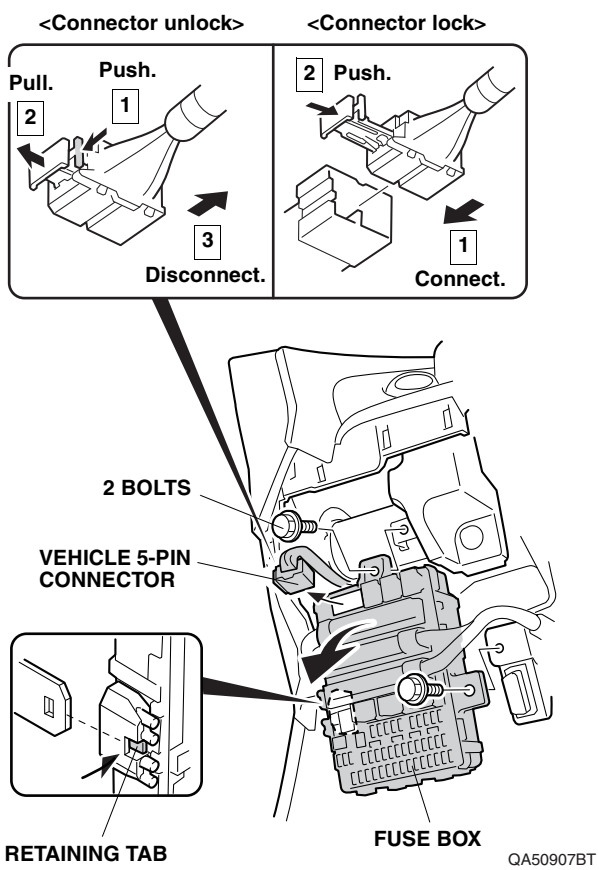

QA50907BT

18. Connect the harness connectors.
19. Reinstall the fuse box.

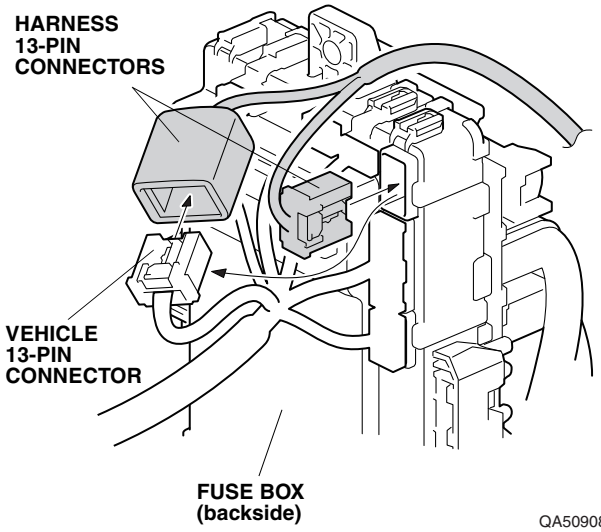

QA50908AT

20. Secure the harness.

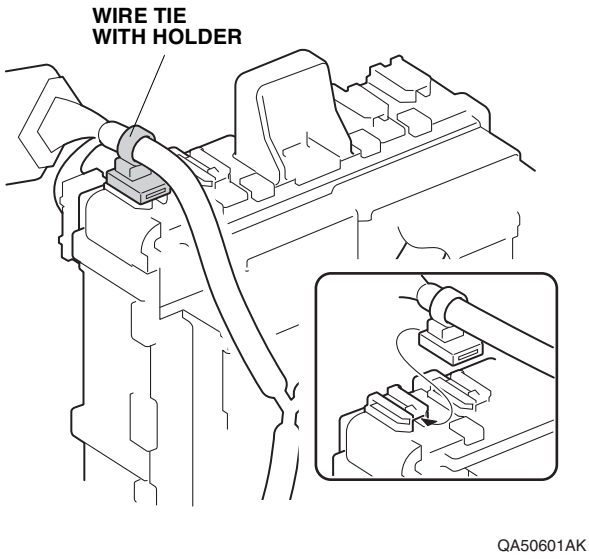

QA50601AK

21. Route the harness.

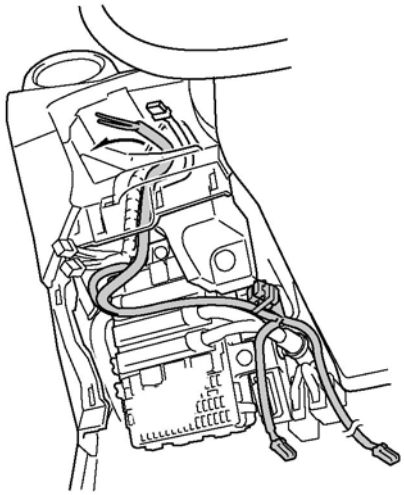

QD71103AT

22. Cut the tape.

NOTICE
• Do not damage the vehicle harness.



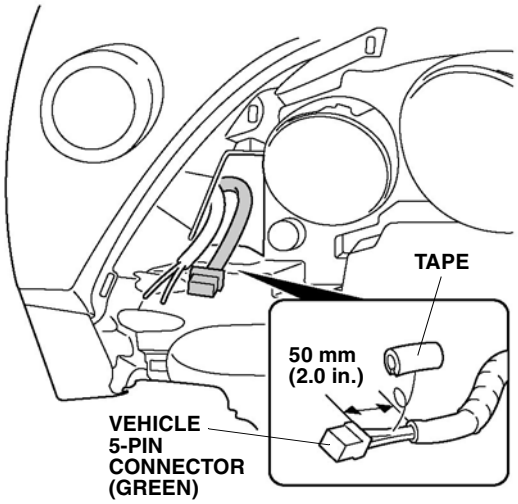

QD71104AT

23. Connect the harness cords.

NOTICE
• Make sure to correctly connect the cord.

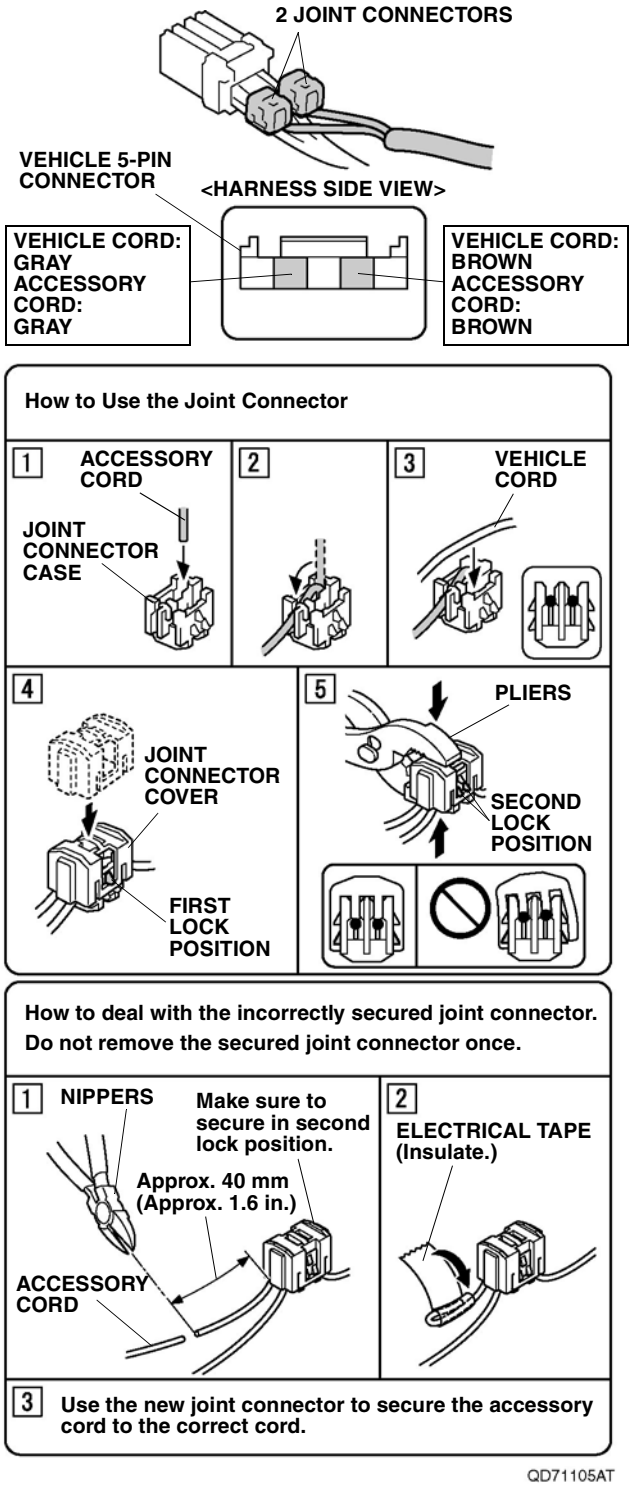

24. Wrap the urethane tape.
25. Secure the harness cords.

NOTICE
• Wrap the electrical tape around the tubes and tapes of the vehicle harness.

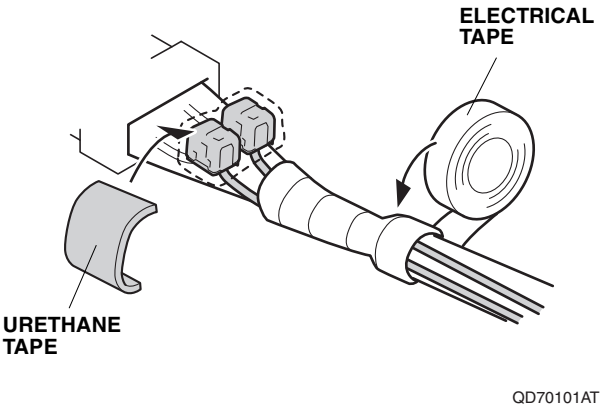

26. Secure the harness.

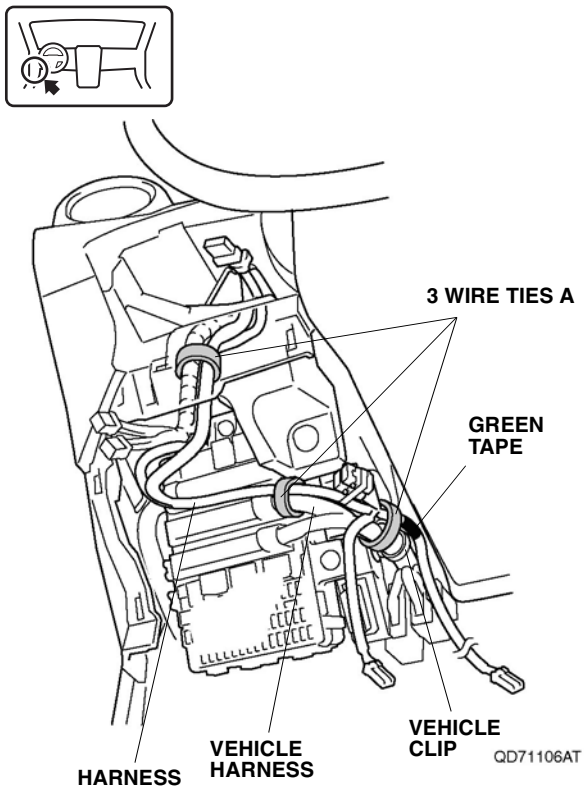

27. Secure the harness.

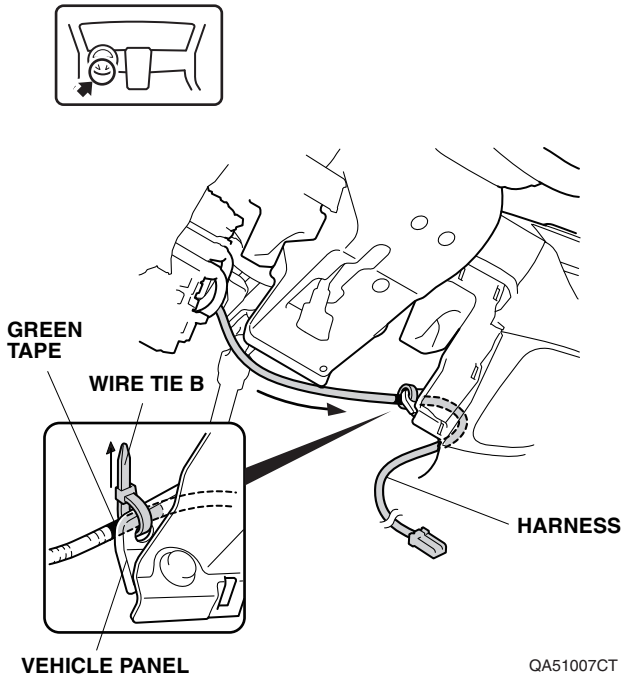

QA51007CT

28. Secure the harness.

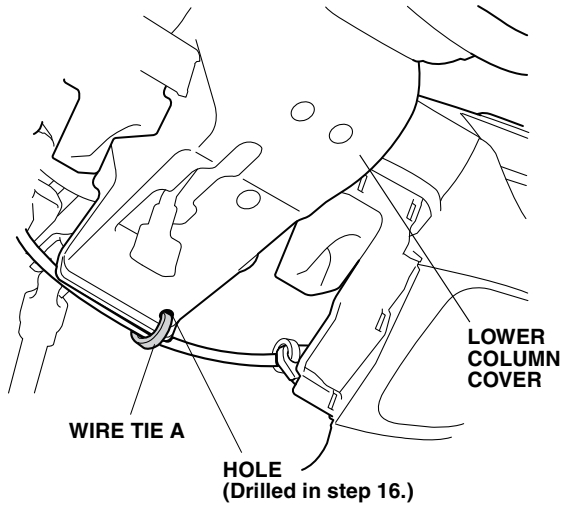

QA50919BT

29. Attach the steel wire.
30. Route the steel wire.

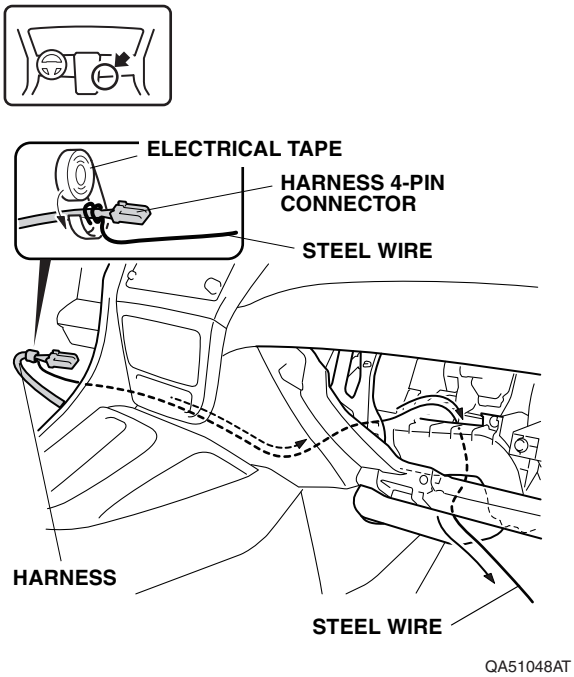

QA51048AT

31. Route the harness.
32. Remove the steel wire.

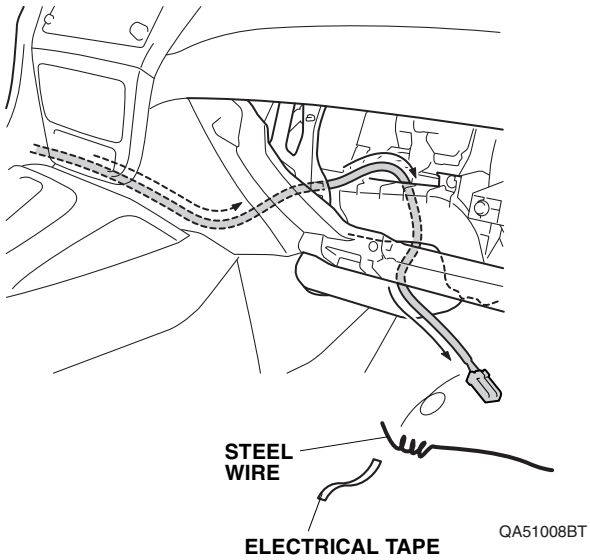

QA51008BT

33. Secure the harness.

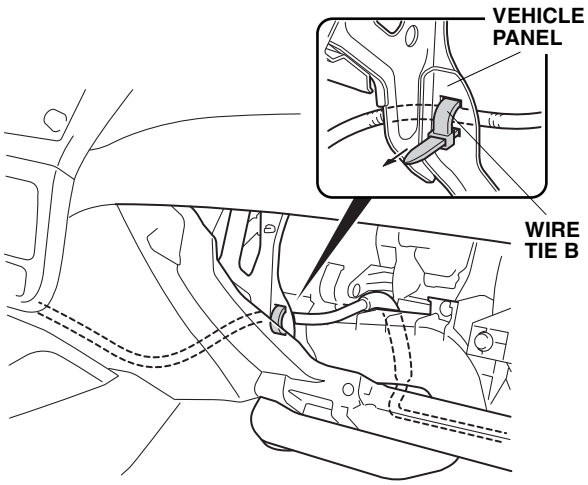

QA50918AT

34. Secure the harness.

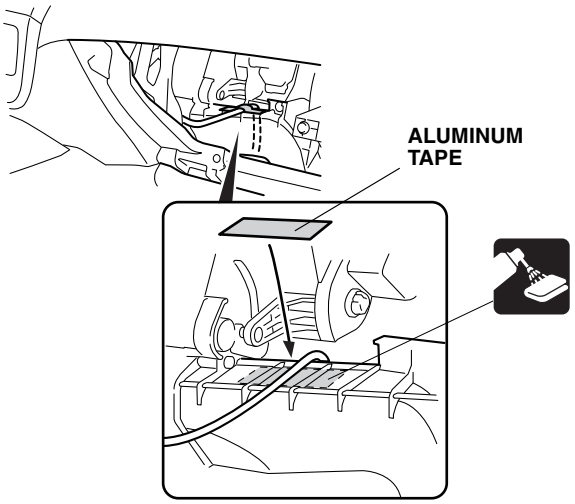

QA51049AT

35. Secure the harness.

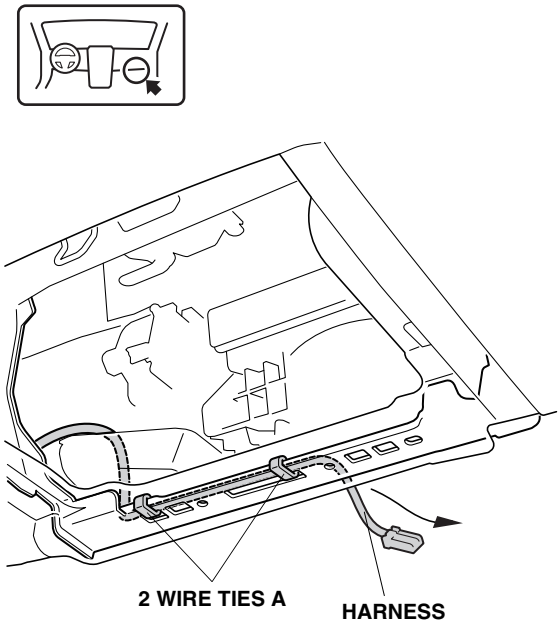

QA51009AT

Installing the Foot Lights (LHD)

36. Cut the driver's dashboard lower cover.

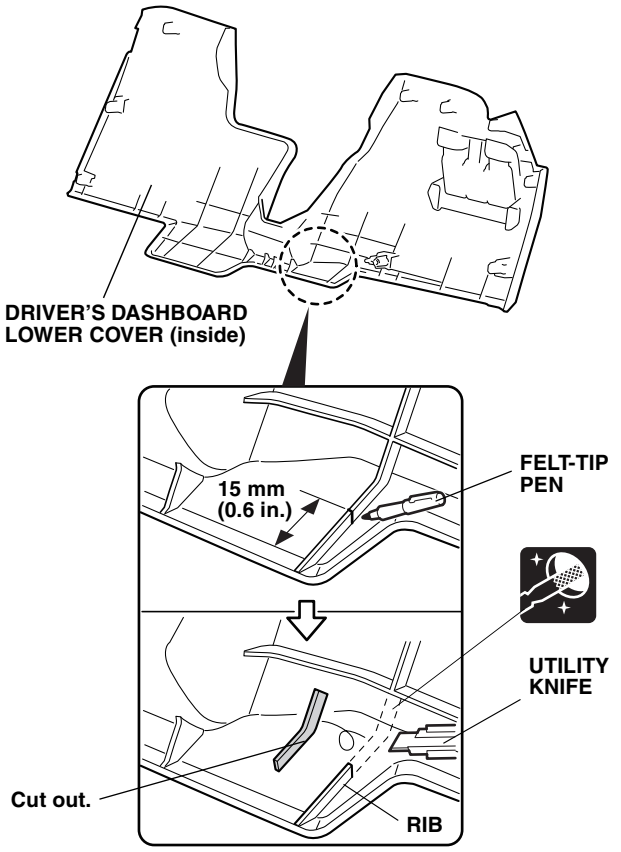

QA51010BT

37. Cut the template.
38. Attach the template (LH).

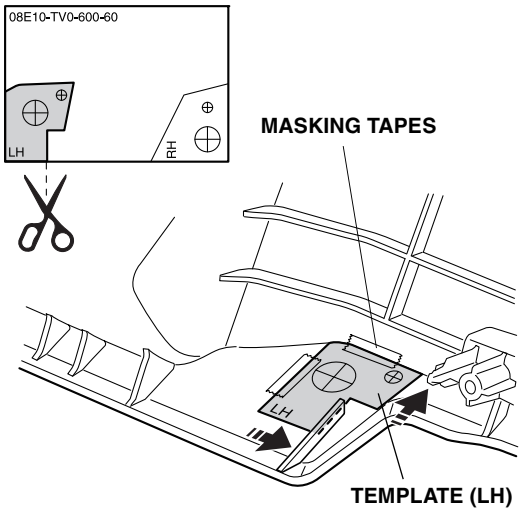

QA51011BT

39. Pierce the driver's dashboard lower cover.
40. Remove the template (LH).

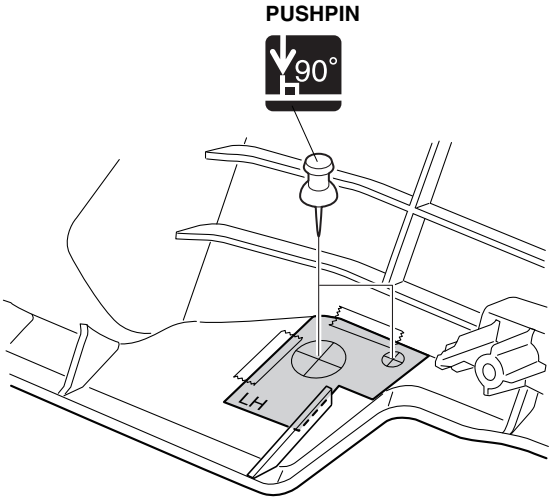

QA51012BT

41. Drill the driver's dashboard lower cover.

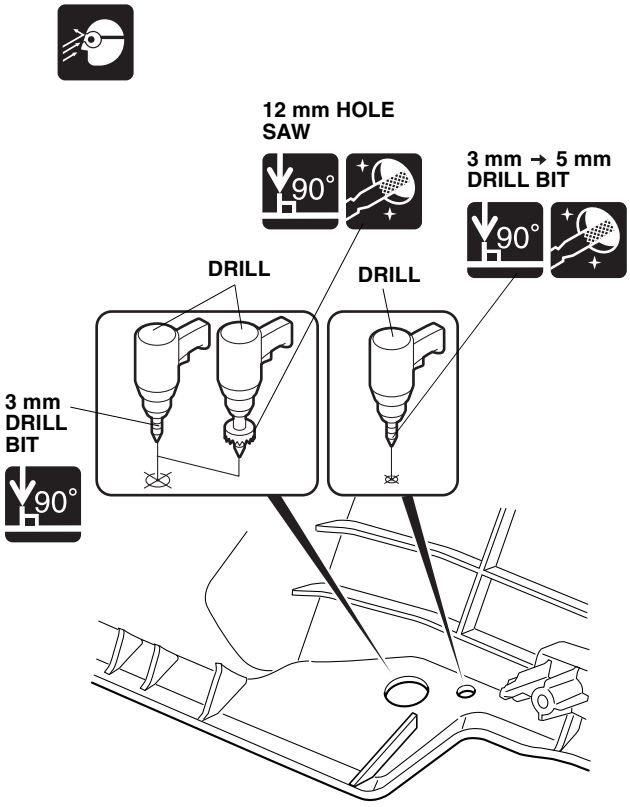

QA51013BT

42. Install the foot light.

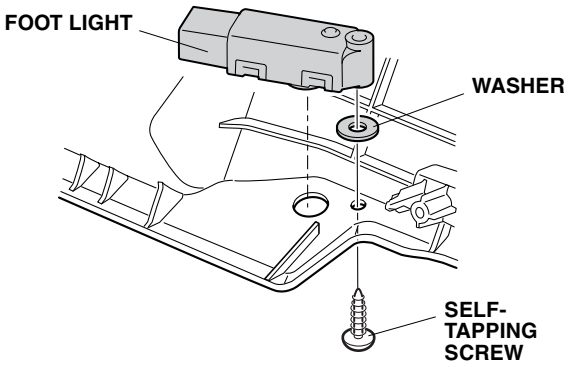

QA51015BT

43. Reinstall the subdisplay visor and driver's inner dashboard trim.
44. Connect the harness connector.
45. Reinstall the driver's dashboard lower cover.



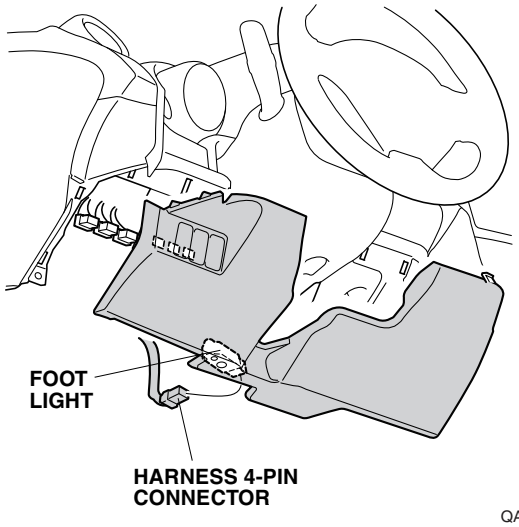

QA51016AT

46. Peel the insulator.
47. Pierce the passenger's under cover.

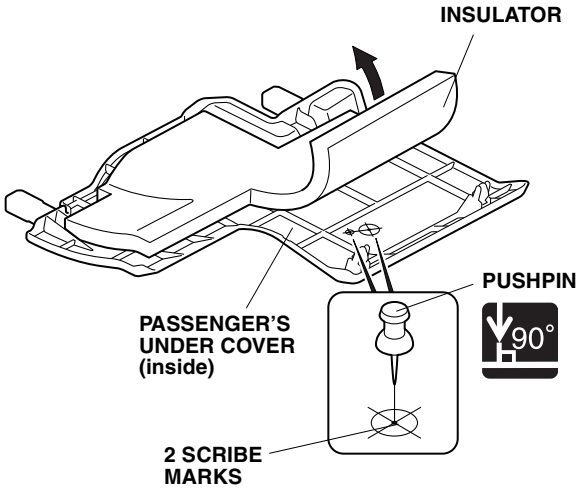

QA51017AT

48. Drill the passenger's under cover.

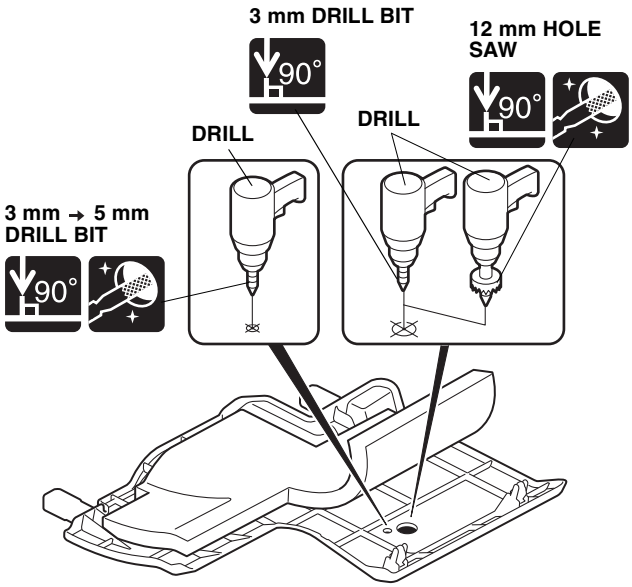

QA51018AT

49. Install the foot light.

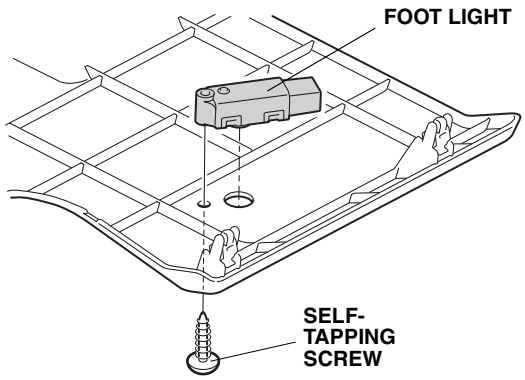

QA51019AT

50. Cut the insulator.

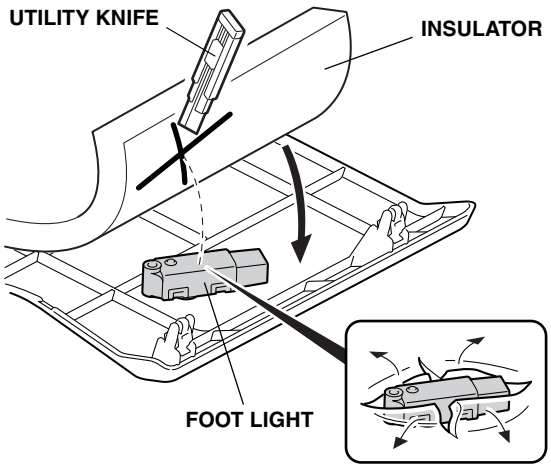

QA51045AT

51. Connect the harness connector.
52. Reinstall the passenger's under cover.

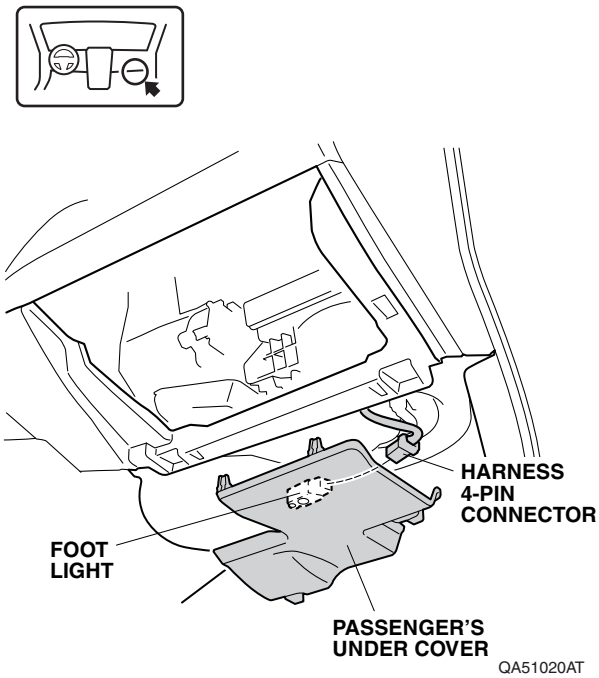

To step 99

Removing the Vehicle Parts (RHD)

<RHD models>

53. Remove the passenger's under cover.

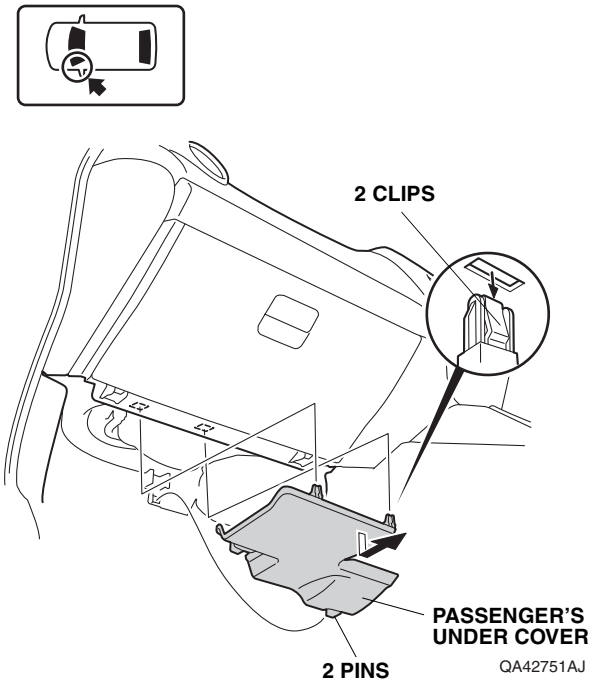

54. Remove the bolts.

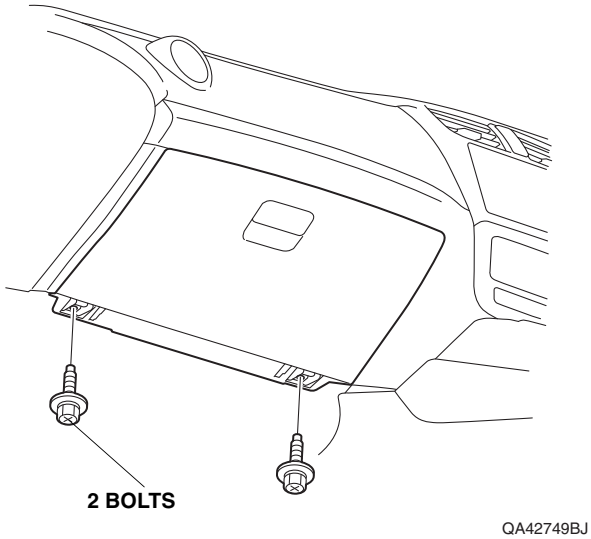

55. Remove the glove box.

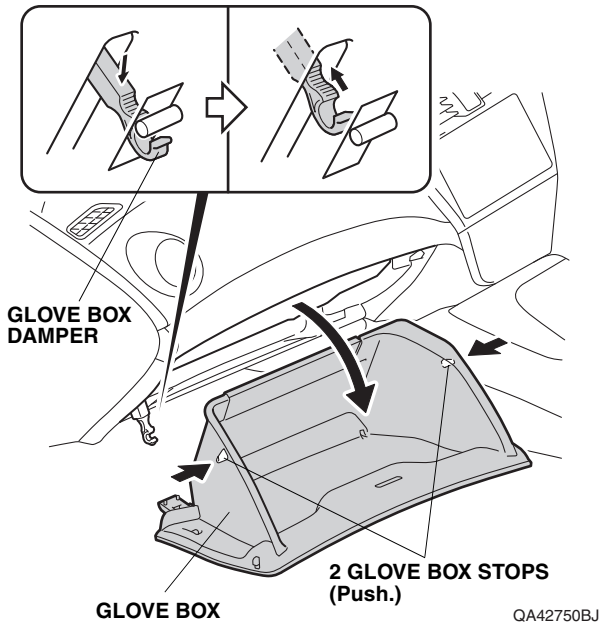

56. Remove the driver's outer dashboard trim.

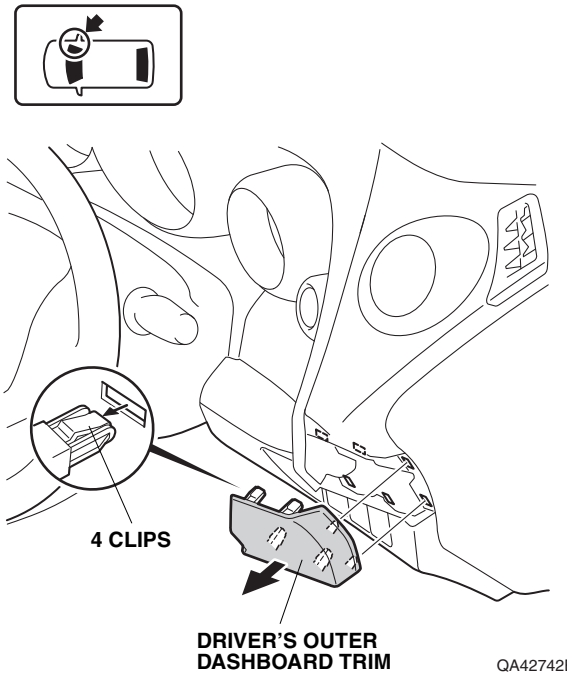

57. Remove the driver's dashboard lower cover.

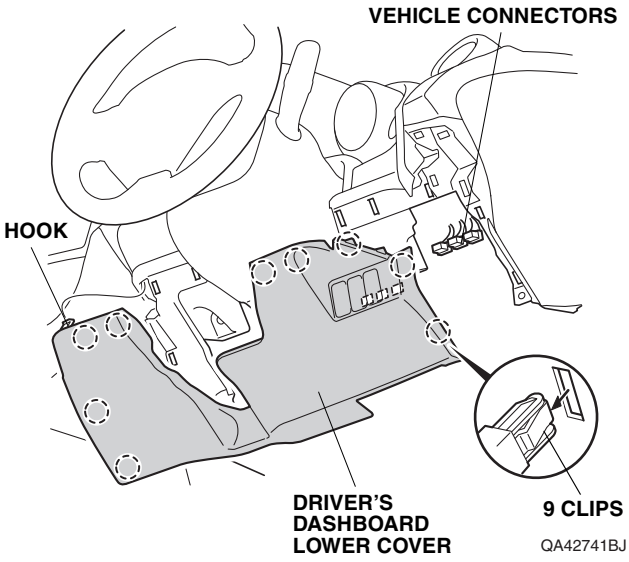

58. Attach the tapes to protect the vehicle.

NOTICE
• Do not remove the tapes until after the reinstallation.

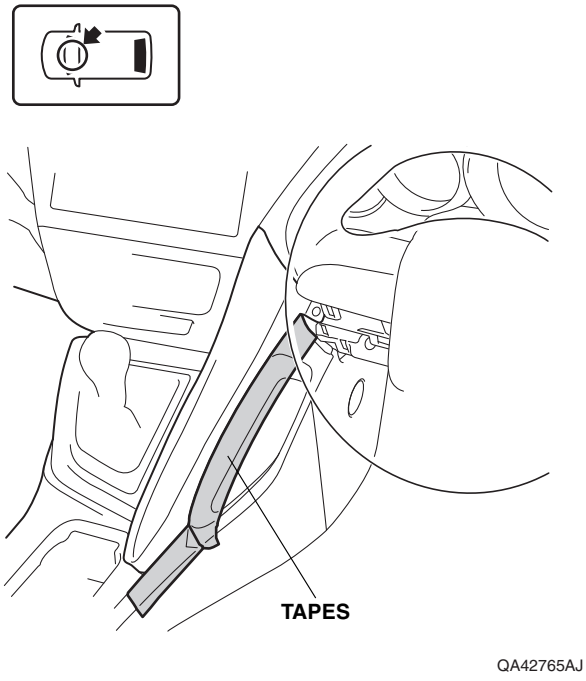

59. Remove the driver's inner dashboard trim.

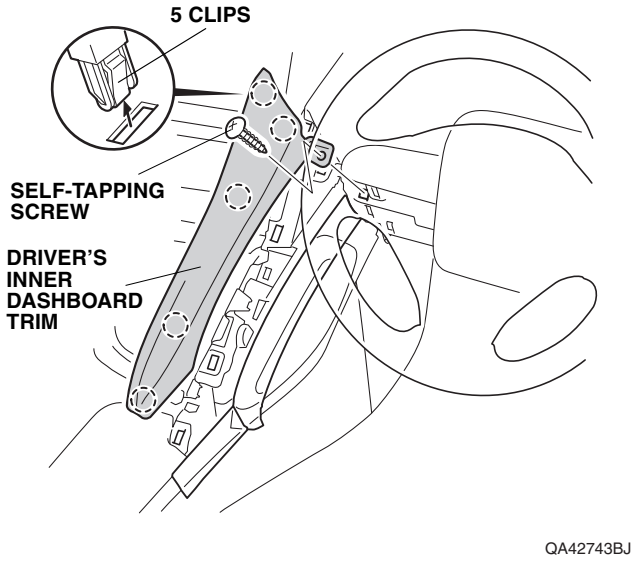

60. Remove the blind.

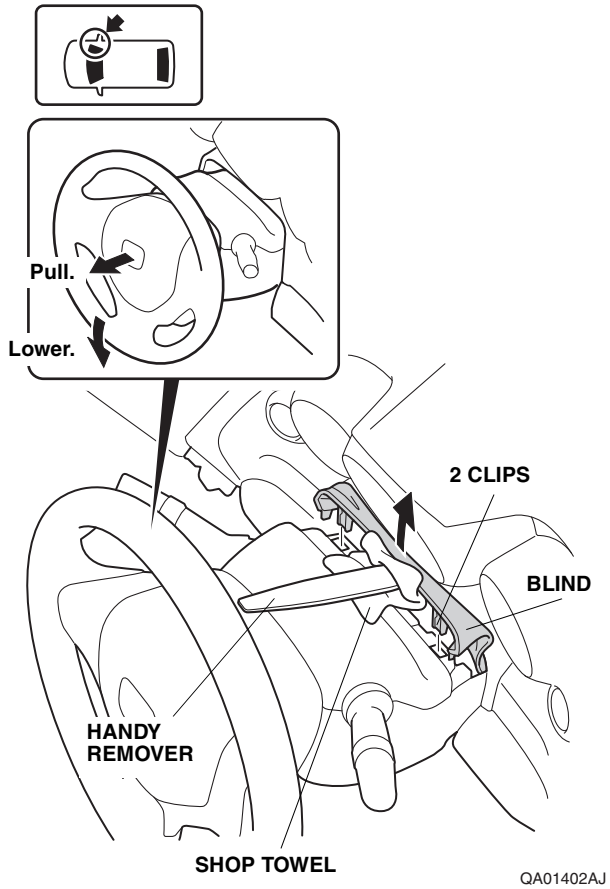

QA01402AJ

61. Remove the subdisplay visor.

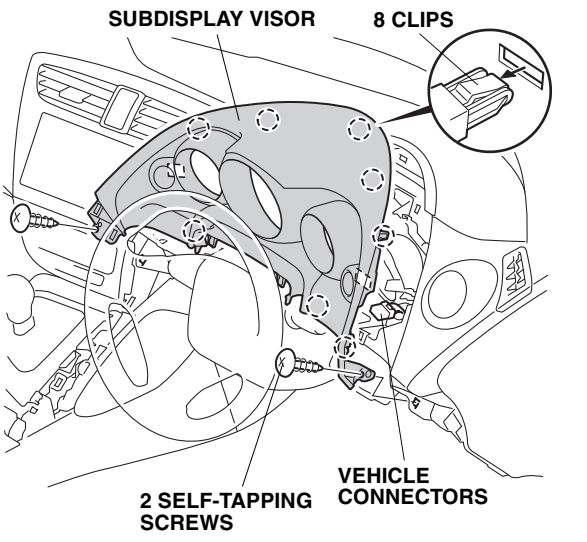

QA42744CJ

Routing the Harness (RHD)

62. Attach the fuse labels.

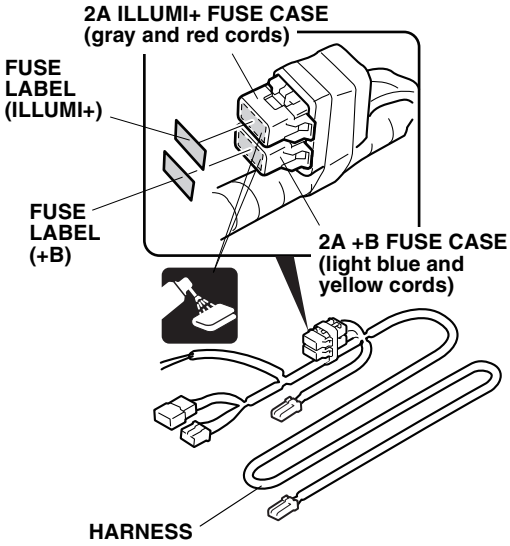

QA51002AT

63. Release the fuse box.

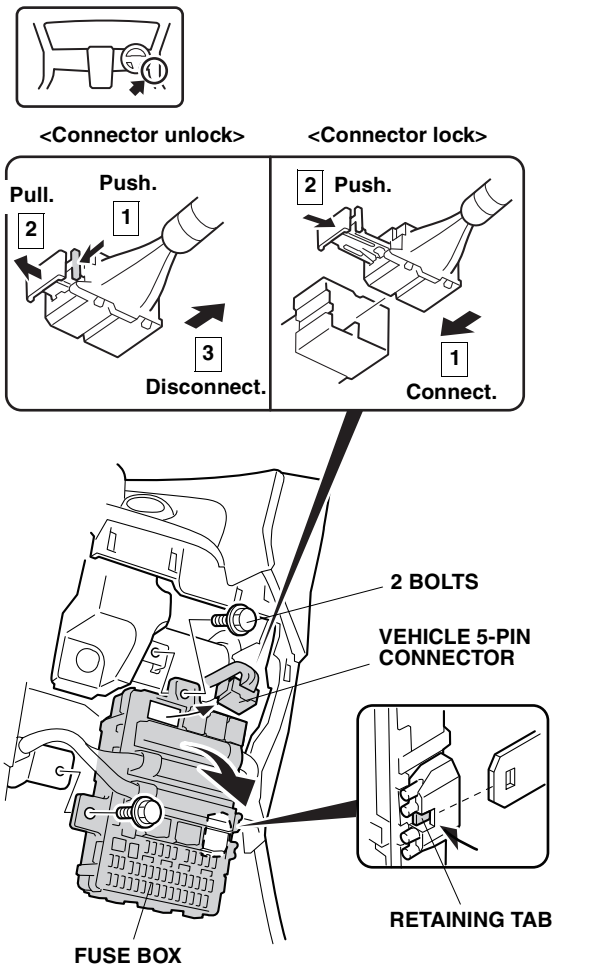

QA50948BT

64. Connect the harness connectors.
65. Reinstall the fuse box.

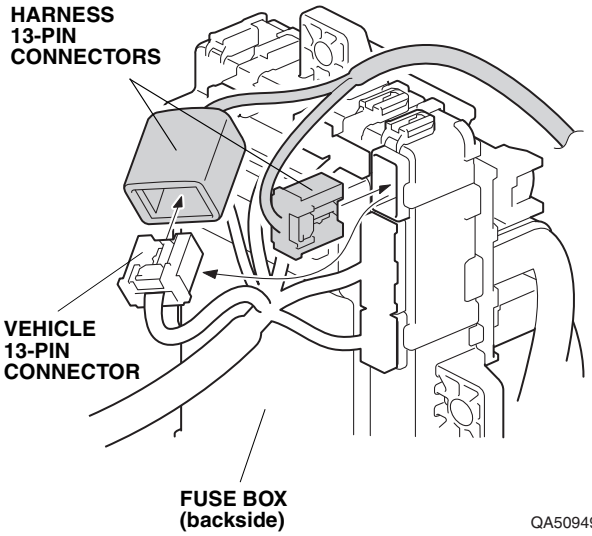

QA50949AT

66. Secure the harness.

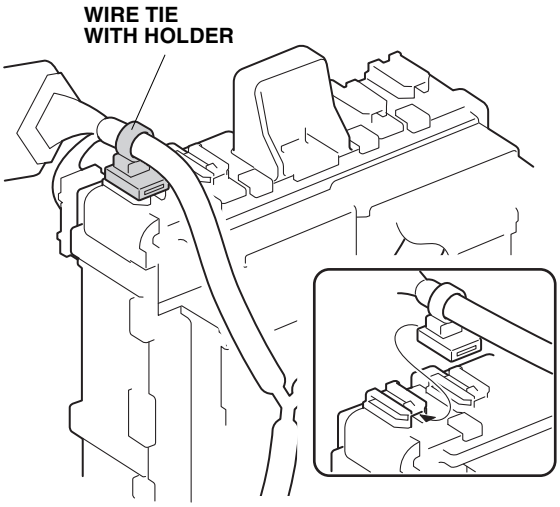

QA50601AK

67. Route the harness.

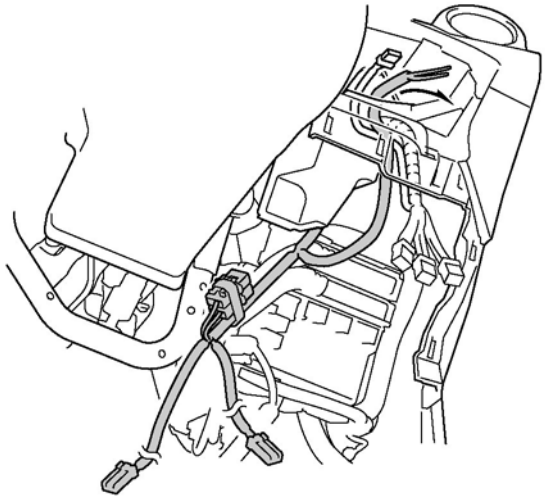
QD71107AT

68. Cut the tape.

NOTICE
• Do not damage the vehicle harness.



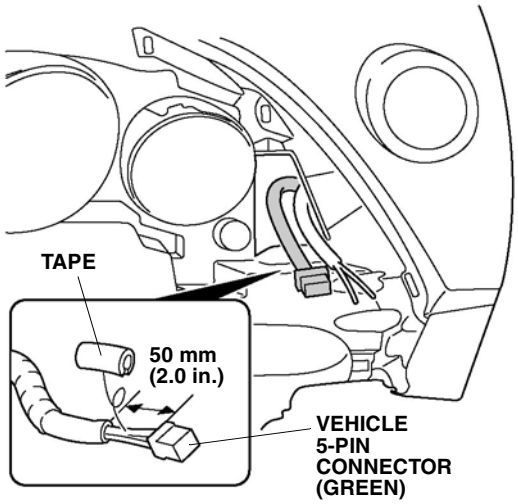

QD71108AT

69. Connect the harness cords.

NOTICE
• Make sure to correctly connect the cord.

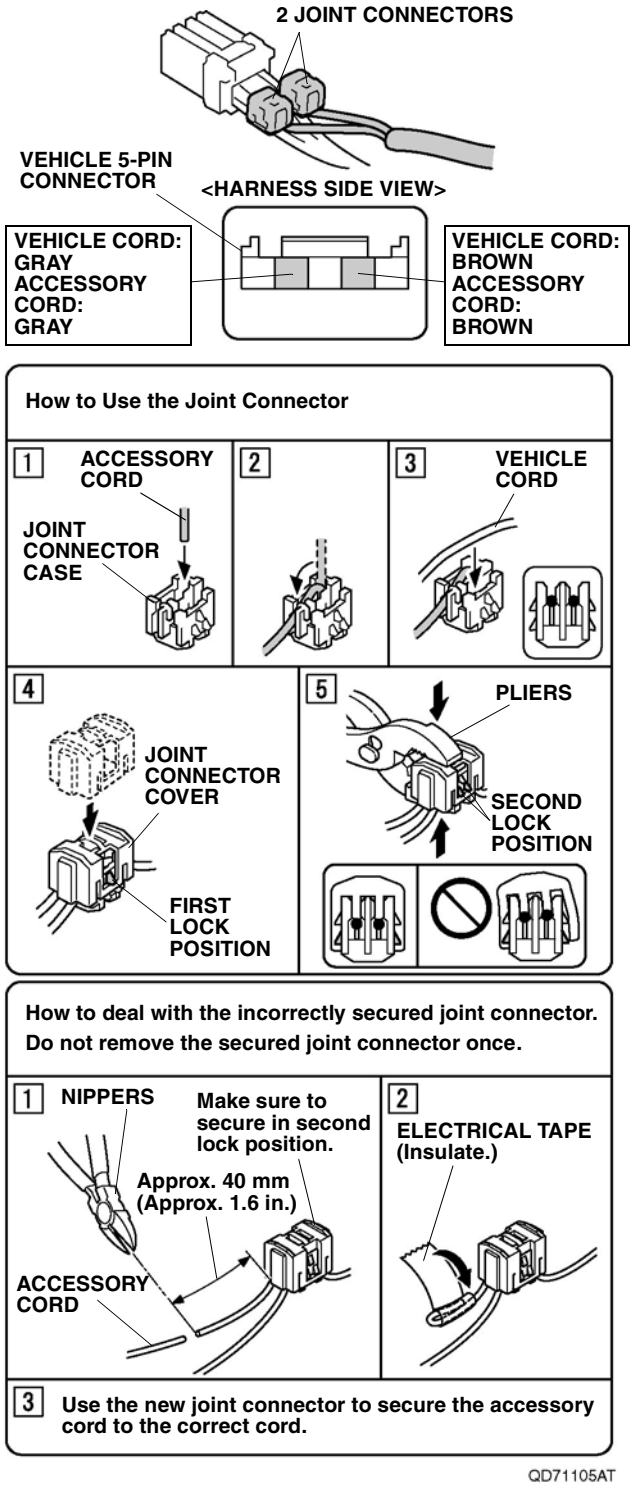

70. Wrap the urethane tape.
71. Secure the harness cords.

NOTICE
• Wrap the electrical tape around the tubes and tapes of the vehicle harness.

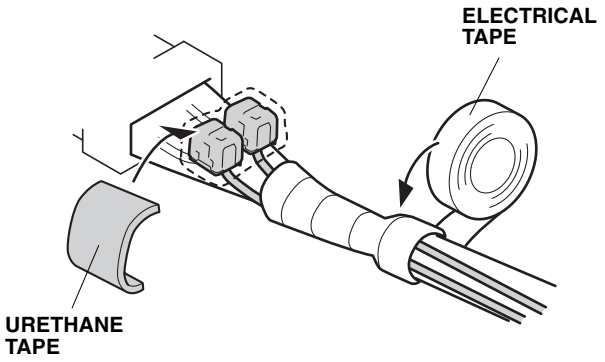

72. Secure the harness.



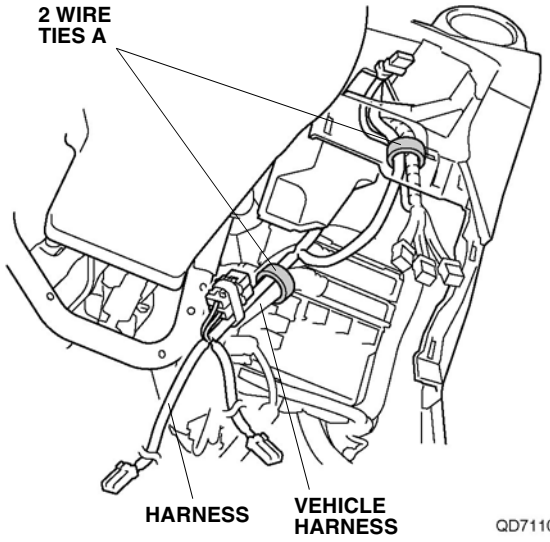

73. Attach the steel wire.
74. Route the steel wire.

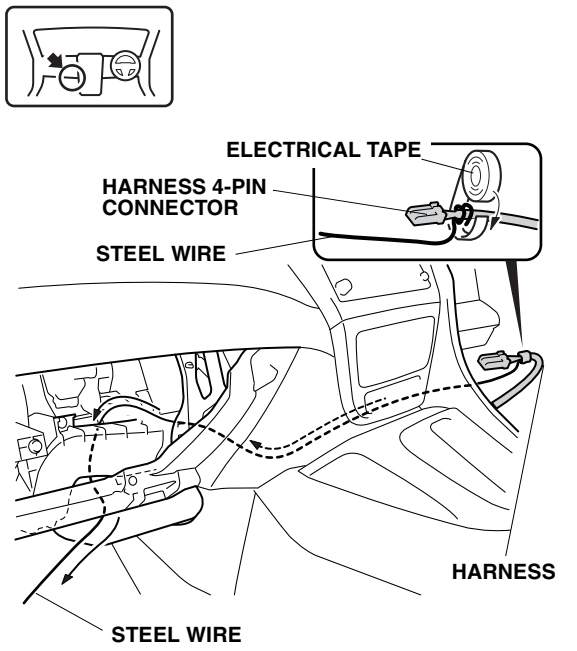

QA51051AT

75. Route the harness.
76. Remove the steel wire.

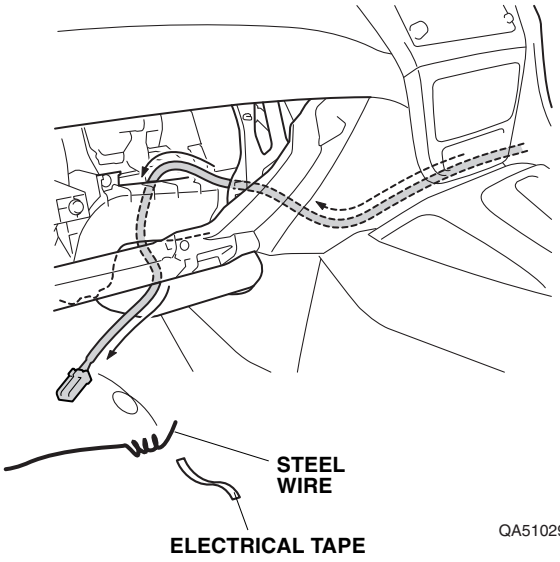

QA51029BT

77. Secure the harness.

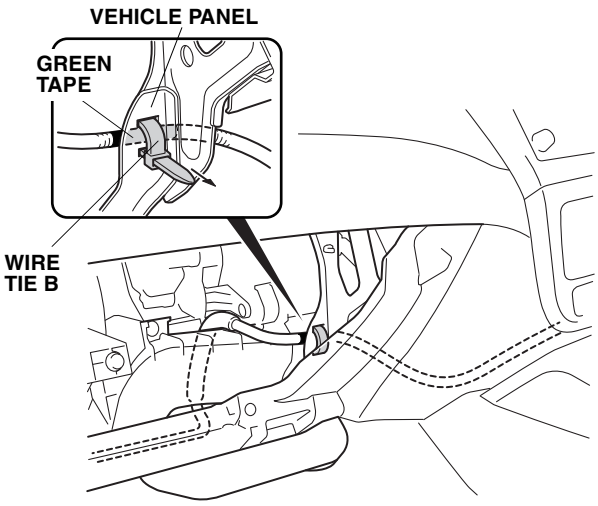

QA50956BT

78. Secure the harness.

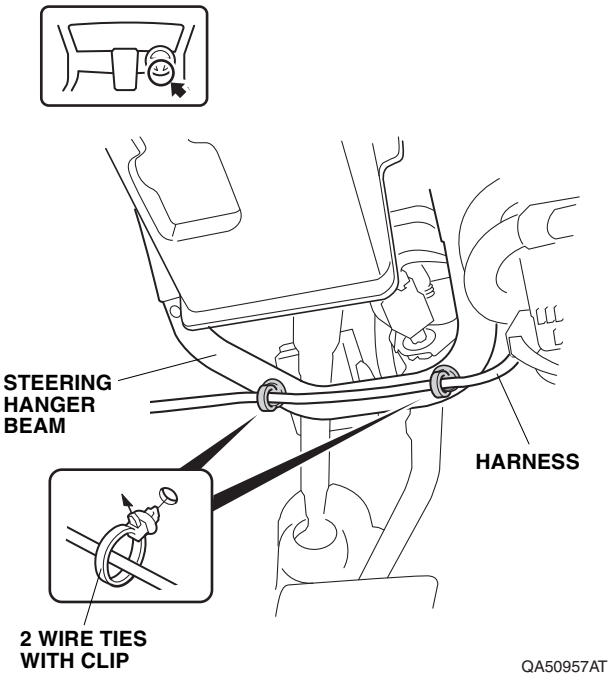

QA50957AT

79. Secure the harness.

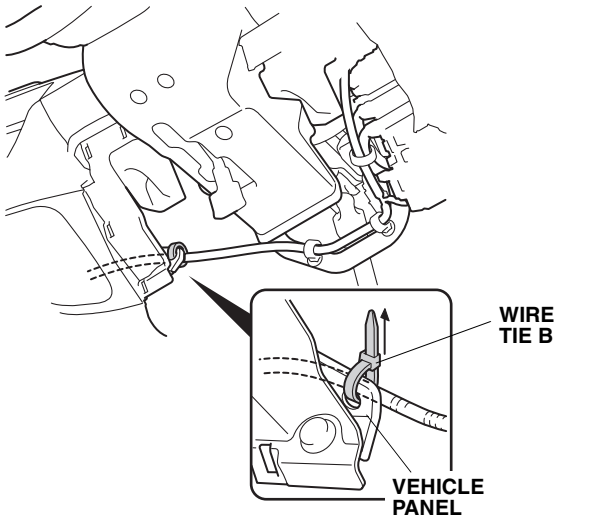

QA50959AT

80. Secure the harness.

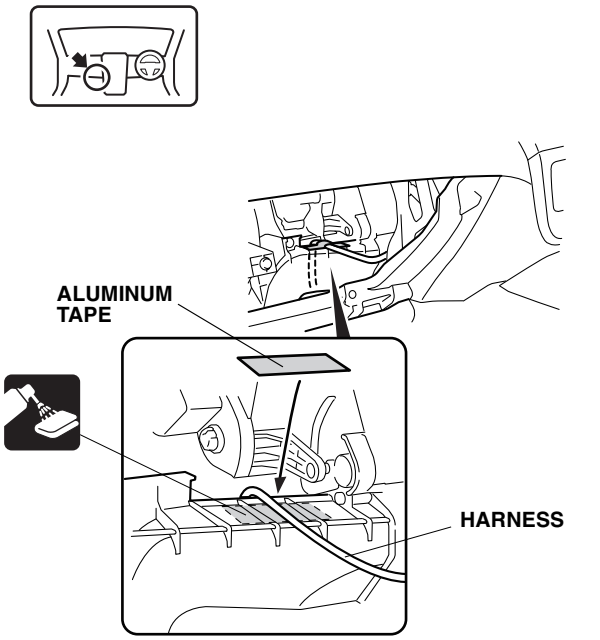

QA51052AT

81. Secure the harness.

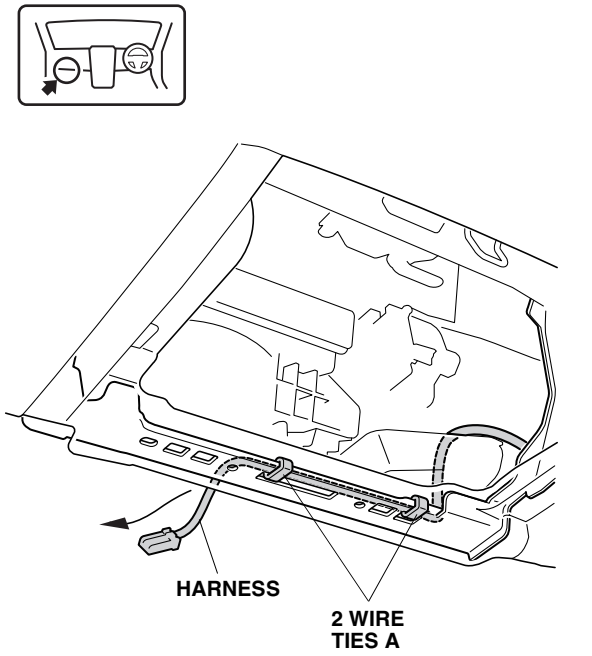

QA51030AT

Installing the Foot Lights (RHD)

82. Cut the template.
83. Attach the template (RH).

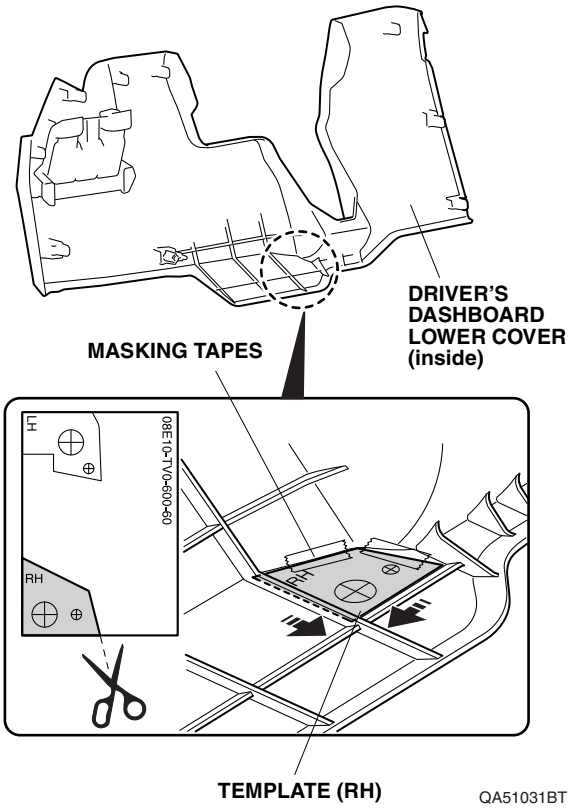

QA51031BT

84. Pierce the driver's dashboard lower cover.
85. Remove the template (RH).

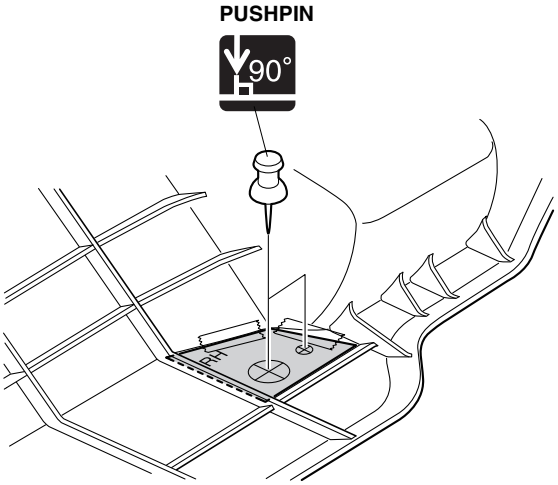

QA51032AT

86. Drill the driver's dashboard lower cover.

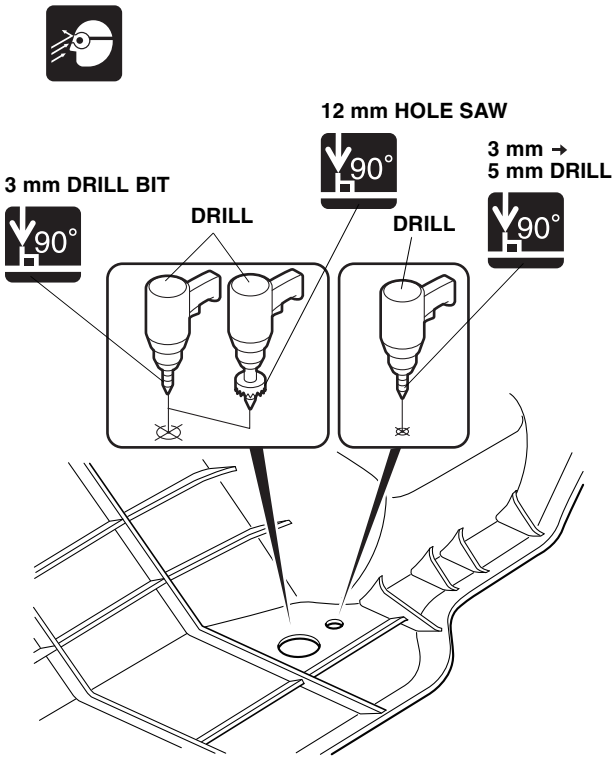

QA51033AT

87. Cut the driver's dashboard lower cover.

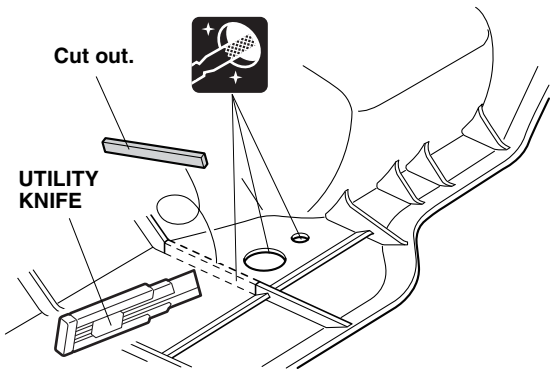

QA51034AT

88. Install the foot light.

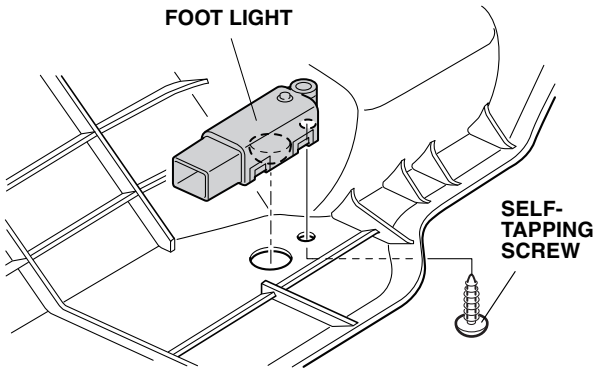

QA51035AT

89. Reinstall the subdisplay visor and driver's inner dashboard trim.
90. Connect the harness connector.
91. Reinstall the driver's dashboard lower cover.

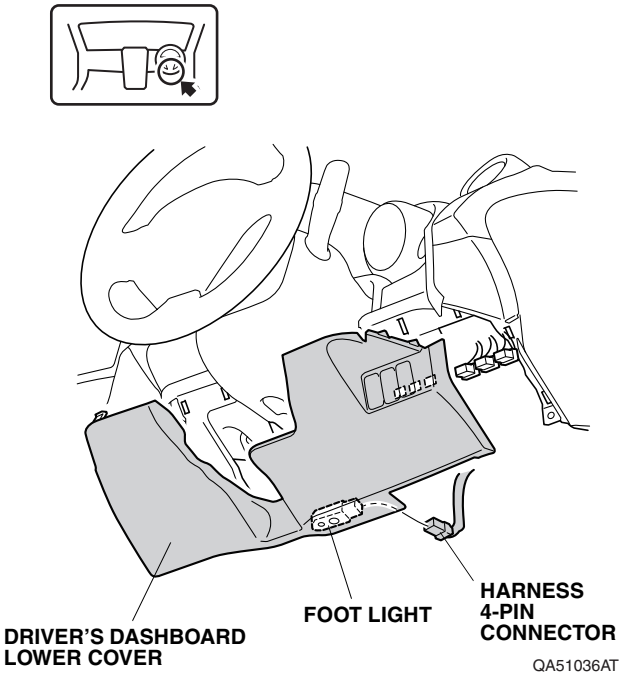

QA51036AT

92. Peel the insulator.
93. Pierce the passenger's under cover.

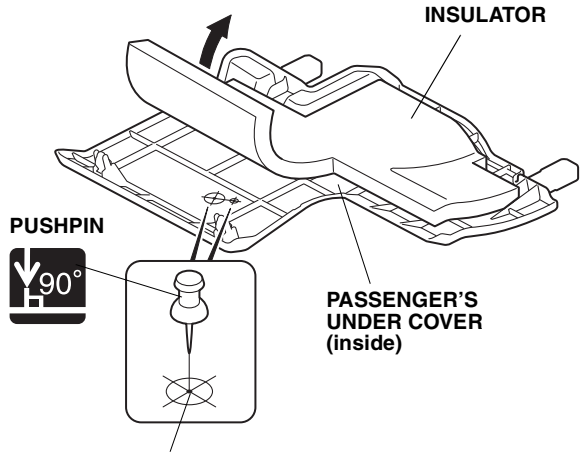

QA50604AK

94. Drill the passenger's under cover.

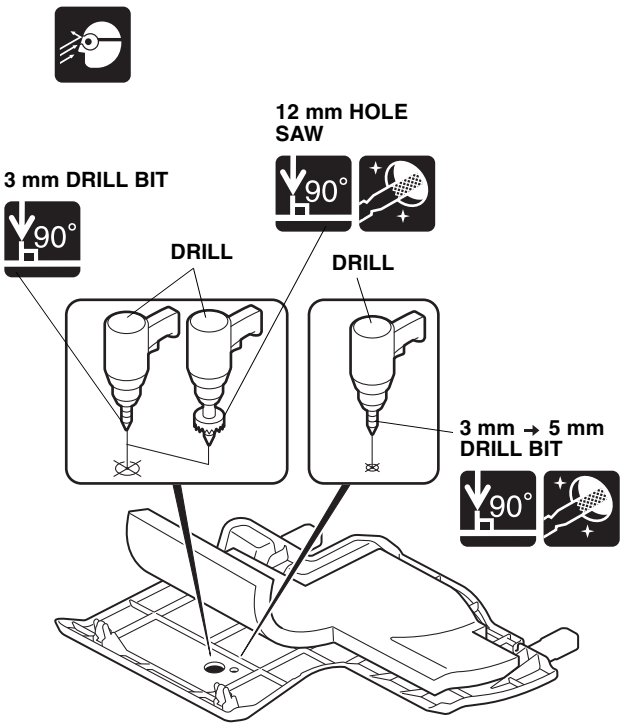

QA51041AT

95. Install the foot light.

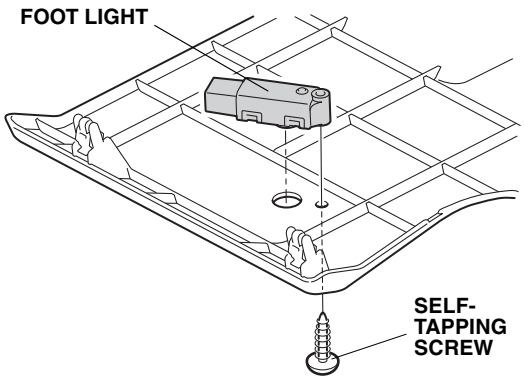

QA51037AT

96. Cut the insulator.

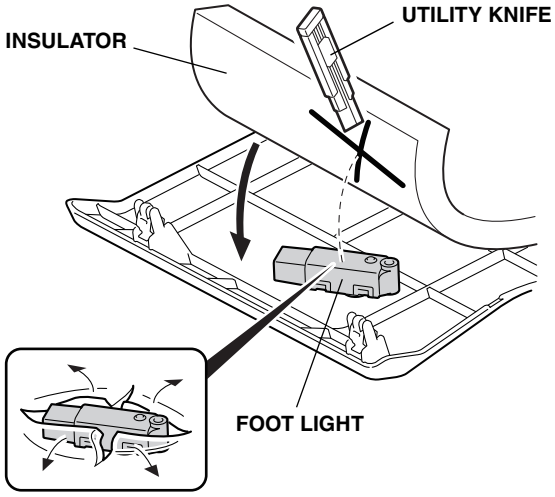

QA51046AT

97. Connect the harness connector.
98. Reinstall the passenger's under cover.

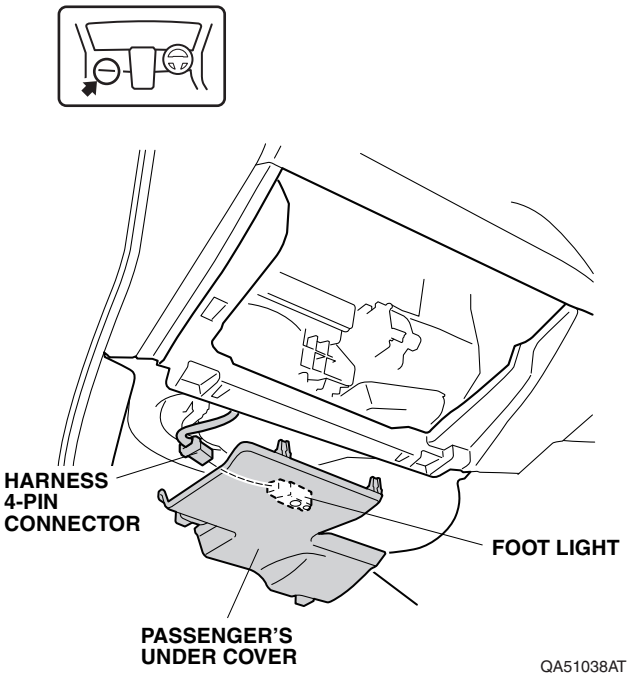

QA51038AT

Check After Installation

99. Check that all parts are routed and installed properly.

NOTICE
• Check that the harnesses are not pushed, not pulled and not pinched. • Check that all clamps and wire ties are installed securely.

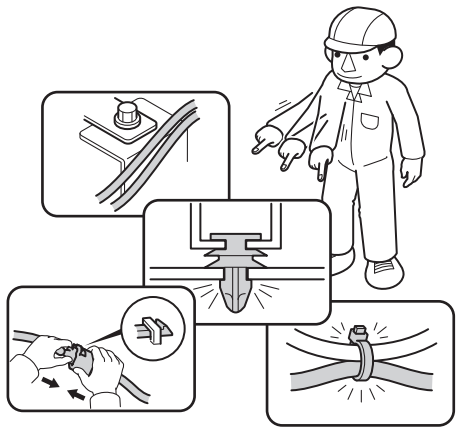

Q060706BM

Reinstalling the All Removed Parts

100. Reinstall all removed parts.

NOTICE
• Be extremely careful not to damage the vehicle parts, pinch the harnesses. • Make sure to secure the retaining tabs and clips properly to avoid separation.

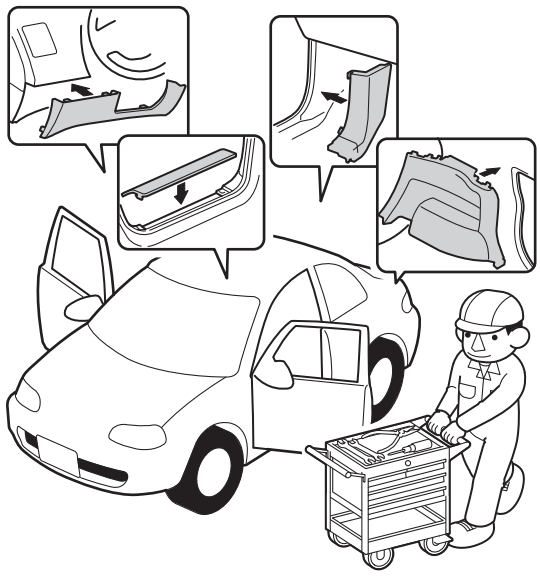

Q060703AM

Operation Check

101. Reconnect the negative cable to the battery.

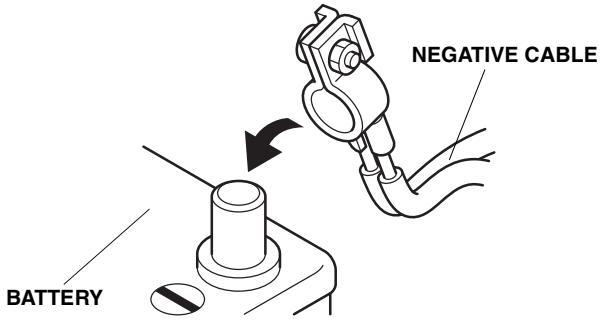

Q060702AM

102. Check that the foot light comes on by turning the light switch to the "≡D" or "≡D" position.

<For vehicle equipped with the automatic lighting control>

103. When the light switch is in the "AUTO" position, while the position lights and the headlights are on, the foot light is turned.

Vehicle Check

104. Check that the electric accessories and systems operate properly.
105. Press and hold the audio power button for two seconds, or enter anti-theft code for the audio/ navigation system.
106. Reset the memory of each equipment and restore the positions of those control knobs.

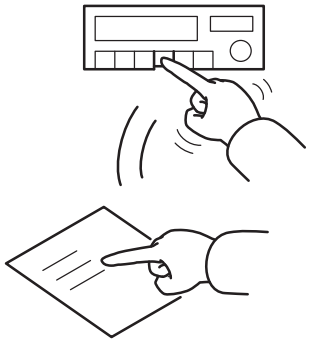

Q060704AM

Restoration Operations

NOTICE
• Restore the systems back to normal operation as described in the Shop Manual if necessary.

MAINTENANCE

Fuse Location

- For the location of the 2A fuse, refer to “GENERAL VIEW.”